



USER MANUAL

BeanDevice® **2.4GHz**

 *ProcessSensor*

BeanDevice® 2.4GHz

AN-V

Wireless IIOT Data Acquisition (DAQ)
voltage inputs ($\pm 5V$ or $\pm 10V$)



AN-420

Wireless IIOT Data Acquisition (DAQ)
4-20mA (current loop) inputs

AN-mV

Wireless IIOT Data Acquisition (DAQ)
low voltage inputs ($\pm 20mV$)
for load cell sensors



DOCUMENT

Document ID	UM_RF_05	Version	V3.3.1
External reference	UM_RF_05_ENG_BeanGateway	Date	04/06/2021
Author	Youssef SHAHINE, Technical Support Engineer		
		Project Code	
Document's name	BeanDevice® ProcessSensor 2.4GH User Guide		

VALIDATION

Function	Destination	For validation	For info
Writer	Aymen Jegham, Technical Support Engineer	✓	
Reader	Mohamed-Yosri Jaouadi.	✓	
Validation	Shimon Abadi, Technical Support Engineer		✓

DIFFUSION

Function	Destination	For action	For info
Reader n°1	Maxime Obr., Embedded software engineer	✓	
Reader n°2	Mohamed-Yosri Jaouadi., Embedded software engineer	✓	

UPDATES

Version	Date	Author	Evolution & Status
1.9	20/07/2012	Christophe Dontegreuil	<ul style="list-style-type: none"> BeanDevice® AN-XX Xtender added
2.0	25/06/2015	Maxime Obratzsov	<ul style="list-style-type: none"> TimeSync function added
2.1	21/03/2016	Rasha Friji	<ul style="list-style-type: none"> Standalone option Battery level display
2.2	21/04/2016	Rasha Friji	<ul style="list-style-type: none"> Antenna specifications updated Further description about sensor wiring code
2.3	22/12/2016	Salah Riahi	<ul style="list-style-type: none"> Exporting a log file to Excel video added
2.4	14/02/2018	Youssef SHAHINE	<ul style="list-style-type: none"> Ref to Xtender deleted 2.4GHz Logo added
2.5	01/08/2018	Aymen Jegham	<ul style="list-style-type: none"> Screenshots updated Vocabulary updated

UPDATES

2.6	29/04/2019	Youssef shahine	<ul style="list-style-type: none"> M8 Molded cable for external power supply added
2.6.1	29/04/2019	Mohamed Bechir Besbes	<ul style="list-style-type: none"> Weblinks update
2.7	24/06/2019	Mohamed Bechir Besbes	<ul style="list-style-type: none"> Examples of integration with analog sensors Calibrate the BeanDevice ProcessSensor Firewall Exception for BeanScape
2.8	03/04/2020	Achref CHAABENI	<ul style="list-style-type: none"> Update screenshots Add the feature clear(graph)
2.9	23/12/2020	Seddik ATTIG	<ul style="list-style-type: none"> New skin update Appendices update Add Tools tab options
3.0	30/12/2020	Seddik ATTIG	<ul style="list-style-type: none"> Update sensor specification and screenshots
3.1	08/03/2021	Seddik ATTIG	<ul style="list-style-type: none"> FTP Configuration
3.2	26/03/2021	Seddik ATTIG	<ul style="list-style-type: none"> Update battery saver power mode section
3.3	04/06/2021	Seddik ATTIG	<ul style="list-style-type: none"> Update devices specifications
3.3.1	15/11/2021	Seddik ATTIG	<ul style="list-style-type: none"> Links Updated

Disclaimer

The contents are confidential and any disclosure to persons other than the officers, employees, agents or subcontractors of the owner or licensee of this document, without the prior written consent of Beanair GmbH, is strictly prohibited.

Beanair makes every effort to ensure the quality of the information it makes available. Notwithstanding the foregoing, Beanair does not make any warranty as to the information contained herein, and does not accept any liability for any injury, loss or damage of any kind incurred by use of or reliance upon the information.

Beanair disclaims any and all responsibility for the application of the devices characterized in this document, and notes that the application of the device must comply with the safety standards of the applicable country, and where applicable, with the relevant wiring rules.

Beanair reserves the right to make modifications, additions and deletions to this document due to typographical errors, inaccurate information, or improvements to programs and/or equipment at any time and without notice.

Such changes will, nevertheless be incorporated into new editions of this document.

Copyright: Transmittal, reproduction, dissemination and/or editing of this document as well as utilization of its contents and communication thereof to others without express authorization are prohibited. Offenders will be held liable for payment of damages. All rights are reserved.

Copyright © Beanair GmbH 2021



Contents

- 1. TECHNICAL SUPPORT 14
- 2. VISUAL SYMBOLS DEFINITION 15
- 3. ACRONYMS AND ABBREVIATIONS..... 16
- 4. DOCUMENT ORGANISATION 17
- 5. BEANDEVICE® PRODUCT OVERVIEW 18
 - 5.1 Introduction to ProcessSensor product lines 18
 - 5.2 BeanDevice® Technical specifications..... 19
 - 5.2.1 Common technical specifications..... 19
 - 5.2.3 BeanDevice AN-V..... 25
 - 5.2.4 BeanDevice® AN-mV..... 27
 - 5.3 Product focus 29
 - 5.4 Leds description 31
 - 5.5 RF Antenna 31
 - 5.5.1 Antenna diversity 31
 - 5.5.2 Antenna specifications 32
 - 5.6 Sensor Interface 33
 - 5.6.1 How to connect a sensor on your BeanDevice®?..... 33
 - 5.6.2 Sensor power supply 35
 - 5.6.3 Sensor wiring code (General overview)..... 37
 - 5.6.4 Sensor wiring code (BeanDevice® AN-420)..... 39
 - 5.6.5 Sensor wiring code (BeanDevice® AN-V & AN-mV)..... 41
 - 5.6.6 Examples of integration with analog sensors..... 42
 - 5.7 Mechanical drawing 47
 - 5.8 Lithium-ion Rechargeable battery..... 48
 - 5.9 AC-To-DC power adapter 48
 - 5.10 External Power supply wiring code 49
- 6. DATA ACQUISITION MODE DESCRIPTION..... 51
- 7. BEANDEVICE® PROCESSENSOR INSTALLATION GUIDELINES 52
 - 7.1 Power Mode Management 52

- 7.2 BeanDevice® Network Association 52
- 7.3 Datalogger function..... 52
- 7.4 OTAC (Over-the-air-Configuration) process 52
- 7.5 Factory settings 53
- 7.6 Starting the BeanScape® 55
- 7.7 Displaying the BeanDevice® Informations 56
 - 7.7.1 Frame: Identity 56
 - 7.7.2 Frame: Wireless Network Diagnostic 57
 - 7.7.3 Frame: Power supply diagnostic 57
 - 7.7.4 Frame: System 59
 - 7.7.5 Frame: BeanDevice® 59
 - 7.7.6 Frame: Product Version 60
 - 7.7.7 Frame: Actual Data Acquisition mode 60
 - 7.7.8 Frame: DAQ Info 60
- 7.8 BeanDevice® Configuration..... 61
 - 7.8.1 Tab: Custom Display 62
 - 7.8.2 Tab: Notes..... 63
 - 7.8.3 Tab: Data Acquisition configuration 64
 - 7.8.4 Tab: DAQ Config 67
 - 7.8.5 Tab: Datalogger 67
 - 7.8.6 Tab: System Config. 69
 - 7.8.7 Tab: Power mode management 69
 - 7.8.8 Right click functionalities..... 70
- 7.9 Sensors configuration..... 71
 - 7.9.1 Sensor profile..... 72
 - 7.9.2 Sensor configuration & calibration..... 73
 - 7.9.3 Calibrate the BeanDevice ProcessSensor 75
 - 7.9.4 Graphical display 81
- 7.10 Datalogger configuration 84
- 7.11 Log file organization 85
 - 7.11.1 Log File System Overview 85
 - 7.11.2 Log file directory 85
 - 7.11.3 Log file size configuration 88
 - 7.11.4 Log file generation 88
 - 7.11.5 Cache Data Configuration (for Graph)..... 90
 - 7.11.6 Log file related to data acquisition 91
 - 7.11.7 Log file organization in " Streaming" mode 94
- 8. ALARM MANAGEMENT 99
 - 8.1 Email Config..... 99
 - 8.2 DAQ Alarm..... 101

- 8.3 Alarm DAQ Mode 102
- 8.4 System Alarm 102
- 8.5 File Format 104
- 8.1 Crash Report..... 104

- 9. TOOLS TAB 105
 - 9.1 BeanScope® Configuration 105
 - 9.1.1 Log file configuration..... 105
 - 9.1.2 Keep Alive App..... 106
 - 9.1.3 BeanGateway® Configuration via TCP/UDP 106
 - 9.1.4 System Configuration 107
 - 9.1.5 Data cache configuration..... 107
 - 9.1.6 Data Logger configuration 108
 - 9.1.7 Startup 108
 - 9.1.8 Date & Time format..... 109
 - 9.1.9 Language..... 109
 - 9.2 Alarm Window..... 110
 - 9.3 Import/Export User settings..... 111
 - 9.3.1 Custom User Configuration 111
 - 9.3.2 BeanScope® Configuration 113
 - 9.4 Notification Management 115
 - 9.5 Offline Graph 115
 - 9.6 Date Conversion 118
 - 9.7 Advanced settings 121
 - 9.7.1 Firewall 122
 - 9.7.2 SQL Server Report..... 122
 - 9.7.3 MATLAB Function 123
 - 9.8 BeanScope® Client management 123
 - 9.9 FTP Configuration 124

- 10. VIEW TAB 129
 - 10.1 Standard View 129
 - 10.2 Expert View 130
 - 10.2.1 Data Acquisition configuration 131
 - 10.2.2 Tools tab 133
 - 10.2.3 Advanced Functions 136

- 11. BEANDEVICE® MAINTENANCE & SUPERVISION (FOR EXPERIENCED USER) 138
 - 11.1 How to optimize the battery autonomy on your BeanDevice® 138
 - 11.2 Over-the-air Configuration (OTAC) parameters backed up on Flash 139
 - 11.2.1 Level 1: End-user OTAC parameters 140

- 11.2.2 Level 2: Sensor calibration parameters 141
- 11.2.3 Level 3: Network maintenance (only for expert in wireless sensor networks)..... 141
- 11.2.4 Level 4: Primary cell/Rechargeable battery calibration 142
- 11.3 Network diagnostic from your BeanScope® software 142
 - 11.3.1 Displaying Network information 142
 - 11.3.2 Scrolling menu « BeanSensor » 145
- 12. TROUBLESHOOTING 148
- 13. INSTALLATION PROCEDURES..... 149
 - 13.1 Sealing 149
 - 13.2 Coexistence With OTHER Frequencies at 2.4 GHz 149
 - 13.3 Temperature & Humidity 149
 - 13.4 Reflections, Obstructions and Multipath 149
 - 13.5 shock & Vibration resistance..... 150
 - 13.6 Antenna 150
- 14. APPENDIX..... 151
 - 14.1 Firewall exception for BeanScope® 151

List of Tables

Table 1: RF specifications Table.....	19
Table 2: Embedded Data Logger Table.....	19
Table 3: TimeSync function Table.....	19
Table 4: Environmental and Mechanical Table	20
Table 5: Power Supply specifications table	20
Table 6: BeanDevice® options table specifications	22
Table 7: BeanDevice® AN-420 - Analog data acquisition table	23
Table 8: BeanDevice® AN-mV - Analog data acquisition table.....	25
Table 9: BeanDevice® AN-V - Analog data acquisition table	27
Table 10 : Antenna specifications.....	32
Table 11: External sensor power supply specifications.....	35
Table 12: Wiring code table for molded M8 cable	50
Table 13: Factory settings.....	53

List of Figures

Figure 1: Focus on BeanDevice® AN-V/AN-mV/AN-420.....	29
Figure 2: Antenna Diversity present on the BeanDevice® AN-420/AN-V/AN-mV.....	31
Figure 3: Sensor connection on the BeanDevice®	34
Figure 4: Sensor warm-up time	36
Figure 5: M12 socket location the BeanDevice®	37
Figure 6: M12 Socket - positioning notch.....	38
Figure 7: M12 socket Pin assignation	38
Figure 8 : M12 socket Wiring Code (BeanDevice® side).....	39
Figure 9: M12-4pins Plug Wiring code (sensor side)	40
Figure 10: Wiring code (sensor side) – Analog unipolar.....	41
Figure 11: Wiring code (sensor side) – Analog bipolar	41
Figure 12: Strain Gage system	42
Figure 13: Potentiometer sensor.....	42
Figure 14: LVDT sensor integrated with M12-4Pins Plug	43
Figure 15: LVDT sensor mounted on the BeanDevice® AN-420	43
Figure 16: DAQ Config tab	43
Figure 17: Conversion Assistant	44
Figure 18: Load strain transducer combines with the BeanDevice AN-mV	44
Figure 19: BeanDevice® Dashboard.....	45
Figure 20: Sensor Config section	46
Figure 21: Mechanical Drawing	47
Figure 22 : External power supply M8-3Pin Socket - BeanDevice® side	49
Figure 23 : External power supply wiring code (M8-3Pin Plug side)	49
Figure 24: BeanDevice® profile.....	55
Figure 25: BeanDevice® dashboard	56
Figure 26: BeanDevice® Identity.....	56
Figure 27: BeanDevice® network link status	57
Figure 28: BeanDevice® power supply information	57
Figure 29: BeanDevice® power modes	58
Figure 30: BeanDevice® Diagnostic cycle information	59
Figure 31: Frame BeanDevice® on BeanScope®	59
Figure 32: BeanDevice® Product version frame	60
Figure 33: Current data acquisition mode.....	60
Figure 34: Sensor Info frame	61
Figure 35: BeanDevice® configuration frame	61
Figure 36: BeanDevice® custom display tab.....	62
Figure 37: Tab : Notes.....	64
Figure 38: Current data acquisition mode display.....	66
Figure 39: DAQ config tab.....	67
Figure 40: Data logger tab	67
Figure 41: System Configuration Tab	69
Figure 42 : Power mode management	70
Figure 43: Right Click on BeanDevice® Profile	71
Figure 44: Sensor channel profile.....	71
Figure 45: Sensor Channel General information frame.....	72
Figure 46: Measurement data frame	72

Figure 47: Hi-Inc sensor channel custom display tab 73

Figure 48: Unit Conversion Assistant..... 74

Figure 49: Sensor channel notes tab 75

Figure 50: Polarity config..... 77

Figure 51: DAQ configuration tab..... 77

Figure 52: Current Data measurement frame 77

Figure 53: Sensor calibration 78

Figure 54: Alarm level config tab 78

Figure 55: DAQ Calibration tab..... 79

Figure 56: Log configuration tab..... 80

Figure 57: Channel acquisition graph visualization 81

Figure 58: Graph visualization 82

Figure 59: Graph measure mode: Frame Marks..... 83

Figure 60: BeanDevice® Datalogger tab 84

Figure 61: BeanScape® configuration menu..... 86

Figure 62: BeanScape® configuration window 86

Figure 63: BeanDevice® Custom Display tab 87

Figure 64: BeanDevice® custom display settings 87

Figure 65: Logfile settings..... 88

Figure 66: Log file generation options..... 89

Figure 67: Example of Log file..... 89

Figure 68: Data cache configuration options 90

Figure 69: Log Config tab on BeanScape® 91

Figure 70: Log config tab 91

Figure 71: log file parts 92

Figure 72: Log file example (Streaming mode)..... 93

Figure 73: Wireless Network Info log file 95

Figure 74: Wireless Network Info log file during streaming mode 95

Figure 75: Calibration log file..... 98

Figure 76: Alarm management menu..... 99

Figure 77: Alarm management window 100

Figure 78: Frame: Email alarm for S.E.T mode 101

Figure 79: Frame: Sound config..... 101

Figure 80: Email alarm for Alarm mode..... 102

Figure 81: Alarm Mailing SMTP Test..... 102

Figure 82: BeanDevice® Health Status management 102

Figure 83: System Alarm Settings 103

Figure 84: Enable/Disable Notif/mail for Diagnostic and Datalogger 103

Figure 85: File Format settings 104

Figure 86: Alarm Note settings..... 104

Figure 87: Crash Report settings 104

Figure 88: Tools tab main menu 105

Figure 89: Log file configuration..... 105

Figure 90: Keep Alive app 106

Figure 91: TCP/UDP configuration..... 106

Figure 92: System Config 107

Figure 93: Data Cache configuration 107

Figure 94: Data logger configuration 108

Figure 95: BeanScape® startup..... 108

Figure 96: Date & time settings 109

Figure 97: BeanScape® language109

Figure 98: Alarm Window110

Figure 99: Alarm window display110

Figure 100: Import/Export feature111

Figure 101: Custom user configuration section.....111

Figure 102: user export settings112

Figure 103: Custom_DB example112

Figure 104: Custom user configuration window113

Figure 105: Custom user configuration (merge)113

Figure 106: Export window for BeanScape Config114

Figure 107: BeanScape Config exportation114

Figure 108: Import function for BeanScape Config114

Figure 109: Notification Management Window115

Figure 110: Offline graph menu on BeanScape®116

Figure 111: Offline graph window116

Figure 112: Grid display of graphs117

Figure 113: Data conversion example118

Figure 114: Data Conversion menu on BeanScape®119

Figure 115: Data Conversion window.....119

Figure 116: Data Conversion main options119

Figure 117: Importing files into Data Conversion tool120

Figure 118: Overview of the selected files on Data Conversion window120

Figure 119: Overview: Converted File Folder121

Figure 120: Advanced settings.....121

Figure 121: Advanced settings.....121

Figure 122: Add BeanScape to Firewall122

Figure 123: Notification message122

Figure 124: SQL Server installation.....122

Figure 125: installation notification for SQL Server Report.....122

Figure 126: SQL Server Report Installation.....123

Figure 127: Check MATLAB extension123

Figure 128: Notification message123

Figure 129: Download MATLAB extension123

Figure 130: Client management124

Figure 131: Client/Server Management124

Figure 132: FTP Configuration125

Figure 133: FTP configuration window.....125

Figure 134: FTP Server settings126

Figure 135: Failure details127

Figure 136: the available type of files.....127

Figure 137: Files stored on the FTP server128

Figure 138: View tab.....129

Figure 139: Standard View dashboard129

Figure 140: Expert View.....130

Figure 141: Serial Key130

Figure 142: Expert view dashboard130

Figure 143: Tools options list on the expert view133

Figure 144: BeanDevice® health history.....136

Figure 145: BeanDevice® health status option.....142

Figure 146: BeanDevice® health status window143

Figure 147: BeanDevice® Advanced functions145

Figure 148: Disable logging on PC.....145

Figure 149: Enable logging on PC146

Figure 150: Buffer Reset option.....146

Figure 151: BeanSensor: Open the graph in a new window147

Figure 152: Graphs opened in separated windows.....147

Figure 153 :Windows search for firewall screenshot151

Figure 154: allowed apps window152

Figure 155: Firewall auto exception152

1. TECHNICAL SUPPORT

For general contact, technical support, to report documentation errors and to order manuals, contact *Beanair Technical Support Center* (BTSC) at:

tech-support@Beanair.com

For detailed information about where you can buy the Beanair equipment/software or for recommendations on accessories and components visit:

www.Beanair.com

To register for product news and announcements or for product questions contact Beanair's Technical Support Center (BTSC).

Our aim is to make this user manual as helpful as possible. Keep us informed of your comments and suggestions for improvements.

Beanair appreciates feedback from the users of our information.

2. VISUAL SYMBOLS DEFINITION

<i>Symbols</i>	<i>Definition</i>
	<i><u>Caution or Warning</u> – Alerts the user with important information about Beanair wireless sensor networks (WSN), if this information is not followed, the equipment /software may fail or malfunction.</i>
	<i><u>Danger</u> – This information MUST be followed if not you may damage the equipment permanently or bodily injury may occur.</i>
	<i><u>Tip or Information</u> – Provides advice and suggestions that may be useful when installing Beanair Wireless Sensor Networks.</i>

3. ACRONYMS AND ABBREVIATIONS

<i>AES</i>	Advanced Encryption Standard
<i>CCA</i>	Clear Channel Assessment
<i>CSMA/CA</i>	Carrier Sense Multiple Access/Collision Avoidance
<i>GTS</i>	Guaranteed Time-Slot
<i>kSps</i>	Kilo samples per second
<i>LLC</i>	Logical Link Control
<i>LQI</i>	Link quality indicator
<i>LDCDA</i>	Low duty cycle data acquisition
<i>MAC</i>	Media Access Control
<i>PAN</i>	Personal Area Network
<i>PER</i>	Packet error rate
<i>RF</i>	Radio Frequency
<i>SD</i>	Secure Digital
<i>WSN</i>	Wireless sensor Network

4. DOCUMENT ORGANISATION

This manual is organized in 7 chapters, as follows:

BeanDevice® product overview	<ul style="list-style-type: none"> •Details the BeanDevice® product presentation
Data acquisition mode description	<ul style="list-style-type: none"> •Details the data acquisition mode available on the BeanDevice® • Related Technical Note: TN_RF_008 - "Data acquisition mode available on the BeanDevice®"
BeanDevice® installation guidelines	<ul style="list-style-type: none"> •Details the installation guidelines of the BeanDevice® • Related Technical Note: TN_RF_010 - "Beandevic® Power Management " • Related Technical Note: TN_RF_007- "Beandevic® DataLogger user Guide" • Related Technical Note: TN_RF_006- "Beandevic® wireless network association"
BeanDevice® supervision from the Beanscape®	<ul style="list-style-type: none"> •Details the BeanDevice® supervision from the Beanscape®
BeanDevice® maintenance (for experienced user)	<ul style="list-style-type: none"> •Details the BeanDevice® maintenance (for experienced user)
Troubleshooting	<ul style="list-style-type: none"> •Frequently asked questions (FAQ)
Installation procedures	<ul style="list-style-type: none"> •Details the installation procedures

5. BEANDEVICE® PRODUCT OVERVIEW



It is highly recommended to read all the user manual related to Beanair software & equipment (BeanScope®, BeanGateway®, BeanDevice®) before getting start your BeanDevice®.

5.1 INTRODUCTION TO PROCESSENSOR PRODUCT LINES

ProcessSensor product line comes with Wireless analog DAQ compatible with a large scale of analog sensors:

- Analog voltage $\pm 5V$ and $\pm 10V$
- Analog low voltage $\pm 20mV$ compatible with strain gauge sensor
- Analog current loop 4-20 mA

It comes with advanced features:

- ✓ High measurement precision (less than $\pm 0.08\%$ on the full scale)
- ✓ Providing power supply to external analog sensors (user configurable: 4.5V up to 20V)
- ✓ Back Up data acquisition on an internal flash memory (embedded data logger)
- ✓ Transmitting data by wireless
- ✓ Compatible with sleep or active power mode

BeanDevice® AN-420	Wireless system acquisition for analog 4-20 mA current loop measurement.
BeanDevice® AN-V	Wireless system acquisition for analog differential measurement ± 5 volts or ± 10 volts.
BeanDevice® AN-mV	Wireless system acquisition for analog differential measurement ± 20 mV This product is dedicated to sensors integrating a Wheatstone bridge (strain gauge sensors, load cell sensors, pressure...).



Industrial sensors commonly use a 4-20 mA DC signal. With this method, the sensor signal is conveyed as a current. Raw output of the sensor will either be 4 mA at the lowest or 20 mA at the highest. By examining the current between 4 and 20 mA an actual reading can be determined. For example, assume an air temperature sensor has a range of 0°C to 100°C. If the output from the temperature sensor is 4 mA, then the temperature is 0°C. If the output from the sensor is 20 mA, then the temperature is 100°C. Readings between 4 and 20 mA are linear and simple to determine.

One of the major advantages of using 4-20 mA sensors is the limited signal loss of these devices. By outputting a sensor signal in the form of current, electrically noisy areas do not have an effect on the sensor's readings. Furthermore, accuracy is not affected by changes in line and connection resistance, or by the addition of other loads in the circuit.

5.2 BEANDEVICE® TECHNICAL SPECIFICATIONS

5.2.1 Common technical specifications

5.2.1.1 RF specifications

RF Specifications	
Wireless Protocol Stack	Ultra-Low-Power and license-free 2.4Ghz radio technology (IEEE 802.15.4E)
WSN Topology	Point-to-Point / Star
Data rate	250 Kbits/s
RF Characteristics	ISM 2.4GHz – 16 Channels
TX Power	+18 dBm
Receiver Sensitivity	-104 dBm
Maximum Radio Range	650m (Line of Sight), 30-100m (Non-Line of Sight)
Antenna diversity	<ul style="list-style-type: none"> · 2 omnidirectional N-Type antennas · Gain 5.5 dBi · Waterproof IP67

Table 1: RF specifications Table

5.2.1.2 Embedded Data logger

Embedded Data logger	
Storage capacity	up to 1 million data points
Wireless data downloading	3 minutes to download the full memory (average time)

Table 2: Embedded Data Logger Table

5.2.1.3 TimeSync: Time Synchronization over the Wireless Sensor Networks (WSN)

TimeSync function: Clock synchronization over the Wireless IOT Sensor	
Clock synchronization accuracy	±2.5 ms (at 25°C)
Crystal specifications	Tolerance ±10ppm, stability ±10ppm

Table 3: TimeSync function Table

5.2.1.4 Environmental and Mechanical

Environmental and Mechanical	
Enclosure	Aluminum, Waterproof IP67 – Fire Protection : ULV94/Getex casing dimensions (w/o antenna, w eyelets) L x l x h : 156mm x 82mm x 57mm Weight : 760g
Shocks resistance	50g during 50 ms
Operating Temperature	-40 °C to +60 °C
Norms	<ul style="list-style-type: none"> · CE Labelling Directive R&TTE (Radio) ETSI EN 300 328 · FCC (North America) · ARIB STD-T66 Ver 3.6 ROHS - Directive 2002/95/EC

Table 4: Environmental and Mechanical Table

5.2.1.5 Power Supply

Power supply	
Integrated battery charger	Integrated Lithium-ion battery charger with high precision battery monitoring: <ul style="list-style-type: none"> · Overvoltage Protection, Overcurrent/Short-Circuit Protection, Undervoltage Protection · Battery Temperature monitoring
Current consumption @ 3,3V	<ul style="list-style-type: none"> · During data acquisition: 70mA to 130 mA (depends on external sensor power supply) · During Radio transmission: 70 mA · During Battery Saver Mode: < 35 µA
External power supply	External power supply: +8-28 VDC with polarity inversion protection
Rechargeable battery	High density Lithium-Ion rechargeable battery with a capacity of 2.2Ah with polyswitch protection

Table 5: Power Supply specifications table

5.2.1.6 Included Accessories

Included Accessories	
	4 x M12 Cap 1 x M8 Cap 2 x High gain antenna 5.5 dBi / V.S.W.R : 1.5 :1 / Waterproof IP67

[Table 6: Included Accessories](#)

5.2.1.7 Options

Optional Accessories and Services	
External Power Supply	Wall plug-in, Switchmode power Supply 12V @ 1,25A with sealed M8 Plug (IP67/Nema 6) Ref: M8-PWR-12V
M8 extension cable for external power supply	Molded cable with M8-3pins male plug Material: PVC with shield protection IP Rating : IP67 Nema 6 Cable length: 2 meters , Ref: CBL-M8-2M Cable length : 5 meters, Ref: CBL-M8-5M Cable length: 10 meters, Ref: CBL-M8-10M
M12 Plastic ABS plug for sensors	M12-4 Pins Male plug for sensor interface Coding : A , Locking type: Fix screw, Material: Plastic ABS IP Rating: IP67 in locked condition Ref: M12-PL-SENSOR
M12 Aluminum plug for sensors	M12-4 Pins Male plug for sensor interface Coding : A , Locking type: Fix screw, Material: Aluminum IP Rating: IP67 in locked condition Ref: M12-AL-SENSOR
Antenna cable	N-Type cable (Male/Male), Cable type: RF-5/H155 Cable length: 1 meter, Ref: CBL-ANT-1M Cable length: 2 meters, Ref: CBL-ANT-2M Cable length: 3 meters, Ref: CBL-ANT-3M Cable length: 5 meters, Ref: CBL-ANT-5M Cable length: 10 meters, Ref: CBL-ANT-10M

<p>High Gain antenna option</p>	<p>High Gain Omnidirectional antenna Frequency range 2400-2500MHz VSWR < 1.4, Impedance 50 Ohm, Polarization Vertical Vertical plane 24° (7dBi Gain version), 16°(7dBi Gain version), 6°(12dBi Gain version), Horizontal plane 360° Connector N female, Wind load (170km/h) 7.3N Included: N-Type cable (Male/Male), length: 1 meter Gain: 7dBi, Dimensions 360mm x 23mm, Weight 0.44 kg, Ref: HG-OMNI-OUT-7DBI Gain: 9dBi , Dimensions 540x23 mm, Weight 0.61 kg , Ref: HG-OMNI-OUT-9DBI Gain: 12dBi , Dimensions: 1125mm x 19 mm, Weight 1.06 kg , Ref: HG-OMNI-OUT-12DBI</p>
<p>Calibration certificate</p>	<p>Calibration certificate linked to German Accreditation Body (DAkKS) REF: CERT-CAL-PROCESS</p>

Table 7: BeanDevice® options table specifications

5.2.2 BeanDevice® AN-420

5.2.2.1 Product reference

<i>Product reference</i>	
BND-2.4GHZ-AN420-4CH	

5.2.2.2 Analog data acquisition block specifications

Analog data acquisition specifications	
Signal Conditioning	Analog current loop measurement
Number of channels	4 Channels
A/D Converter	16 bits - SAR Architecture (Successive Approximation Register) with temperature compensation
Measurement range	4-20 mA Current Loop measurement
Non-linearity error	± 0.5 LSB
Repeatability (full scale, @ 25°C, Static Measurement Mode every 2s)	less than ± 0.01%
Repeatability (full scale, @ 25°C, Dynamic Measurement Mode 10Hz)	less than ± 0.01%
Sensor Connector	M12-4Pins , A-Coding, Waterproof IP67

[Table 8: BeanDevice® AN-420 - Analog data acquisition table](#)

5.2.2.3 Sensor Power Supply Specifications

Sensor Power Supply specifications	
Power Supply	4.5 Volts to 20Volts , dynamically configurable from the BeanScape® 2.4GHz software
Power Supply precision (full scale, @25°C)	±0.18%
Maximum Output Power (@25°C)	1 Watts

[Table 9: Sensor power supply specifications](#)

5.2.2.4 Configurable settings

Configurable settings from the BeanScape® 2.4GHz software	
Data Acquisition mode	Static Data Acquisition: Low Duty Cycle Data Acquisition (LDCDA) and Alarm Mode (based on alarm thresholds) . Measurement heartbeat 1s to 24 hour Dynamic data acquisition(not available on devices with ref. extension XT) Streaming and S.E.T. (Streaming with Event Trigger) Mode
Sampling Rate (SPS = samples per second)	Minimum: 1 SPS Maximum: 400 SPS maximum per channel
Alarm Threshold	3 levels of Alarm Threshold Alert-Action-Alarm
Sensor power supply	4.5 to 20 Volts
Power Mode	Battery saver mode & Active power mode

Table 10: Configurable settings from BeanScape® 2.4GHz software

5.2.3 BeanDevice AN-V

5.2.3.1 Product reference

Product reference
BND-2.4GHZ-ANV-4CH - MR
MR-Measurement Range 5 : ±5V measurement range , 10: ±10V measurement range
Example: BND-2.4GHZ-ANV-4CH-5, <i>BeanDevice® AN-V with four channels , measurement range: ±5V</i>

5.2.3.2 Analog data acquisition block specifications

	Analog data acquisition specifications
Signal Conditioning	Analog voltage measurement
Number of channels	4 Channels
A/D Converter	16 bits - SAR Architecture (Successive Approximation Register) with temperature compensation
Measurement range (analog polarity is dynamically configurable from the BeanScope® 2.4GHz)	BND-ANV-4CH -5: ±5V (bipolar) or 0-10 V (unipolar)
	BND-ANV-4CH -10: ±10V (bipolar) or 0-20 V (unipolar)
Non-linearity error	± 0.5 LSB
Repeatability (full scale, @ 25°C, Static Measurement Mode every 2s)	less than ± 0.01%
Repeatability (full scale, @ 25°C, Dynamic Measurement Mode 10Hz)	less than ± 0.01%
Sensor Connector	M12-4Pins , A-Coding, Waterproof IP67

[Table 11: BeanDevice® AN-mV - Analog data acquisition table](#)

5.2.3.3 Sensor Power Supply

	Sensor Power Supply specifications
Power Supply	4.5 Volts to 20Volts , dynamically configurable from the BeanScope® 2.4GHz software
Power Supply precision (full scale, @25°C)	±0.18%
Maximum Output Power (@25°C)	1 Watts

[Table 12: Sensor power supply](#)

5.2.3.4 Configurable Settings

	Configurable settings from the BeanScape® 2.4GHz software
Data Acquisition mode	Static Data Acquisition: Low Duty Cycle Data Acquisition (LDCDA) and Alarm Mode (based on alarm thresholds) . Measurement heartbeat 1s to 24 hour Dynamic data acquisition(not available on devices with ref. extension XT) Streaming and S.E.T. (Streaming with Event Trigger) Mode
Sampling Rate (SPS = samples per second)	Minimum: 1 SPS Maximum: 400 SPS maximum per channel
Alarm Threshold	3 levels of Alarm Threshold Alert-Action-Alarm
Sensor power supply	4.5 to 20 Volts
Analog Input polarity	Bipolar or Unipolar
Power Mode	Battery saver mode & Active power mode

Table 13: Configurable settings from BeanScape® 2.4GHz software

5.2.4 BeanDevice® AN-mV

5.2.4.1 Product reference

<i>Product reference</i>
BND-2.4GHZ-AN-MV-4CH

5.2.4.2 Analog data acquisition block specifications

	Analog data acquisition specifications
Signal Conditioning	Analog low voltage mV , suitable for Strain Gage based sensors
Number of analog inputs	4 Channels
A/D Converter	16 bits - SAR Architecture (Successive Approximation Register) with temperature compensation
Measurement range	±20 mV (bipolar) or 0-40 mV (unipolar)
Non-linearity error	± 0.5 LSB
Repeatability (full scale, @ 25°C, Static Measurement Mode every 2s)	less than ± 0.025%
Repeatability (full scale, @ 25°C, Dynamic Measurement Mode 10Hz)	less than ± 0.35%
Sensor Connector	M12-4Pins , A-Coding, Waterproof IP67

Table 14: BeanDevice® AN-V - Analog data acquisition table

5.2.4.3 Sensor Power Supply

	Sensor Power Supply specifications
Power Supply	4.5 Volts to 20Volts , dynamically configurable from the BeanScape® 2.4GHz software
Power Supply precision (full scale, @25°C)	±0.18%
Maximum Output Power (@25°C)	1 Watts

Table 15: Sensor power supply specifications

5.2.4.4 Configurable settings

Configurable settings from the BeanScape® 2.4GHz software	
Data Acquisition mode	Static Data Acquisition: Low Duty Cycle Data Acquisition (LDCDA) and Alarm Mode (based on alarm thresholds) . Measurement heartbeat 1s to 24 hour Dynamic data acquisition(not available on devices with ref. extension XT) Streaming and S.E.T. (Streaming with Event Trigger) Mode
Sampling Rate (SPS = samples per second)	Minimum: 1 SPS Maximum: 400 SPS maximum per channel
Alarm Threshold	3 levels of Alarm Threshold Alert-Action-Alarm
Sensor power supply	4.5 to 20 Volts
Analog Input polarity	Bipolar or Unipolar
Power Mode	Battery saver mode & Active power mode

Table 16: Configurable settings from BeanScape® 2.4GHz software

5.3 PRODUCT FOCUS



Figure 1: Focus on BeanDevice® AN-V/AN-mV/AN-420

Number	Function	Description
1	<p>M8-3 Contacts Socket for external power supply</p> 	<p>DC 8-28 volts power supply</p> <p>The socket sealing is assured with a screw cap</p> <p> To keep the BeanDevice® weatherproof, don't forget to protect the M8-3contacts socket with the screw cap provided with your BeanDevice®</p>

	<p>Radio antenna</p>	<p>2x N-Type Radio antenna, waterproof IP67</p>  <p>Do not try to change or modify the antenna, you will damage your BeanDevice®.</p>
	<p>ON/OFF push button</p>	<p>Allows to power up/power off the BeanDevice®</p> <p>ON: button pushed</p> <p>OFF: button not pushed</p>  <p>Wait for a minimum of 5 seconds before your power-up the BeanDevice®. The BeanDevice® integrates an energy tank allowing a backup of the WSN context before powering OFF.</p>
	<p>BeanDevice® Activity /Failure led</p>	<p>Bi-color GREEN / RED Led</p> <p>Cf. Table for led description</p>
	<p>M12-5 Pins female socket for sensor interface</p>	<p>This socket is compatible with a M12-5 Pins A-Coding male plug.</p>
	<p>BeanDevice® product version label</p>	<p>Three label version are available:</p> <p>AN-420: 4-20 mA current loop measurement</p> <p>AN-V: +/-5 volts or +/-10 volts analog measurement</p> <p>AN-mV: +/- 20 mV or +/-40 mV analog low voltage measurement</p>
	<p>Network context push button</p>	<p>To restore default/factory parameters, you must perform a <i>Network context deletion</i>. Push on the push-button ("Network") for more than 2 seconds.</p>
	<p>Eyelet for wall mounting</p>	<p>The BeanDevice® is provided with a wall mounting kit.</p>
	<p>M12 sensor cap</p>	 <p>Don't forget to protect the M12 contacts socket with a screw cap. You will lose the tightness of your device if you do not close properly.</p>
	<p>MAC ID Label</p>	<p>Unique identifier assigned to the BeanDevice® (64-bytes)</p>  <p>Every wireless network product which is based on the IEEE 802.15.4 standard must have a 64-bit MAC address that allows unique identification of the device within a global network.</p>

5.4 LEDS DESCRIPTION

Operating status	Led Activity Failure
The BeanDevice® is power off & external power supply is connected.	LED OFF
The BeanDevice® is power down with no external power supply connected	LED OFF
The BeanDevice® is power on with wireless TX/RX activity	Green Led: Wireless Network Activity Red Led: Wireless transmission failure
The BeanDevice® is power on	Green led toggling
The BeanDevice® is power off (was power on before)	RED LED ON during 2s

5.5 RF ANTENNA

5.5.1 Antenna diversity

Antenna diversity is a technique that maximizes the performance of an antenna system. It allows the radio to switch between two antennas that have very low correlation between their received signals. Typically, this is achieved by spacing two antennas around 0.25 wavelengths apart or by using two orthogonal polarizations. So, if a packet is transmitted and no acknowledgement is received, the radio system can switch to the other antenna for the retry, with a different probability of success.



Figure 2: Antenna Diversity present on the BeanDevice® AN-420/AN-V/AN-mV

5.5.2 Antenna specifications

Specifications	
Antenna Gain	5.5 dBi
Frequency	2400-2485 MHz
Bandwidth	83,5 MHz
Connector	N-Type (male)
VSWR	<2.5:1
Polarization	Vertical
Nominal impedance	50 Ohm
Weight	50g
Dimensions	length 193 mm
Material	TPE
Operating temperature	-40°C to 85°C

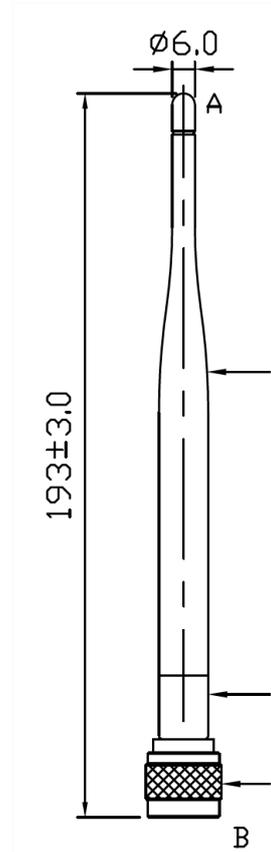


Table 17 : Antenna specifications

5.6 SENSOR INTERFACE

5.6.1 How to connect a sensor on your BeanDevice®?

Several types of sensor can be plugged on your BeanDevice®:

- ✓ Current loop 4-20 mA
- ✓ Analog low voltage measurement ± 20 mV
- ✓ Analog differential measurement ± 10 V

Connecting a sensor is very easy but it requests to follow up several steps:

Step 1: Access the configuration tab for the selected sensor channel.

- Mount the M12 Plug on your sensor . Follow the wiring code available on this document;
- Don't plug your sensor on your BeanDevice® AN-XX;
- From your BeanScape® software, click on the sensor profile associated to your BeanDevice®

Step 2: Configure the sensor power supply

- Enter the value of your sensor power supply;
- A message appears on the screen, left click on "OK" to confirm.

Step 3: Connect your sensor on the BeanDevice

- Plug your sensor on your BeanDevice® AN-XX, an notch on the M12 connector allows a single way connection;
- Rotate the dial clockwise until fully tightened (do not overdo the rotating ring)
- You can start the calibration of your sensor from the BeanScape®;



Sensors are not provided with the BeanDevice® AN-XX series



Figure 3: Sensor connection on the BeanDevice®

5.6.2 Sensor power supply

The BeanDevice® AN-XX series can supply power to your external sensor. You can easily configure your sensor voltage from the BeanScape®.

The following table presents technical specifications:

<i>Technical specifications</i>	
<i>Voltage range</i>	4.5-20Volts DC (configurable from the BeanScape®)
<i>Voltage accuracy</i>	0.2%
<i>Maximum current delivered</i>	100 mA
<i>Maximum power delivered to the sensors</i>	1.5W
<i>Pre-process (time required to stabilize the measurement signal)</i>	<i>Max & Min during</i>
	<i>Resolution</i>

Table 18: External sensor power supply specifications

In order to optimize the low consumption on the BeanDevice®, the power supply provided to the sensor operates in switching mode:

- ✓ Before performing a measurement, the sensor is powered by the BeanDevice®. The sensor warm-up time is settled by the end-user, it will reflect the time needed to stabilize the measurement signal after the sensor power-up;
- ✓ When all the measurements are done, the sensor is immediately power down;
- ✓ This cycle is repeated each time a data acquisition or a stream of data acquisition must be made;

Example: Sensor power supply is settled at 10 volts with 400 ms warm-up time

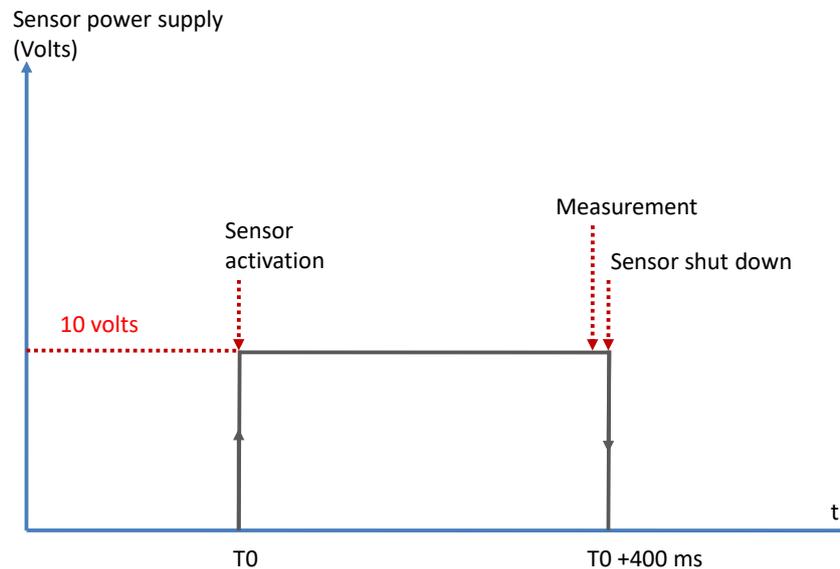


Figure 4: Sensor warm-up time



- ✓ *Choose a sensor that requires a power supply having a pre-process duration as low as possible, otherwise you will decrease the BeanDevice® battery autonomy.*
- ✓ *Some sensors require a very long pre-process duration (1-2 minutes) and some other sensors will work with a lot of current consumption. In this case we advise you to power up the sensor with an external power source.*
- ✓ *If your pre-process period is higher than your data acquisition cycle, it will be automatically adjusted by the BeanDevice®.*



Don't forget to pre-configure the supply voltage and the pre-process duration of your sensor before connecting it. By configuring wrongly, you risk to damage your sensor.

5.6.3 Sensor wiring code (General overview)



Figure 5: M12 socket location the BeanDevice®



Figure 6: M12 Socket - positioning notch

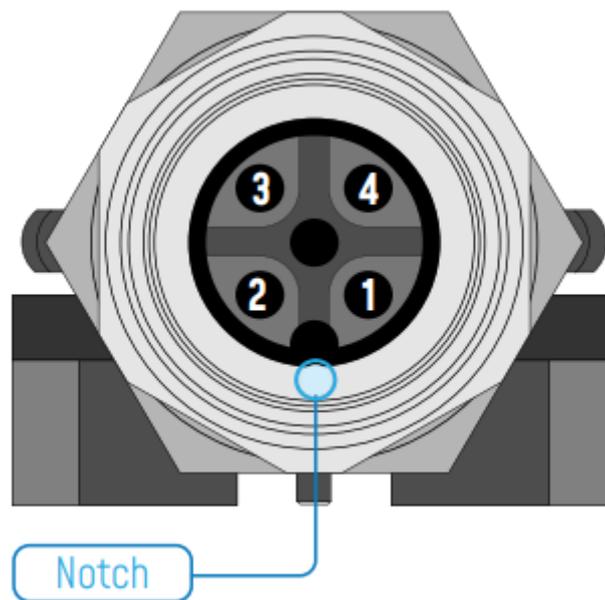


Figure 7: M12 socket Pin assignment

M12-4Pins A-coding should be used

5.6.4 Sensor wiring code (BeanDevice® AN-420)

M12 4pins Wiring code (BeanDevice® AN-420 side)

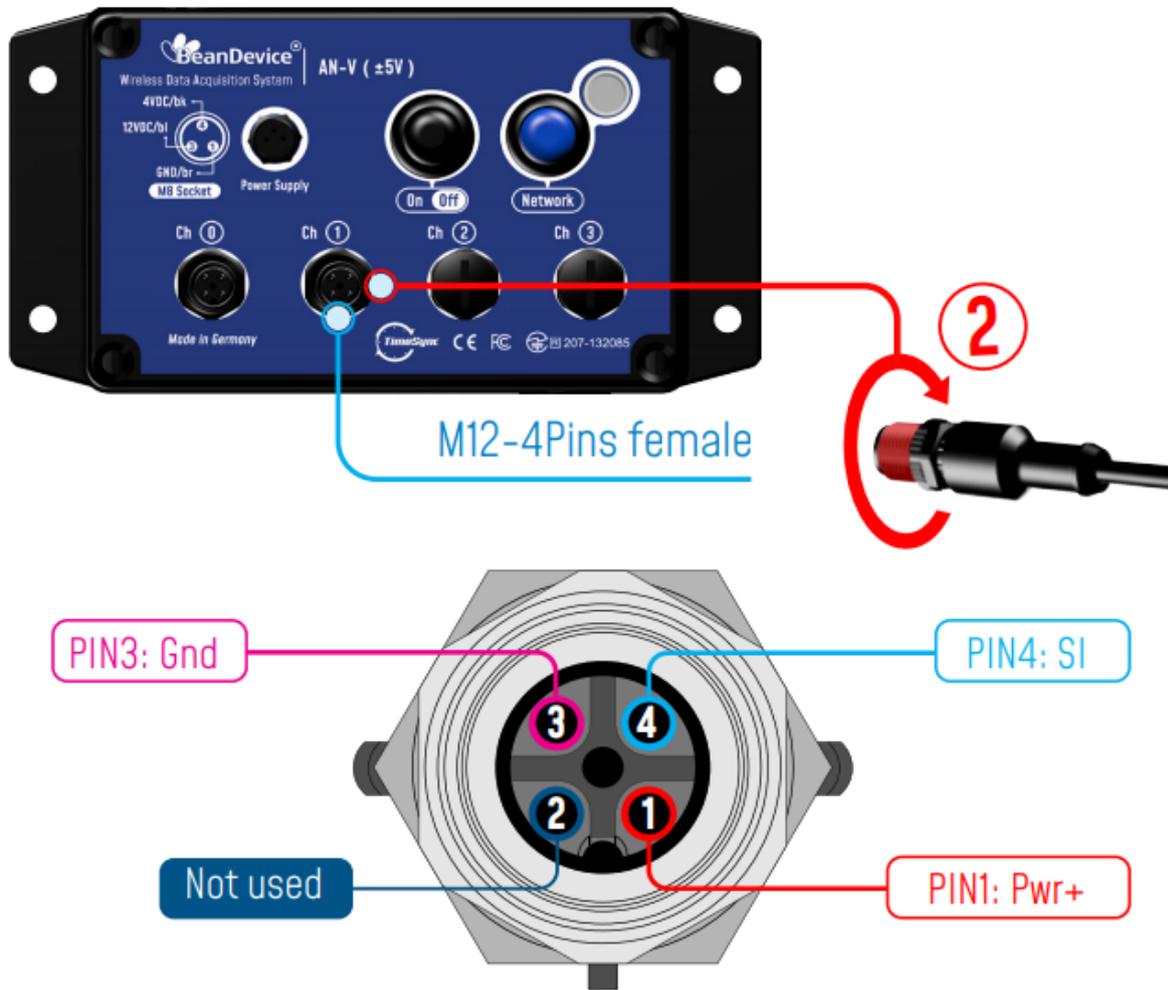


Figure 5 : M12 socket Wiring Code (BeanDevice® side)

CAPTION PIN1 (Pwr+): Sensor power supply PIN2: Not used
 PIN4 (SI): Signal input PIN3 (Gnd): Electrical Ground

Figure 8 : M12 socket Wiring Code (BeanDevice® side)

M12-4pins Plug Wiring code (sensor side)

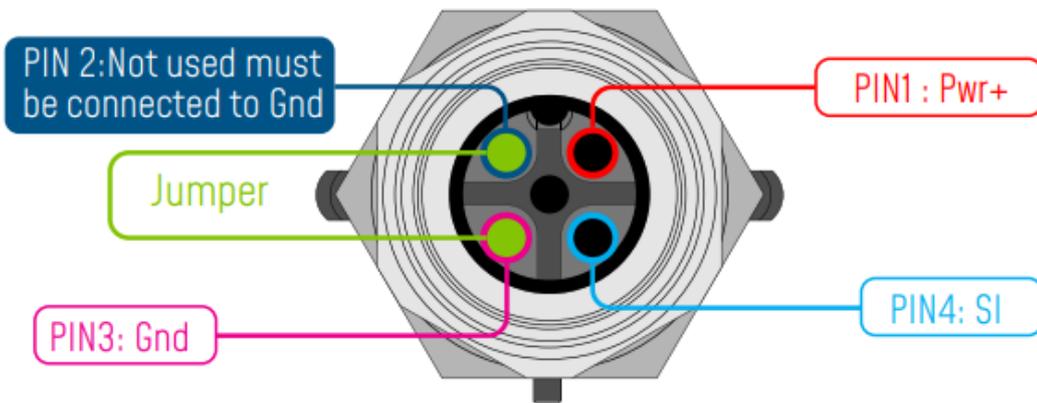
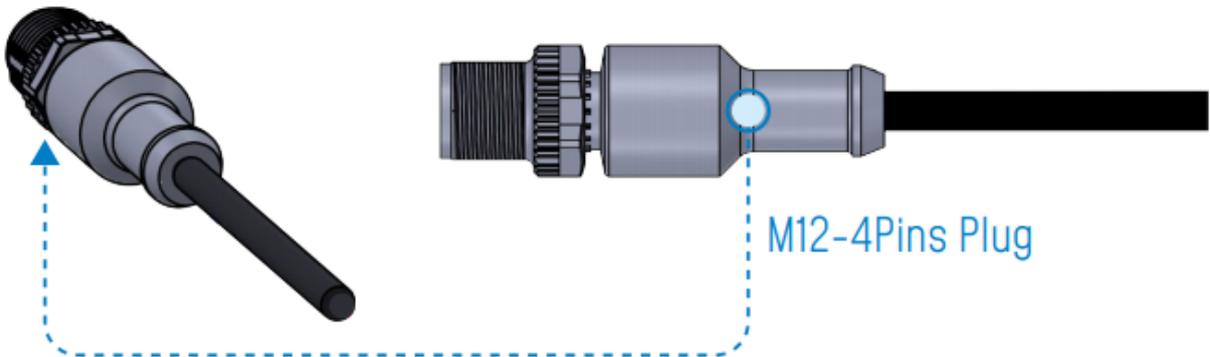


Figure 6 : M12-4pins Plug Wiring code (sensor side)

CAPTION PIN1 (Pwr+) : Sensor power supply PIN2 : Not used must be connected to Gnd
 PIN4 (SI) : Signal input PIN3 (Gnd) : Electrical Ground

Figure 9: M12-4pins Plug Wiring code (sensor side)

Instructions for connecting a 2-wire sensor:

- ✓ Connect the sensor wire “Loop Supply” to **PIN1 (Pwr+)**
- ✓ Connect the sensor wire “Current output” 4-20mA to **PIN4(SI)**
- ✓ Use a jumper cable to connect **PIN3(Gnd)** to **PIN2**

5.6.5 Sensor wiring code (BeanDevice® AN-V & AN-mV)

Wiring Code (Sensor Side)-Sensor with Analog **Unipolar** Output

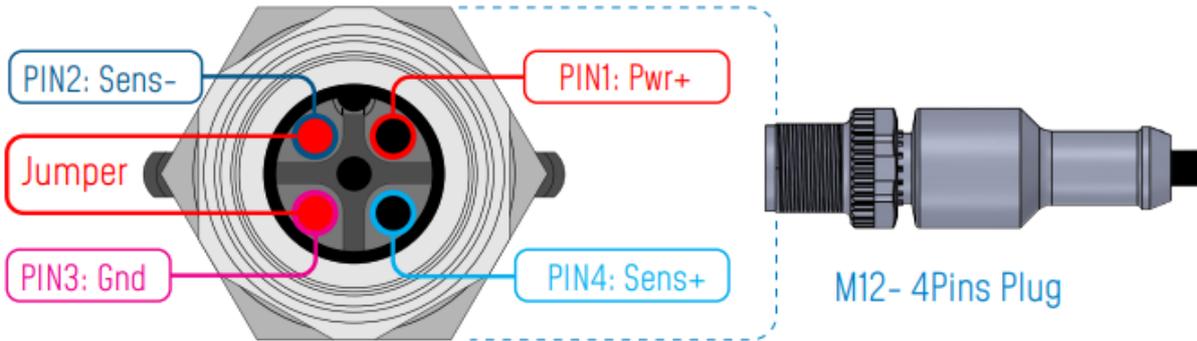


Figure 7 : Wiring code (sensor side) – Analog unipolar

CAPTION PIN1 [Pwr+]: Sensor power supply PIN2 [Sens-]: Connected to Electrical Ground
 PIN4 [Sens+]: Sensor Signal + input PIN3 [Gnd]: Electrical Ground

Figure 10: Wiring code (sensor side) – Analog unipolar

Wiring Code (Sensor Side)-Sensor with Analog **Bipolar** Output

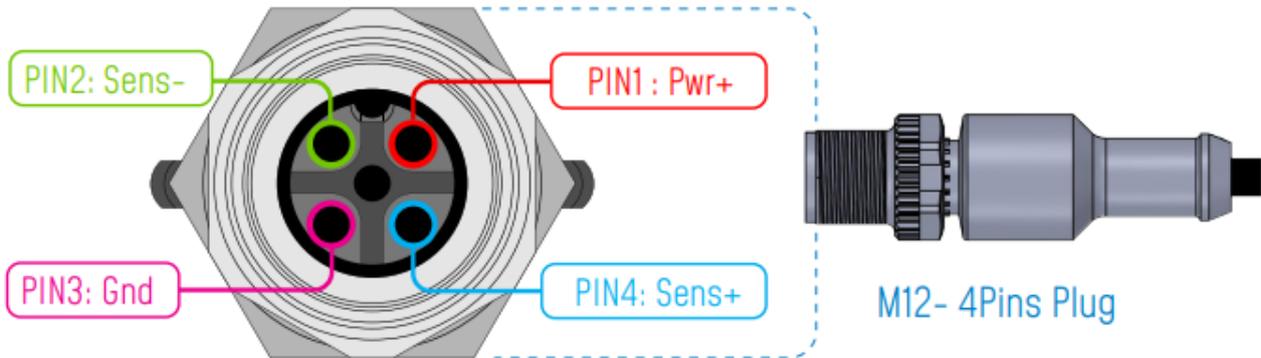


Figure 8 : Wiring code (sensor side) – Analog bipolar

CAPTION PIN1 [Pwr+]: Sensor power supply PIN2 [Sens-]: Sensor signal - input
 PIN4 [Sens+]: Sensor Signal + input PIN3 [Gnd]: Electrical Ground

Figure 11: Wiring code (sensor side) – Analog bipolar



If you use a unipolar analog sensor, Sens- pin must be connected to the electrical ground




You can damage your sensor and/or your BeanDevice® if you don't respect the wiring code.

5.6.6 Examples of integration with analog sensors


1. Strain Gage sensors



BeanDevice AN-mV/AN-V

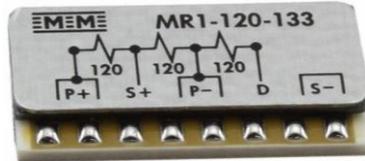

Bridge Completion Module

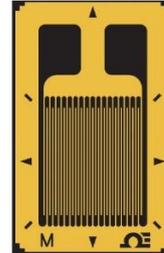

Strain Gauge

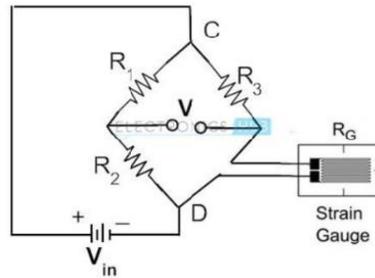


Figure 12: Strain Gage system

R1, R2 and **R3** are included in the Bridge Completion Module.
Vin is the excitation voltage provided by the BeanDevice: 4.5 to 20V
V is the measured voltage by the BeanDevice channel.

2. Potentiometer sensors



Figure 13: Potentiometer sensor

3. LVDT sensors



Figure 14: LVDT sensor integrated with M12-4Pins Plug

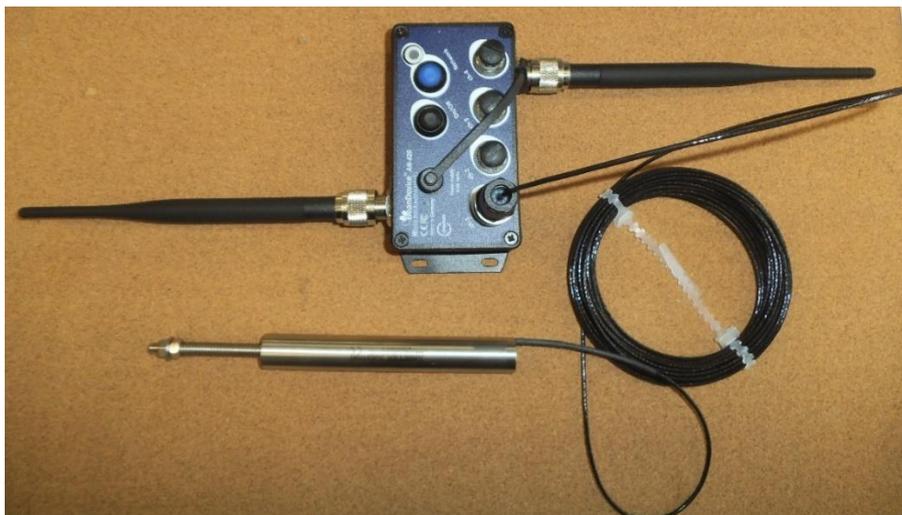


Figure 15: LVDT sensor mounted on the BeanDevice® AN-420



Figure 16: DAQ Config tab

Recommended Voltage: 12V

Sensor warm-up time: 40ms

Use the conversion Assistant:

4 mA => 20 mm (sensor probe fully out)

20 mA => 0 mm (sensor probe fully in)

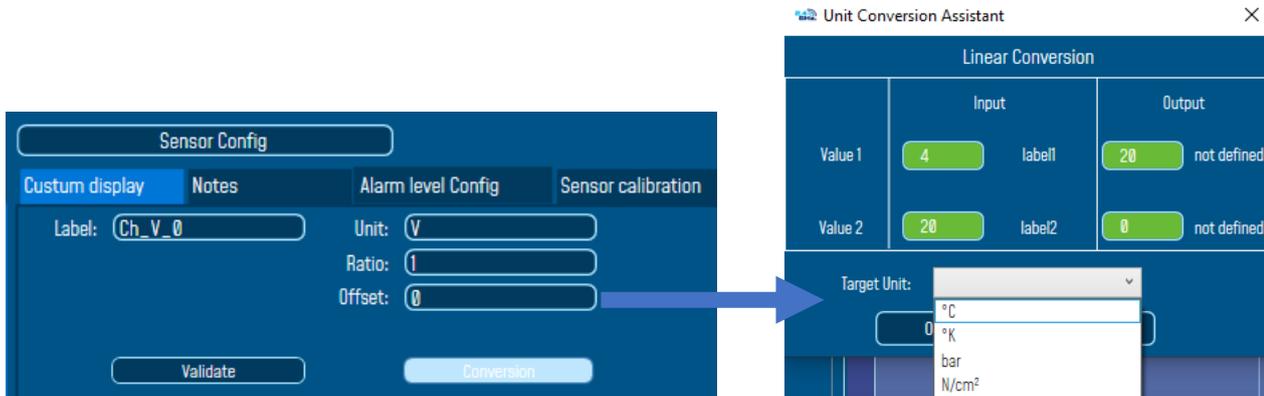


Figure 17: Conversion Assistant

4. BDI sensors




Figure 18: Load strain transducer combines with the BeanDevice AN-mV



Load strain sensor reacting to a traction effort

- **Sensor configuration**

Bipolar Polarity, Excitation Voltage: 5V, Sensor warm-up time: 40ms

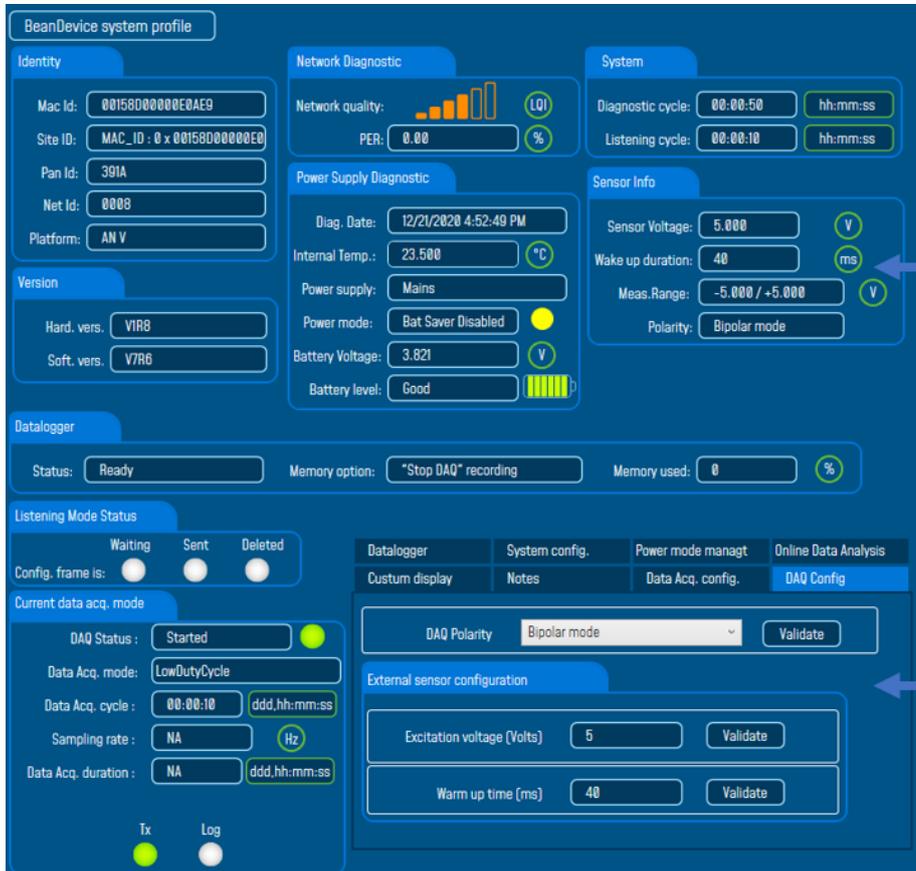

DAQ Info Area

Configuration Area

Figure 19: BeanDevice® Dashboard

- **Applying calibration settings**



Do not change DAQ Calibration Settings

BI DATA. REFINED RESULTS.		Certificate of Calibration	
		Transducer Model: BDI ST350	
Serial Number: B7181			
General Gage Factor: 525.3 $\mu\epsilon/mV/V_{exc}$			
Initial Offset Voltage: -0.129 mV/V _{exc}			
Table 1 – Representative Calibration Data			

This example is using a ST350 with a supplied GGF = 525.332 $\mu\epsilon/mV_{out}/V_{exc}$. The BeanDevice AN-mV supplies a +5VDC excitation voltage. The current reading on the data acquisition system is 3.2312 mV

If the Excitation Voltage is 5VDC, $GGF (\mu\epsilon/mV) = 525.3/5VDC = 105.6 \mu\epsilon /mV$
 Reading($\mu\epsilon$) = $GGF \cdot V_{out}(mV)/5 = 105.6 \times 3.2312 = 341.21 \mu\epsilon$

Enter here GGF ($\mu\epsilon/mV$) = 105.6 $\mu\epsilon /mV$

Drop your sensor on a flat surface and avoid applying a load on it. Enter Initial Offset in $\mu\epsilon$ here

Don't forget to validate

Figure 20: Sensor Config section

5.7 MECHANICAL DRAWING

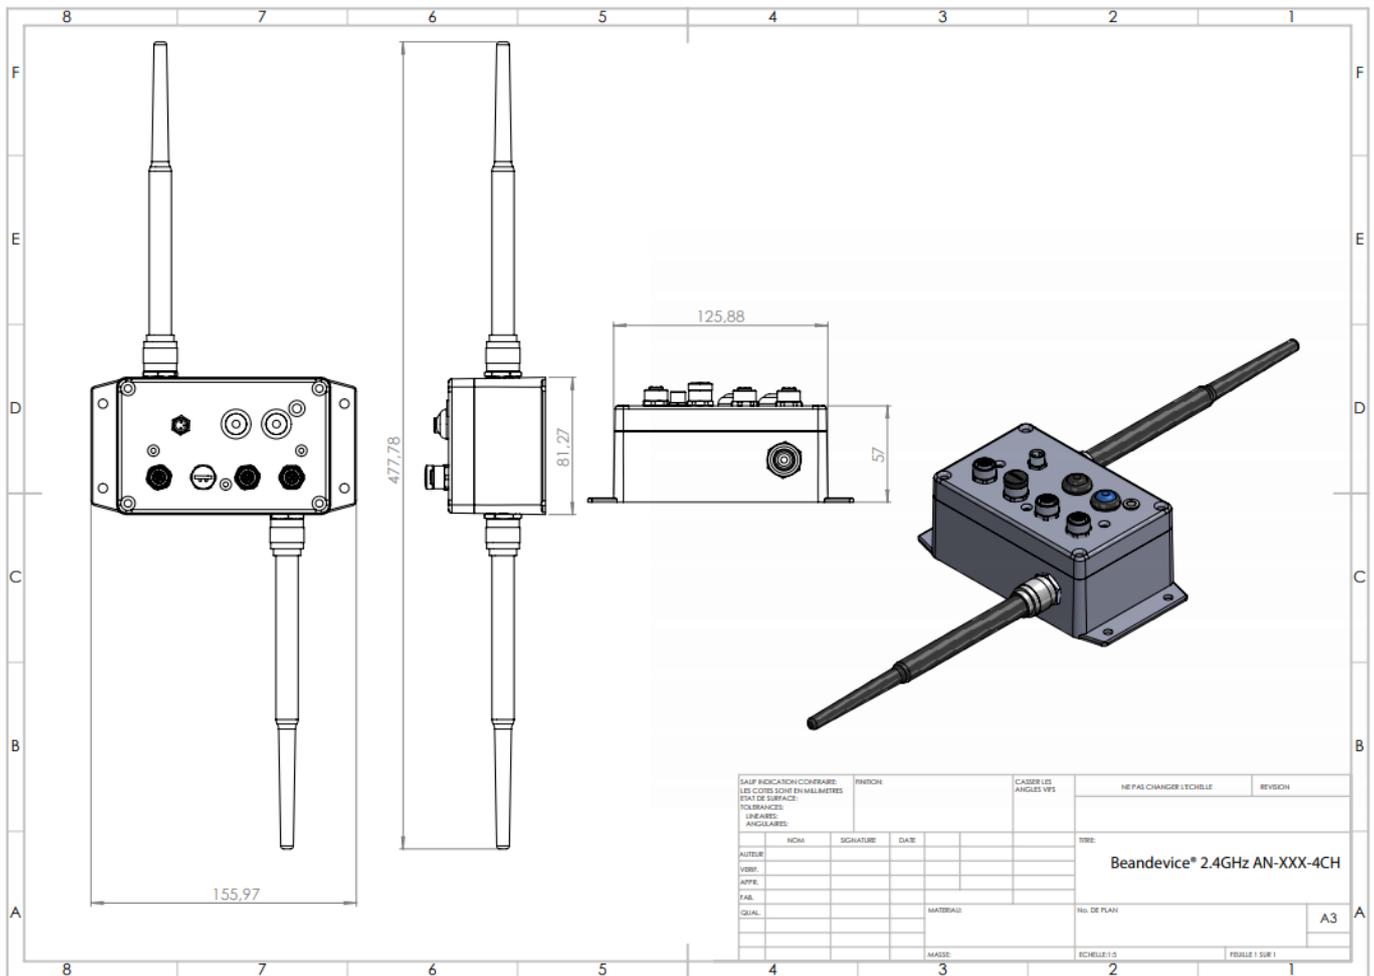


Figure 21: Mechanical Drawing

5.8 LITHIUM-ION RECHARGEABLE BATTERY

The BeanDevice® integrates a Lithium-Polymer rechargeable battery:

Battery Capacity	Nominal Voltage	Charge/Discharge cycle
950 mAh	4,2V	300 cycles



The rechargeable battery can be used as an UPS (uninterruptible power supply) battery on your BeanDevice®. It provides an emergency power when the input power source, typically the utility mains, fails.



Do not try to change the battery. You will void the guarantee of the product.

5.9 AC-TO-DC POWER ADAPTER

The BeanDevice® can also be powered by an AC-to-DC adapter **8-28Volts**. The power adapter can be used for recharging Lithium-Ion battery or to power supply continuously the BeanDevice®. A M8-3Pins standard plug is used for connecting the power adapter to the BeanDevice®. If battery charge is very low, connect the power adapter in order to recharge your internal battery.



Only the M8 plug is fully sealed, the power adapter is not sealed.

5.10 EXTERNAL POWER SUPPLY WIRING CODE

Caption:

PIN3 (Pwr+) : power supply 8-28 V DC

PIN1 (Gnd) : electrical ground

External power supply wiring code (M8-3Pins Socket)


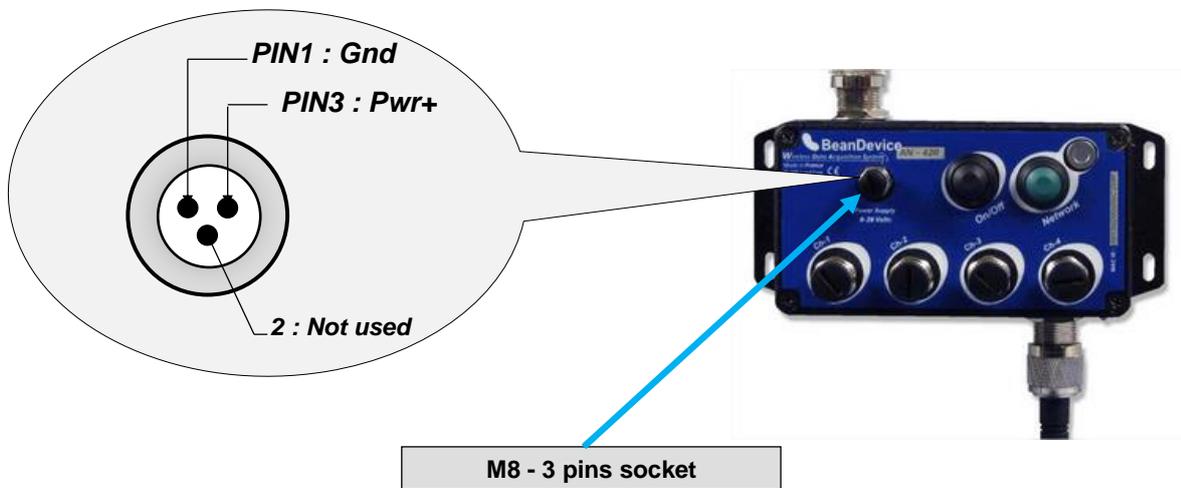


Figure 22 : External power supply M8-3Pin Socket - BeanDevice® side

External power supply wiring code

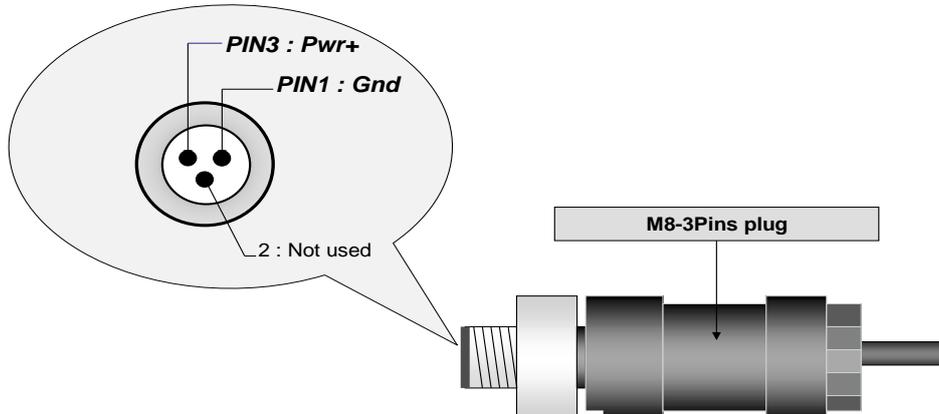

Caption:

Pwr+ : Power supply 8-28V DC

Gnd : Ground

Figure 23 : External power supply wiring code (M8-3Pin Plug side)

If you are using a molded M8 cable (Ref: CBL-M8-2M, CBL-M8-5M, CBL-M8-10M) the wiring code and color will be as follow:



<i>Pin Number</i>	<i>Description</i>	<i>Color code</i>
PIN3	Pwr+ : Power supply 8-28VDC	Blue
PIN1	Ground	Brown

Table 19: Wiring code table for molded M8 cable



Reversing the power supply polarity may damage your BeanDevice®/BeanGateway® product

6. DATA ACQUISITION MODE DESCRIPTION



Please read the technical note [TN_RF_008 – “Data acquisition modes available on the BeanDevice®”](#)

7. BEANDEVICE® PROCESSENSOR INSTALLATION GUIDELINES

7.1 POWER MODE MANAGEMENT



Please read the technical note [TN_RF_010 – « BeanDevice® Power Management »](#)

7.2 BEANDEVICE® NETWORK ASSOCIATION



Please read the technical note [TN_RF_006 – “WSN Association process”](#)

7.3 DATALOGGER FUNCTION



Please read the technical note [TN_RF_007 – “BeanDevice® Datalogger User Guide”](#)

7.4 OTAC (OVER-THE-AIR-CONFIGURATION) PROCESS



Please read the technical note [TN_RF_010 – « BeanDevice® Power Management »](#)


7.5 FACTORY SETTINGS

If desired, the user can restore factory settings on the BeanDevice® with the following default parameters:

<i>Parameter</i>	<i>BeanDevice® 2.4GHz version</i>		
	<i>AN-420</i>	<i>AN-V</i>	<i>AN-mV</i>
<i>Power Mode</i>	<i>Active</i>		
<i>Data Acquisition duty cycle</i>	<i>10s</i>		
<i>Data Acquisition mode</i>	<i>LowDutyCycle</i>		
<i>Alarms Threshold</i>	<i>H1 :20</i> <i>H2 :20</i> <i>S2 :4</i> <i>S1 :4</i>	<i>H1 :10</i> <i>H2 :10</i> <i>S2 :0</i> <i>S1 :0</i>	<i>H1 :20</i> <i>H2 :20</i> <i>S2 :0</i> <i>S1 :0</i>
<i>Pre-process duration time</i>	<i>30 ms</i>		
<i>Sensor polarity</i>	<i>N.A.</i>	<i>Unipolar</i>	<i>Unipolar</i>

Table 20: Factory settings

To restore these default parameters, you must perform a *Network context deletion*. Push on the push-button ("Network") for more than 2 seconds.

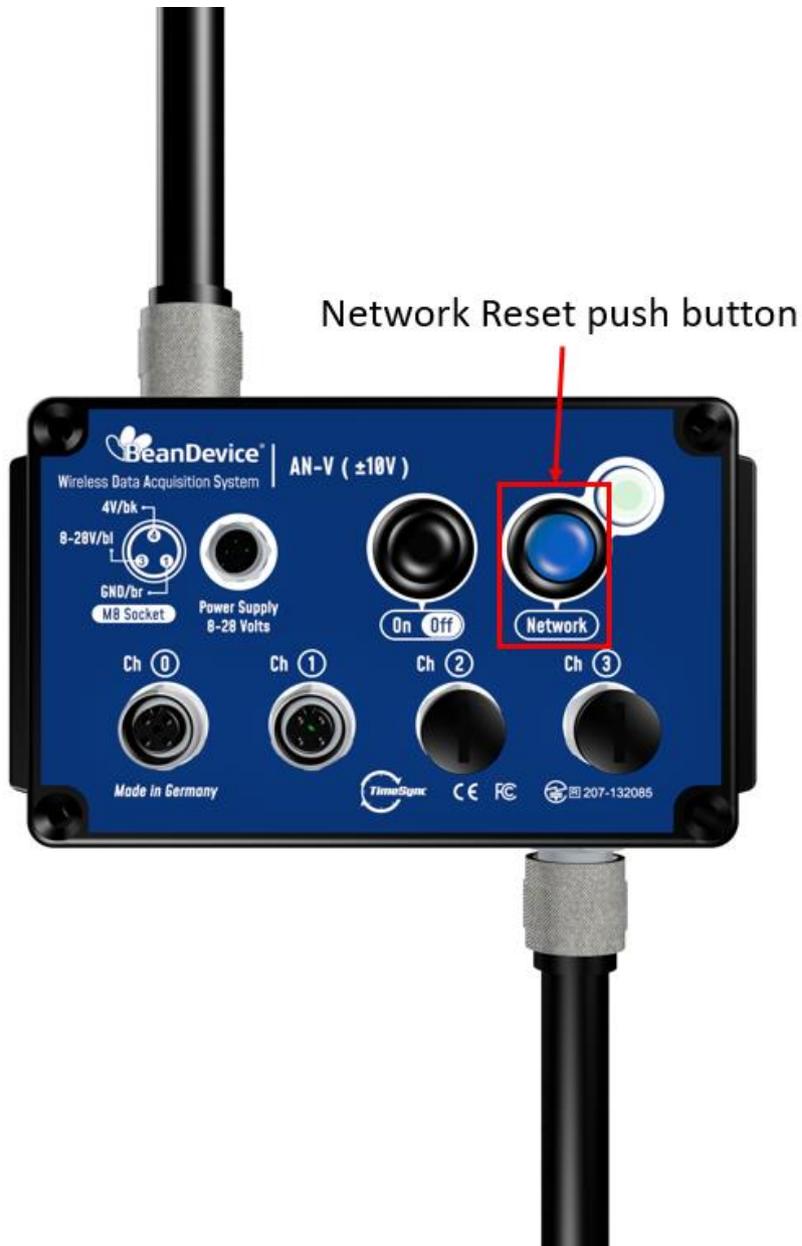

If you fix the TX power at its minimum value (-7dBm), and the wireless range is more than 5m, you will lose the radio signal. To find a configuration with a maximum RF: by pressing the Network Context button, you can reset to factory settings (default RF power is fixed at its maximum: 18 dBm)

BeanDevice® supervision from the beanscape



Don't hesitate to read the BeanScope® user manual for further information about the BeanScope®

7.6 STARTING THE BEANSCOPE®

BeanScope® is a supervision software monitor fully dedicated to Beanair WSN (Wireless Sensor Networks):

1. Start the BeanScope® by double-clicking on the BeanScope® icon 
2. Click on the button « start » 
3. All the BeanDevice® connected to the WSN will appear on your left window
4. Select the BeanDevice® you want to configure. You can configure your BeanDevice® and its attached sensors.

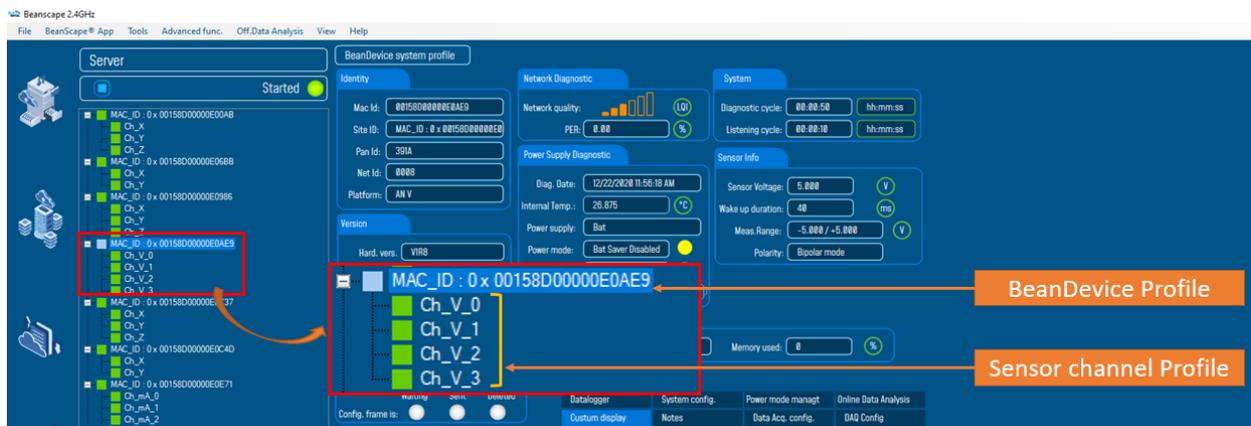



Figure 24: BeanDevice® profile

The User interface is organized as follow:

- White on blue background is displaying information



- Black on white background and white on blue background are customizable field;

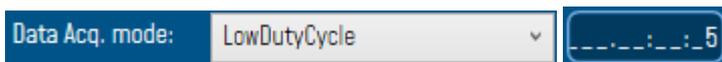

You can configure your BeanDevice® from the page "BeanDevice® System Profile". This page is composed of two parts:

- ✓ BeanDevice® information display
- ✓ BeanDevice® configuration

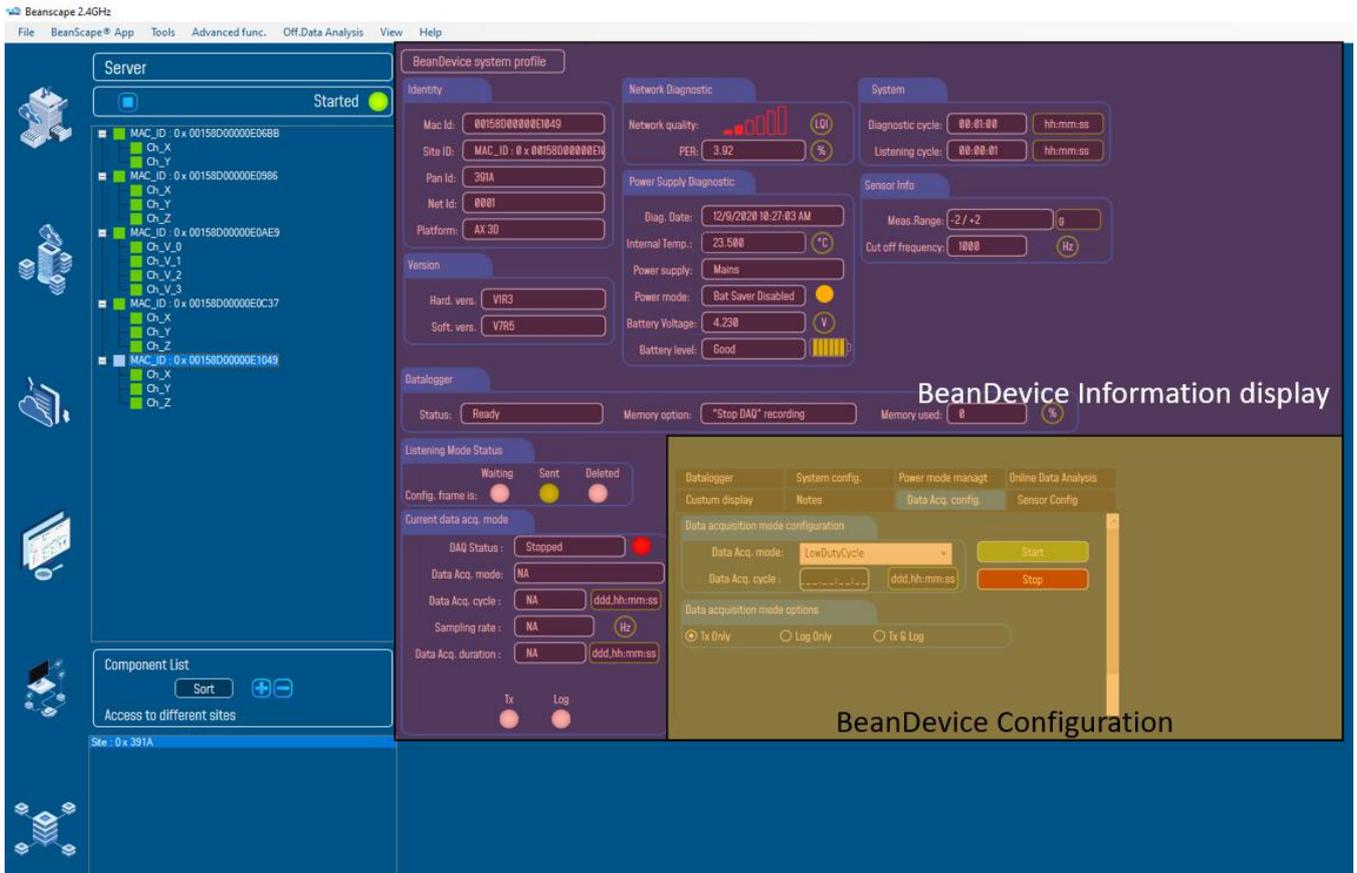


Figure 25: BeanDevice® dashboard

7.7 DISPLAYING THE BEANDEVICE® INFORMATIONS

You will find below a description of the data information fields making up for each frame.

7.7.1 Frame: Identity

<p>Identity</p> <p>Mac Id: 00158D0000E0AE9</p> <p>Site ID: MAC_ID : 0 x 00158D0000E0</p> <p>Pan Id: 391A</p> <p>Net Id: 0008</p> <p>Platform: AN V</p>	<p>BeanDevice MAC Address: is a unique identifier can be used as a network address for most network technologies including Ethernet & WIFI</p> <p>BeanDevice Site ID: By default the MAC address is assigned as a device Label. This Label is editable by the user</p> <p>PAN Address: the Personal Area Network address</p> <p>Network Address: this address is allocated by the BeanGateway when the network is started</p> <p>Platform: BeanDevice platform model</p>
---	---

Figure 26: BeanDevice® Identity



How PAN ID is assigned?

The BeanGateway® starts the WSN, assigning a PAN ID (Personal Area Network identifier) to the network. The PAN ID is pre-determined and cannot be modified. If you use several WSN, before deploying your BeanDevice® check to which WSN is assigned your BeanDevice®.

7.7.2 Frame: Wireless Network Diagnostic

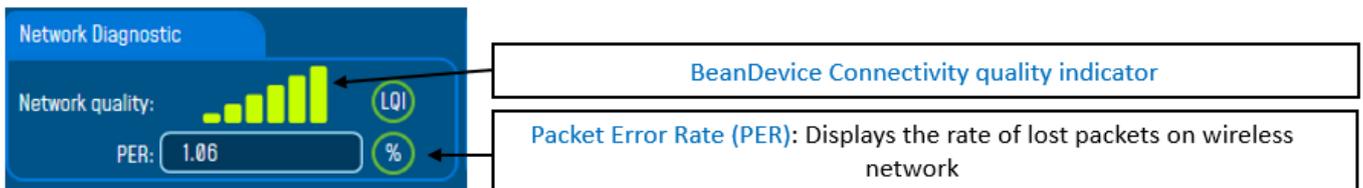


Figure 27: BeanDevice® network link status

$PER = \text{Number of lost packet} / \text{Total of packet transmitted}$

Number of bars	Color	Link quality indicator
5 to 6 bars	Green	Very good
4 bars	Green	Good
3 bars	Orange	medium
1 to 2 bars	Red	bad

Table 21: LQI status

7.7.3 Frame: Power supply diagnostic

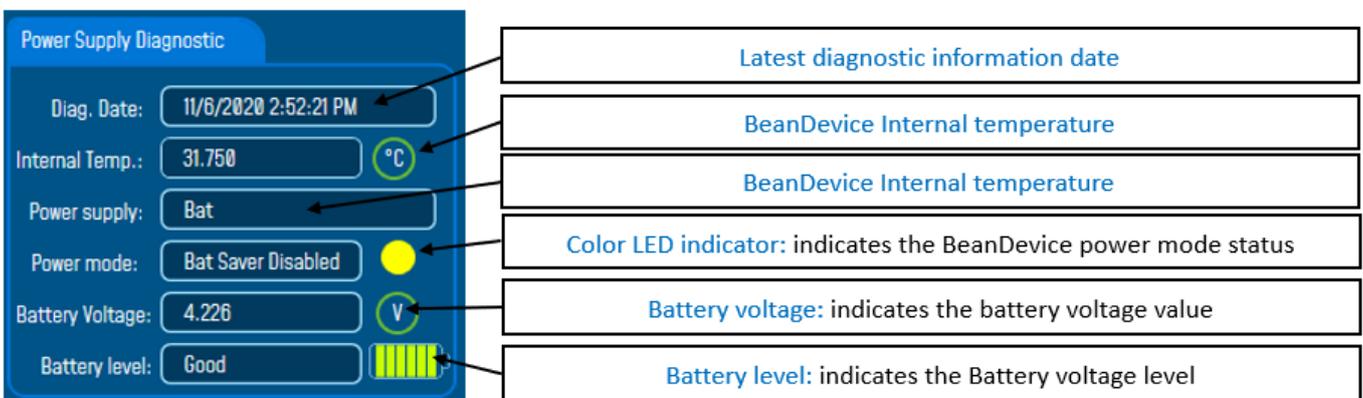


Figure 28: BeanDevice® power supply information



The BeanDevice® incorporates an internal temperature sensor dedicated to the following tasks:

- Battery temperature monitoring during charging;
- Temperature compensation of the analog conditioning chain;
- An alarm notification is sent to the BeanGateway® if the internal temperature is abnormally high;

When you plug the BeanDevice® on an external power supply, the power supply status is automatically detected.

7.7.3.1 BeanDevice® Power Mode status



For further information about Power mode management, please read the technical note [TN_RF_010 – « BeanDevice® Power Management »](#)

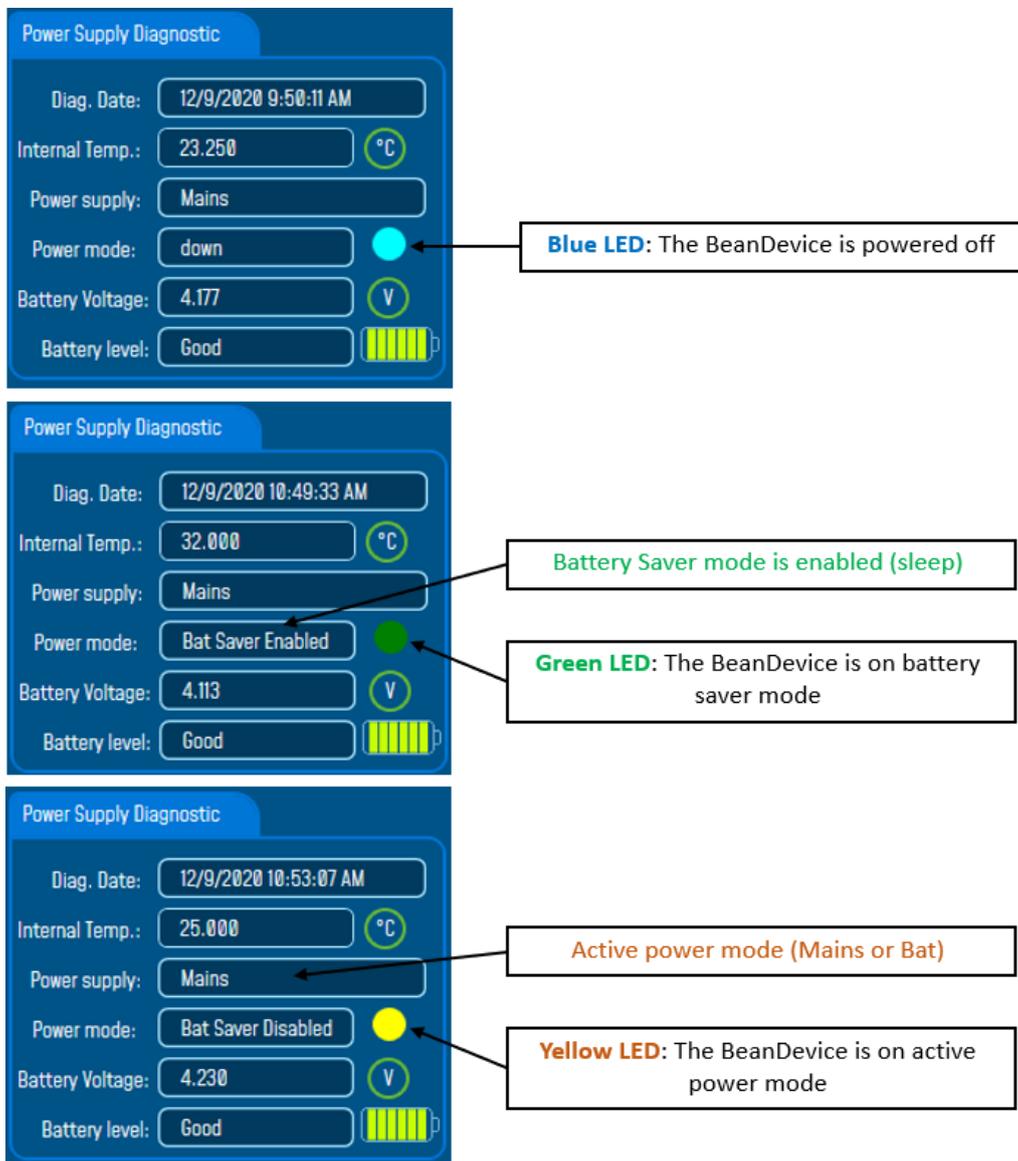


Figure 29: BeanDevice® power modes

7.7.4 Frame: System

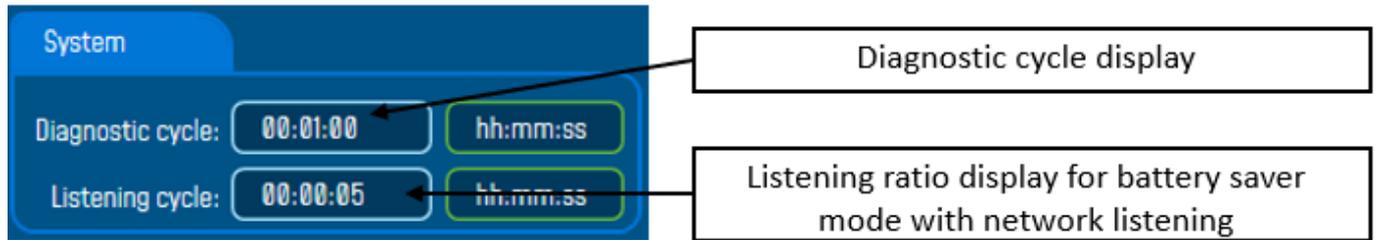


Figure 30: BeanDevice® Diagnostic cycle information



How to convert dBm to mW

Zero dBm equals one milliwatt. A 3dB increase represents roughly doubling the power, which means that 3 dBm equals roughly 2 mW. For a 3 dB decrease, the power is reduced by about one half, making -3 dBm equal to about 0.5 milliwatt. To express an arbitrary power P as x dBm, or go in the other direction, the following equations may be used:

$$x = 10 \log_{10}(1000P) \text{ Or, } x = 10 \log_{10} P + 30$$

And

$$P = 10^{(x/10)}/1000 \text{ Or, } P = 10^{(x-30)/10}$$

Where P is the power in W and x is the power ratio in dBm.

7.7.5 Frame: BeanDevice®

According to the BeanDevice® version, the information displayed in the frame will not be the same.

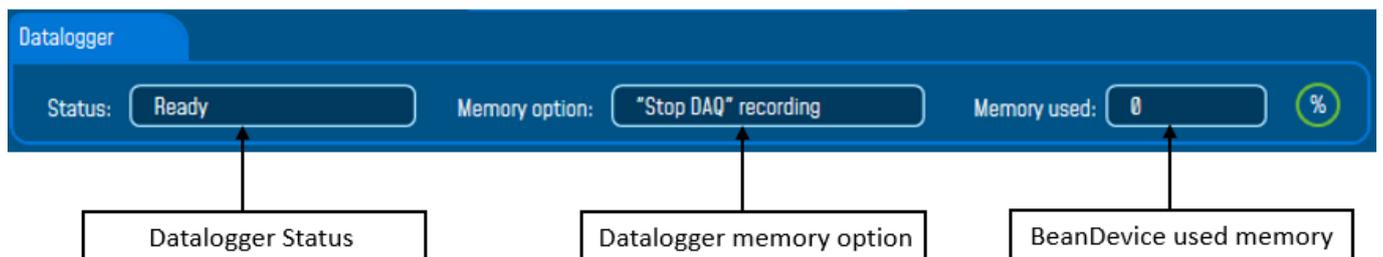


Figure 31: Frame BeanDevice® on BeanScope®

7.7.6 Frame: Product Version



Figure 32: BeanDevice® Product version frame

V (version) related to a major modification of the embedded software.

R (Release) related to a minor modification of the embedded software



These ID versions should be transmitted to our technical support center when you encountered a material or software dysfunction.

7.7.7 Frame: Actual Data Acquisition mode

This frame displays all the information returned by the BeanDevice® on its actual data acquisition mode:

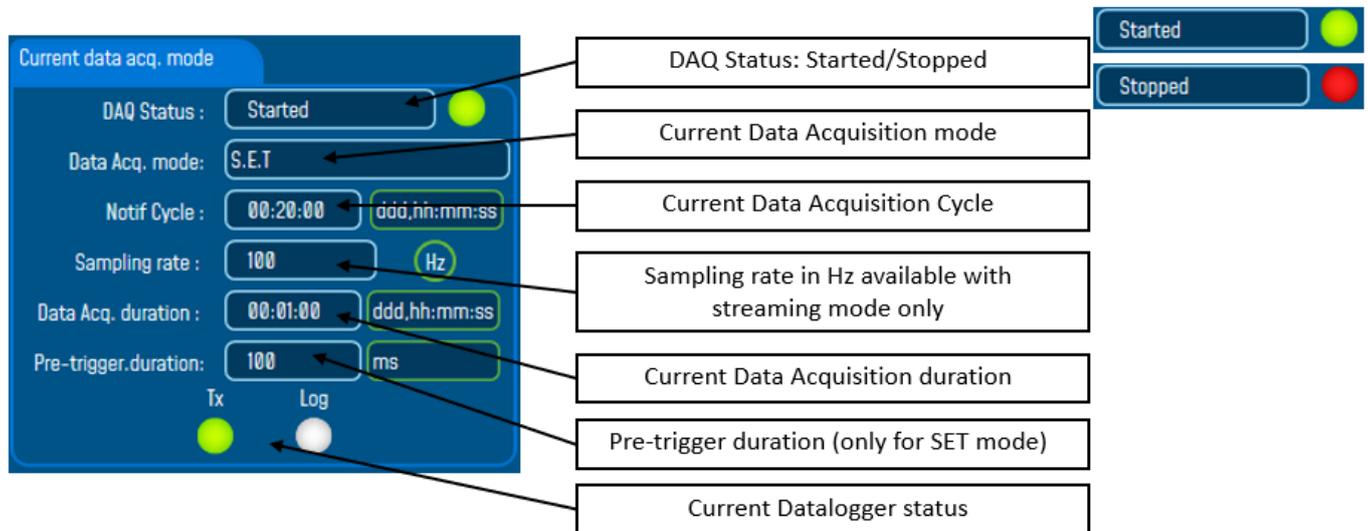


Figure 33: Current data acquisition mode

7.7.8 Frame: DAQ Info

This frame displays all the information on the ProcessSensor.

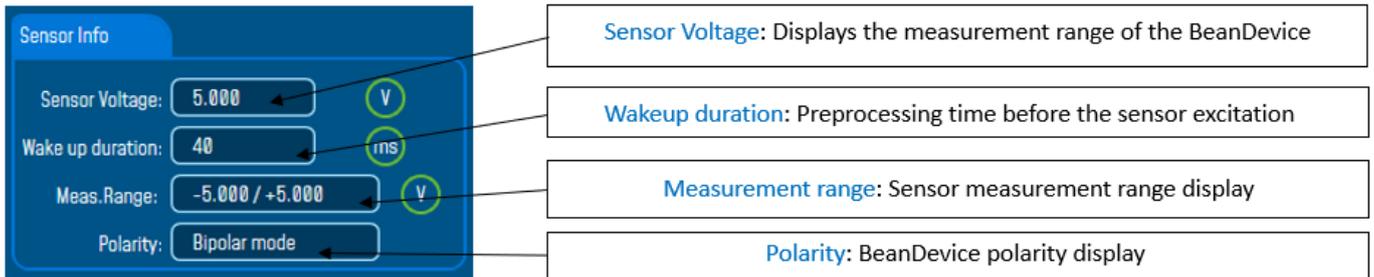


Figure 34: Sensor Info frame

7.8 BEANDEVICE® CONFIGURATION

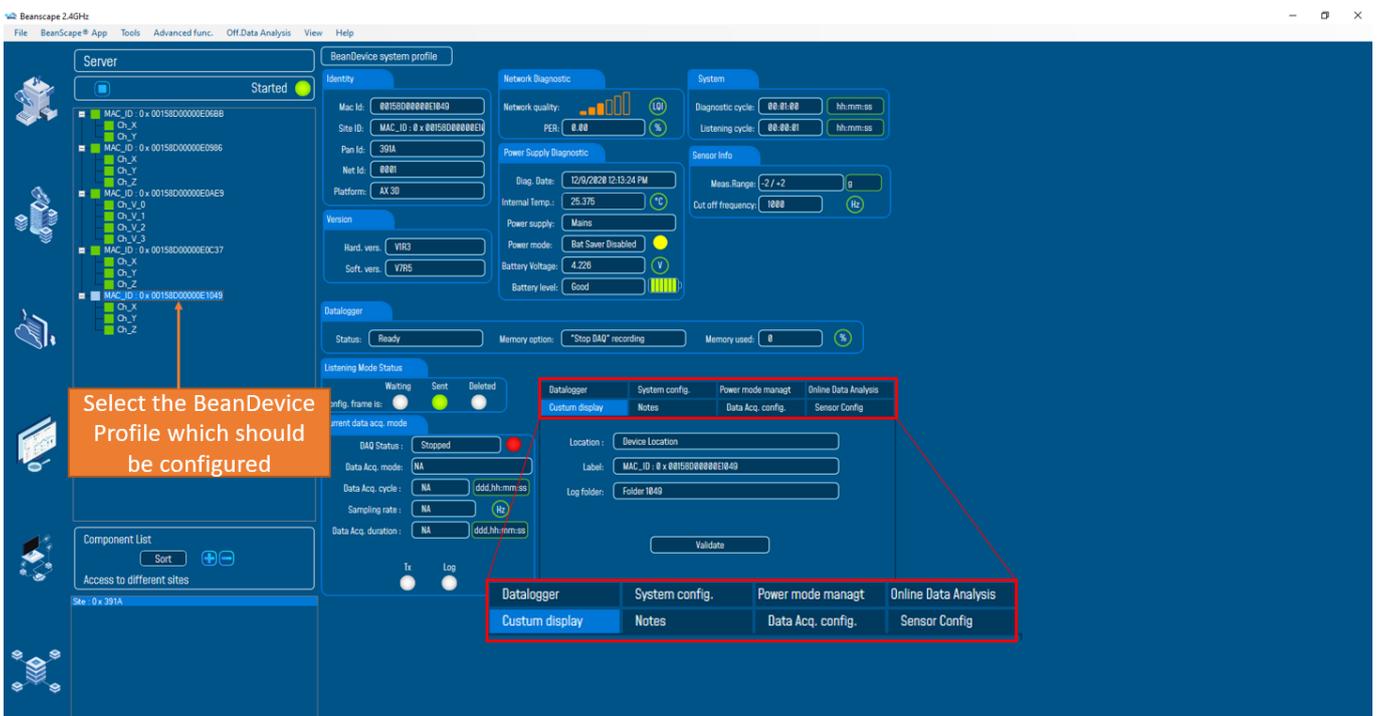


Figure 35: BeanDevice® configuration frame

This frame is composed of several Tabs and includes BeanDevice® OTAC (Over the Air Configuration) Parameters:

Tab	Description
Custom Display	Customize the BeanDevice® label
Notes	This area contains the notes related to the BeanDevice®.
Data Acquisition configuration	Configure the Data acquisition mode on your BeanDevice®, set the acquisition cycle or the sampling rate, enable/disable the datalogger function.
Datalogger	Manage the Datalogger function on the BeanDevice®
System configuration	Configure the diagnostic cycle and the TX Power
Power Mode Management	Configure the Power mode on your BeanDevice® (Active mode, Sleep power mode)

7.8.1 Tab: Custom Display

Datalogger	System config.	Power mode managt	Online Data Analysis
Custum display	Notes	Data Acq. config.	Sensor Config

Location :

Label:


Log folder:

Figure 36: BeanDevice® custom display tab

Parameter	Description
<i>Type</i>	You can enter here the type of BeanDevice® you want to use
<i>Reference</i>	You can assign an internal reference to the BeanDevice® you have purchased.
<i>Label</i>	You can assign any sort of Label to your BeanDevice®. Therefore, the user can easily associate the BeanDevice® with its equipment (example: Room_N521_Second_Floor)

Click on “**Validate**” if you want to validate your configuration.

7.8.2 Tab: Notes

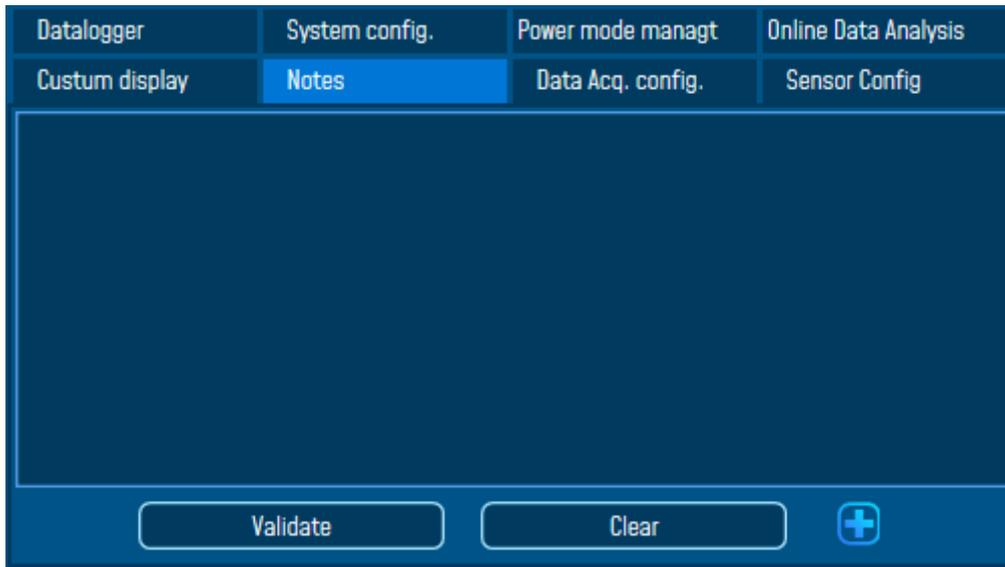

This field contains your notes concerning the BeanDevice®. To change this field, enter your text and click on « **Validate** » button. To back up your text, press the icon 

Example: Machine failure n°XX, requested intervention.

7.8.3 Tab: Data Acquisition configuration

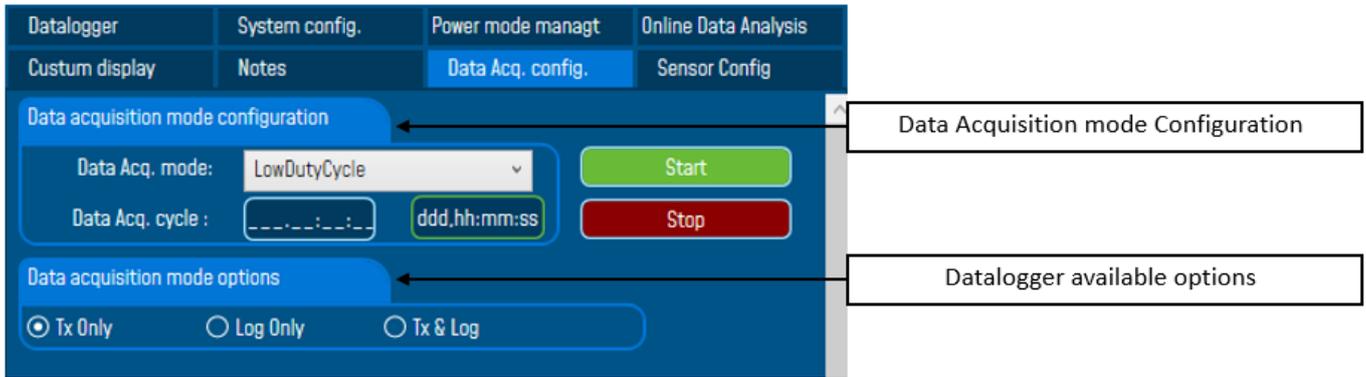


Figure 37: Tab : Notes

Parameter	Different values	Description
Data Acquisition mode	Low duty cycle Data Acquisition (LDCDA)	Low duty cycle data acquisition is adapted for static measurement (tilt, pressure, temperature) requiring a low power consumption on your BeanDevice®. The duty cycle can be configured between 1 data acquisition & transmission per second to 1 data acquisition & transmission per day.
	Survey	Survey mode is a mix between the LDCDA mode and Alarm mode. A data acquisition is transmitted <ul style="list-style-type: none"> Whenever an alarm threshold (fixed by the user) is reached (4 alarm threshold levels High/Low). A transmission cycle is reached, the transmission cycle is configurable through the BeanScope® 1s to 24h;
	Streaming	Streaming is more suitable for users requiring a high data sampling rate (maximum 5 KHz). In order to achieve these performances, data sampling is transmitted by packet;
Data acquisition Cycle	Select the Data acquisition cycle between 1s and 24hours. The format is: Day: Hour : Minute :Second	

Sampling rate	<p>Select the sampling rate of your BeanDevice® between 1 sample per second and 5000 Samples per second maximum. The resolution is 1 sample per second.</p> <p>If Datalogger is selected, the maximum sampling rate is 2000 samples per second.</p> <p>This field is available in streaming, and math mode</p> <p>Choose carefully the Sampling rate value:</p> <ul style="list-style-type: none"> ✓ The PER (Packet Error Rate) can increase if the Sampling rate is high on your BeanDevice®. For further information, read the technical note TN RF 003- “Wireless Network capacity” ✓ Power consumption increases with the sampling rate of your BeanDevice®
Data acquisition duration	<p>Data acquisition duration in streaming, and math mode.</p> <p>The format is Day: Hour: Minute: Second</p> <p>The Data acquisition duration value can be higher than Data acquisition cycle.</p>
Options	<p>TX only: The BeanDevice® transmits the data acquisition without DataLogging</p> <p>Log only: The BeanDevice® logs the data acquisition without wireless transmission</p> <p>TX & Log: The BeanDevice® transmits and logs the data acquisition;</p> <p>SA: Standalone: The BeanDevice® logs the data acquisition without wireless transmission. The BeanDevice stores all the measurements on its embedded Datalogger. Thus, a direct connection with the BeanGateway® is not needed.</p>



For further information about the Datalogger, please read the technical note [TN RF 007 – “BeanDevice® Datalogger User Guide ”](#)

All your modifications are displayed on “**Current data acquisition mode**” frame:

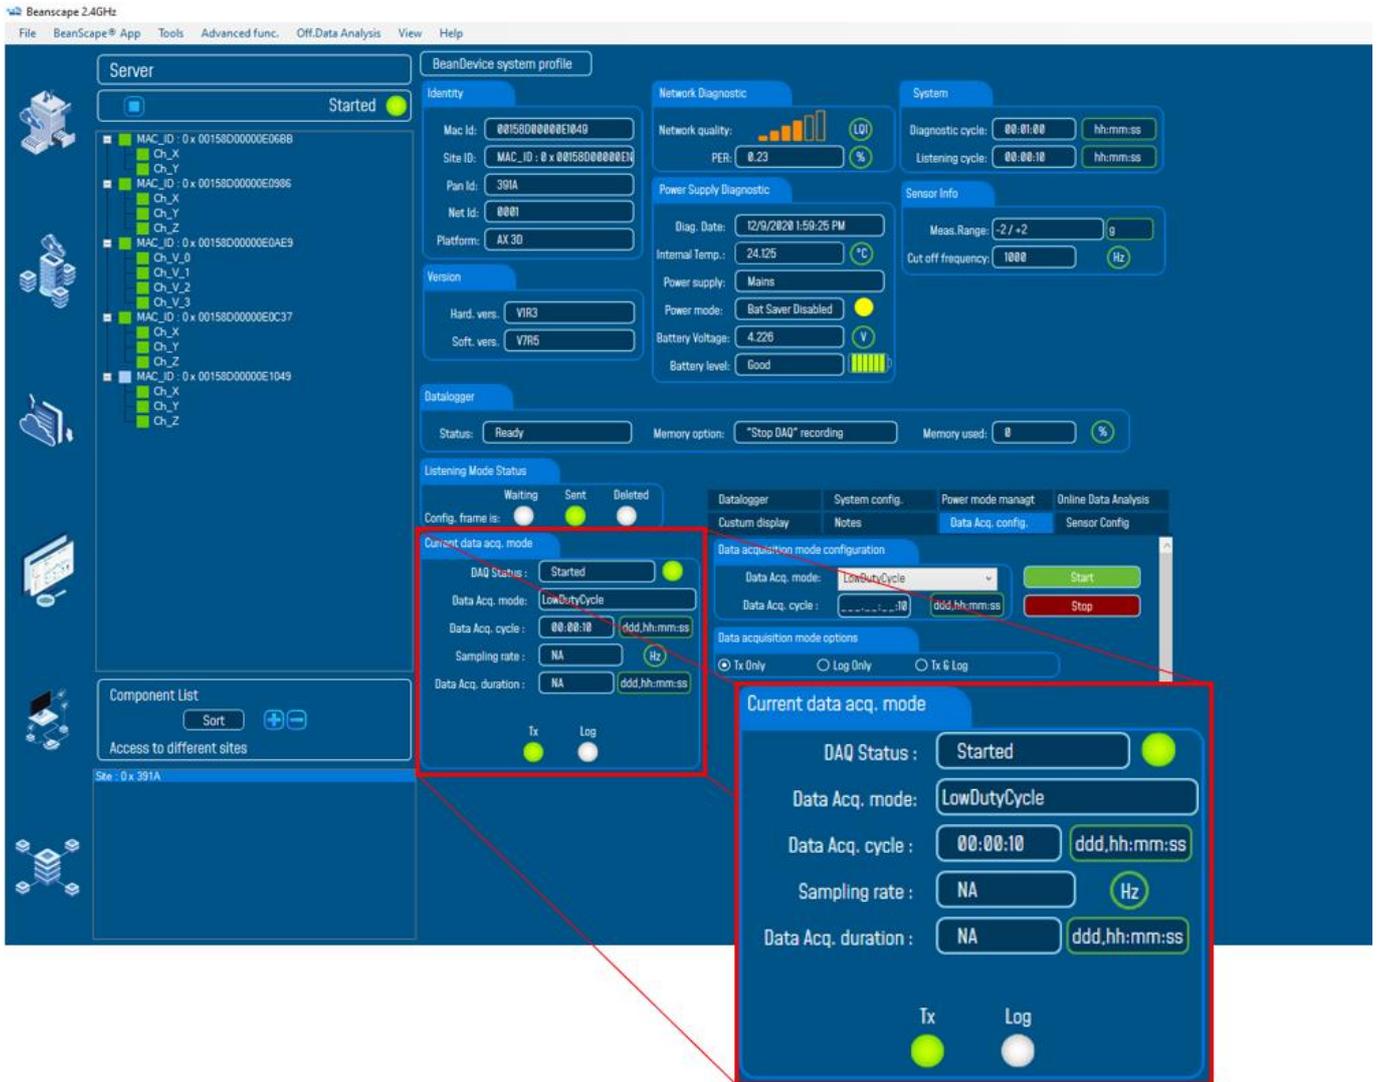


Figure 38: Current data acquisition mode display



For further information, please read to the technical note [TN_RF_008 – “Data acquisition modes available on the BeanDevice®”](#)

7.8.4 Tab: DAQ Config

Figure 39: DAQ config tab

7.8.5 Tab: Datalogger



For further information about Datalogger, please read the technical note [TN RF 007: “BeanDevice® Datalogger User Guide”](#).

Figure 40: Data logger tab

The Logger tag is composed of five different fields:

- **Datalogger Status**
- **Datalogger manager**
- **Download manager**

- *Acquisition information*
- *Datalogger memory configuration*

7.8.5.1 Datalogger status




- **Datalogger status:** Displays logger’s status, four statuses are available:
 - **Ready:** the Datalogger is ready to register data
 - **NotInit:** the Datalogger is not initialized;
 - **Active logs only:** Data acquisition is logged only;
 - **Active Tx and Log:** Data acquisition is logged & transmitted by Radio;
 - **Stopped:** Datalogger is stopped;
- **Download process:** Displays the download process 0 to 100%. If 100%, all the data logs are successfully downloaded on your PC.
- **Download status:** Displays the download status, two types of status are available:
 - **Processing:** Data logs download is under process;
 - **Completed:** Data Logs are completely downloaded on your PC;

7.8.5.2 Logger manager



- **Stop:** Stops Data Logging process
- **Erase:** Stops & Erases all the logs on flash memory

7.8.5.3 Download manager

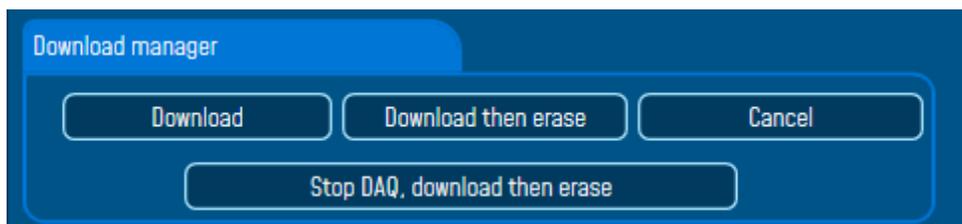

- **Download:** Starts to download all the logs on the flash memory

- **Download then erase:** downloads all the logs and the erase them.
- **Cancel:** Stops the download process
- **Stop DAQ, download then erase.**

7.8.6 Tab: System Config.

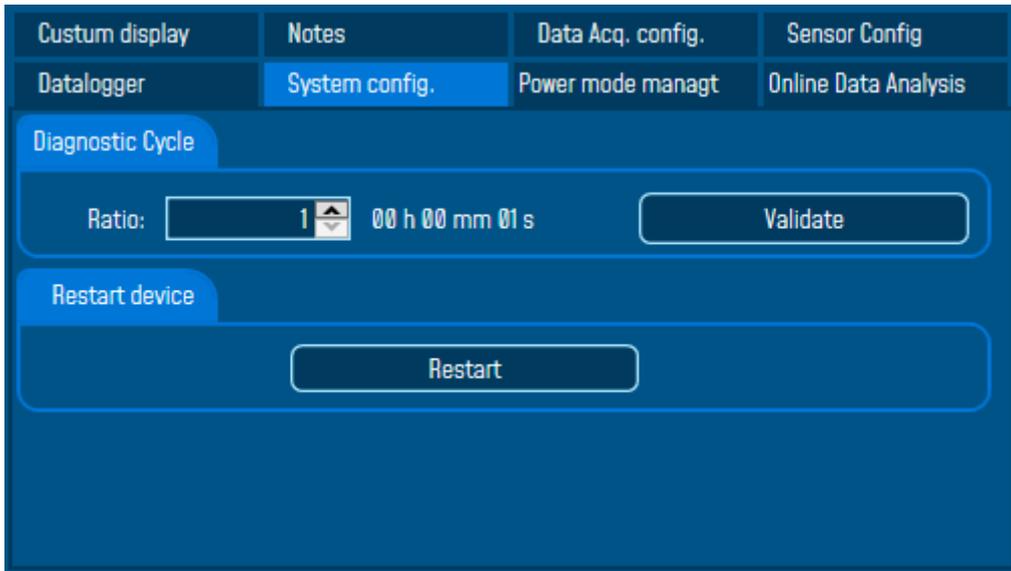


Figure 41: System Configuration Tab

Parameter	Description
Diagnostic cycle	You can set the BeanDevice® diagnostic cycle (Battery status, LQI, PER ...). The Diagnostic cycle is modulo the data acquisition cycle. <i>Ex:</i> If you try to set the diagnostic cycle at 10s while the data acquisition cycle is set at 20s, the diagnostic cycle will be adjusted to 10s ;
Restart device	You can restart the BeanDevice® from BeanScape

7.8.7 Tab: Power mode management



For further information about Power mode management, please read the technical note [TN_RF_010: “BeanDevice® Power management”](#)

This Tab is composed of three options:

- ✓ **Battery Saver Power mode configuration:** Configure the Power mode on your BeanDevice® (active / Battery saver mode)

- ✓ **BeanDevice Listening Ratio:** Configuration settings for Battery Saver power mode with network listening
- ✓ **Delete Pending OTAC frame:** Delete the last performed OTAC

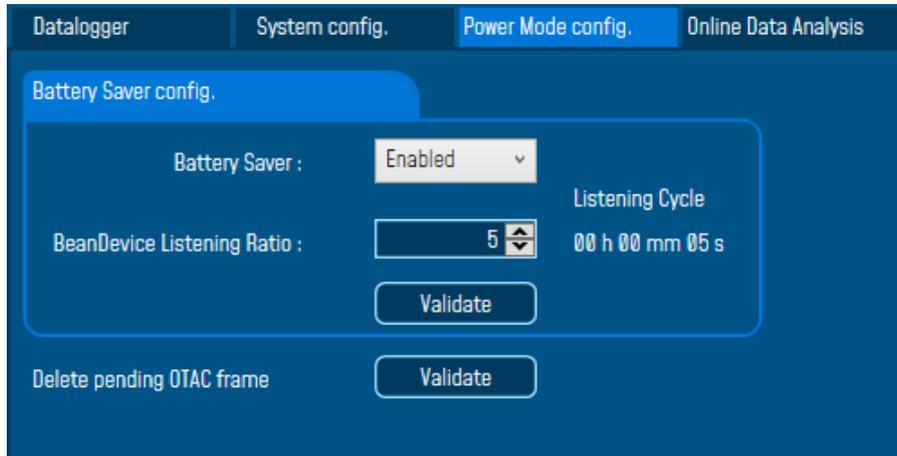


Figure 42 : Power mode management

Parameter	Description
Battery saver configuration	<p>Enable: Battery Saver power mode is enabled. The BeanDevice® operates on Saver battery power mode to decrease the power consumption.</p> <p>Disable: Battery Saver power mode is disabled, the BeanDevice® works in active power mode.</p> <p>Ratio: Fix the Ratio of the listening cycle. This ratio depends on the data acquisition low duty cycle.</p> <p><i>Example:</i> If the data acquisition is 30 seconds and the ratio is set to 5, the Listening cycle will be 150 seconds (5*30).</p>
Delete pending OTAC frame	By clicking on “validate”, the pending OTAC is deleted



How to enable battery saver power mode

7.8.8 Right click functionalities

BeanScope® offers access to quick functionalities in relation with BeanDevices®. By using the mouse, Right Click on the BeanDevice® profile then you can quickly

- **Change the Device Label**
- **Restart the Device**
- **Remove the Device**



Figure 43: Right Click on BeanDevice® Profile

7.9 SENSORS CONFIGURATION

The screen « *Sensor profile* » consists of three parts:

- 1 **General information on the measurement channel**
- 2 **Measurement channel configuration;**
- 3 **A graph, which displays in real-time sensor signals during data acquisition;**
- 4 **Clear graph, which erase the displayed graph;**

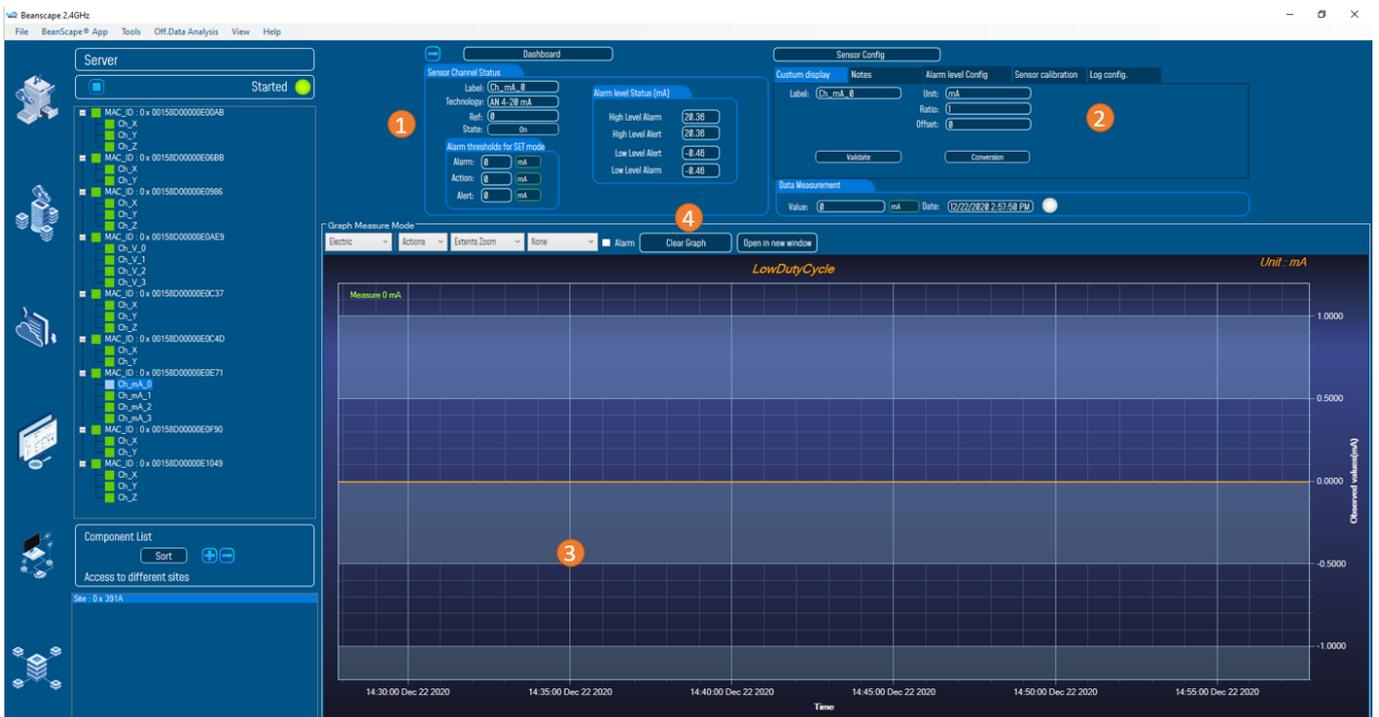


Figure 44: Sensor channel profile

7.9.1 Sensor profile

7.9.1.1 Frame: General information

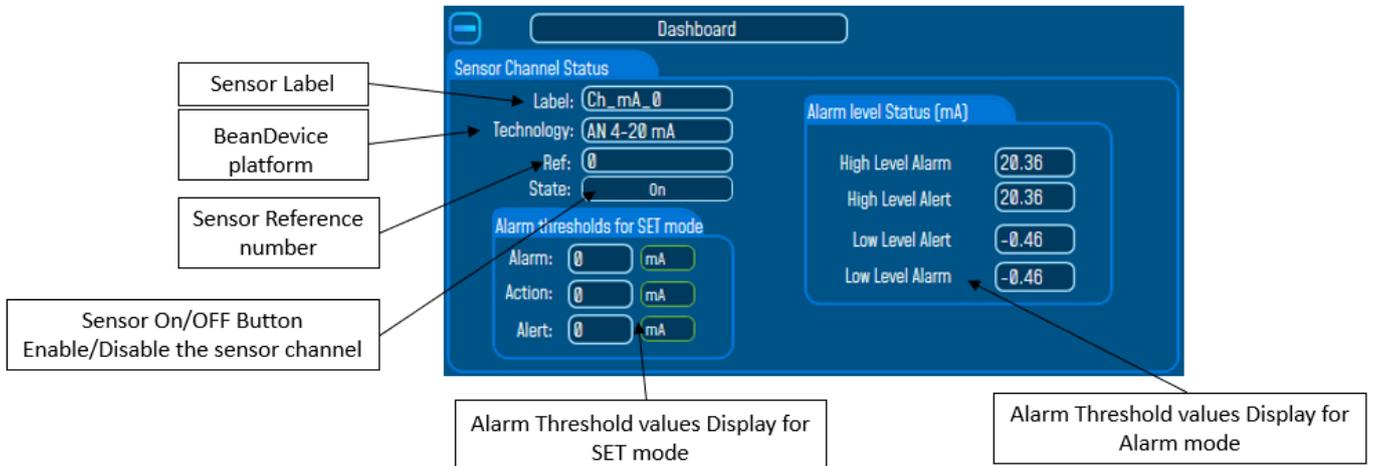


Figure 45: Sensor Channel General information frame

7.9.1.2 Frame: Measurement data

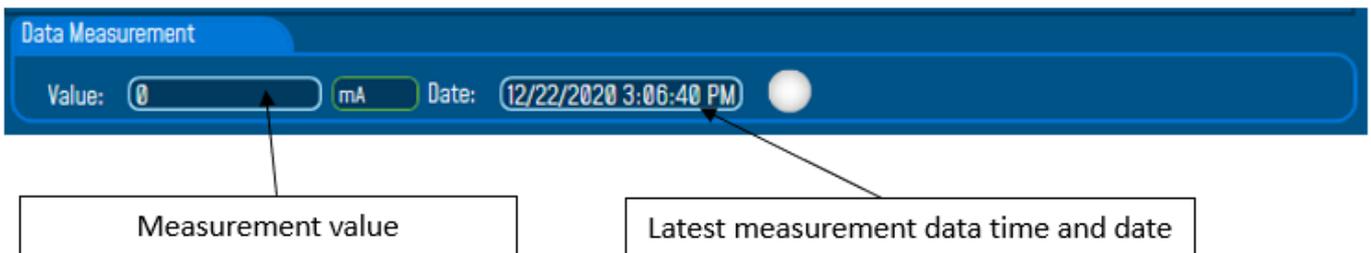


Figure 46: Measurement data frame

By default, sensor unit format is

- ✓ BeanDevice® AN-V : V
- ✓ BeanDevice® AN-mV : mV
- ✓ BeanDevice® AN-420 : mA

7.9.2 Sensor configuration & calibration

This frame contains a set of five tabs:

Custom Display	<ul style="list-style-type: none"> Allows the end user to customzie the sensor
Notes	<ul style="list-style-type: none"> Contains notes relating to the BeanDevice® sensor
Alarm Config	<ul style="list-style-type: none"> Sensor configuration interface. The user can configure the alarm thresholds related to the sensor Depending on the BeanDevice® version which is used, other configuration parameters are available
Sensor calibration	<ul style="list-style-type: none"> Sensor or measurement channel calibration
Log config.	<ul style="list-style-type: none"> Logs configuration on the BeanScape®
S.E.T Config	<ul style="list-style-type: none"> thresholds of S.E.T mode

7.9.2.1 Tab: Custom display

These parameters allow the user to customize his sensor:

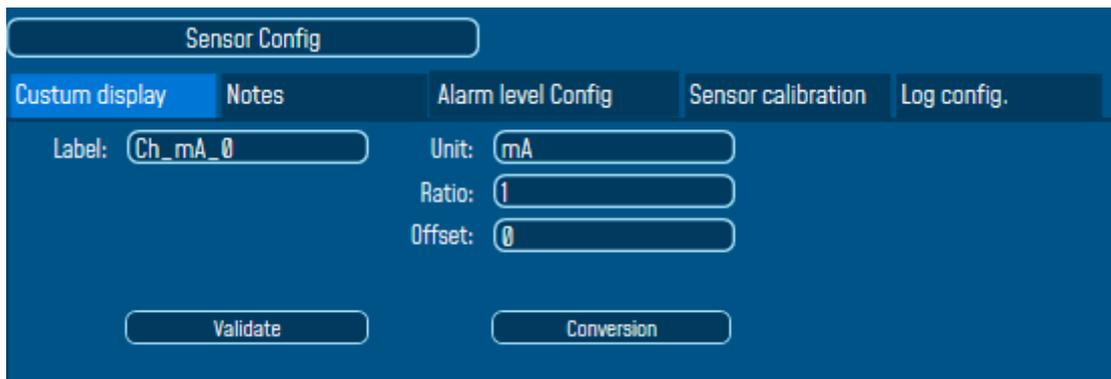


Figure 47: Hi-Inc sensor channel custom display tab

- ✓ **Unit:** customer sensor unit (bar, °C, l/h....)
- ✓ **Ratio:** Sensor Ratio coefficient (RAT);
- ✓ **Offset:** Sensor Offset Coefficient (OFF);
- ✓ **Label:** Give a name to your sensor. (ex: Sensor on Stator Machine 1, sensor in Room 2 Floor 3)

Measurement conversion formula:

$$\text{Converted Measurement} = \text{Measurement} \times \text{RAT} + \text{OFF}$$

Example with a temperature sensor: By default the temperature unit is in degree Celsius. The user wants to convert the unit of his temperature sensor in degree Fahrenheit.


$$\text{Converted Measurement [°F]} = \text{Measurement [°C]} \times \text{RAT} + \text{OFF}$$

With **RAT** = 1.8 and **OFF** = 32

Conversion assistant

To avoid conversion error, a conversion assistant is available to help you to setup quickly your measurement channel of your BeanDevice®.

Click on conversion assistant from the tab “Custom display”, a window will open allowing you to do a linear conversion.

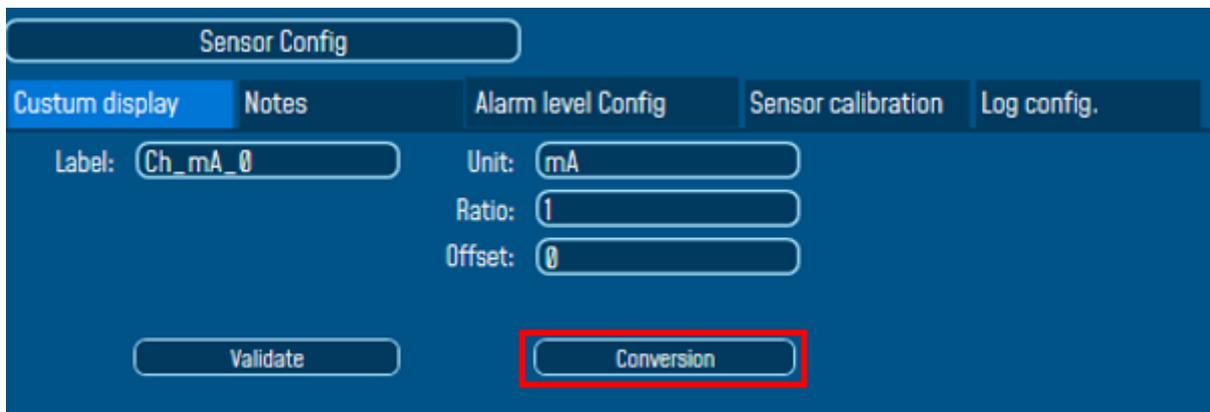

On the left column, the user can enter the non-converted measurement data. On the right column, the user can enter the converted measurement values with the desired unit.

The ratio and offset values are calculated automatically by the conversion assistant.

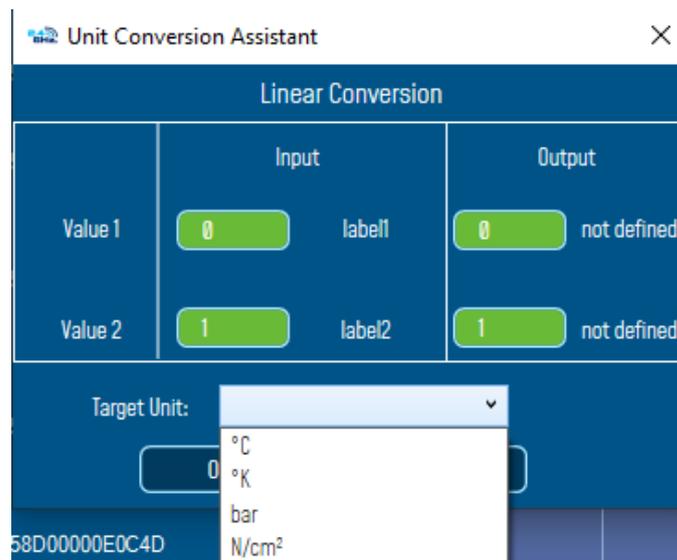


Figure 48: Unit Conversion Assistant

7.9.2.2 Tab: Notes


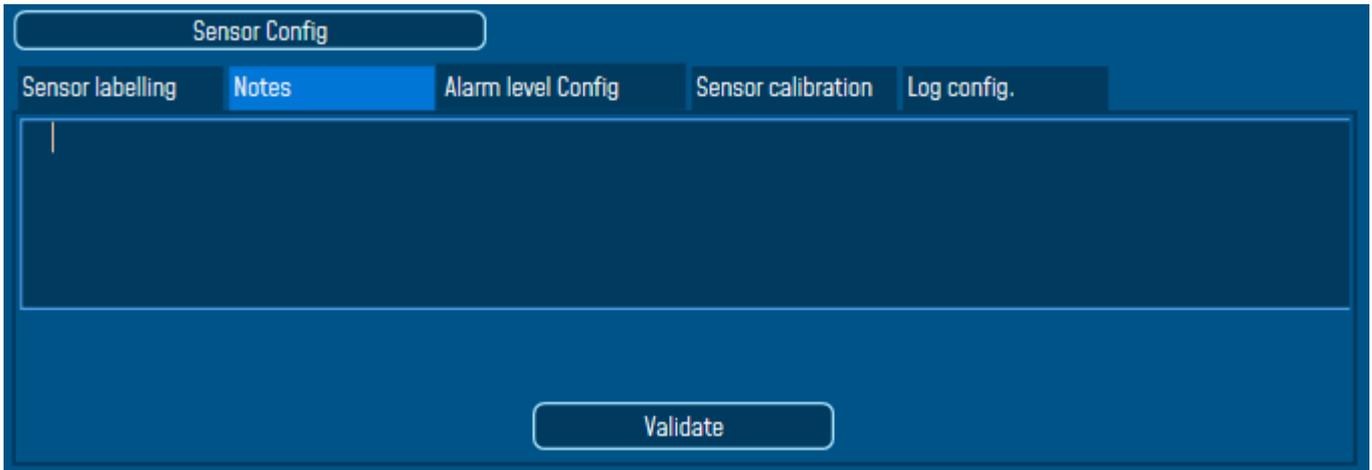


Figure 49: Sensor channel notes tab

This field contains notes relating to the BeanDevice® sensor. To change this field, enter a value or free text and click the “Validate” button.

A new window opens; accept your modifications by clicking on “OK”.

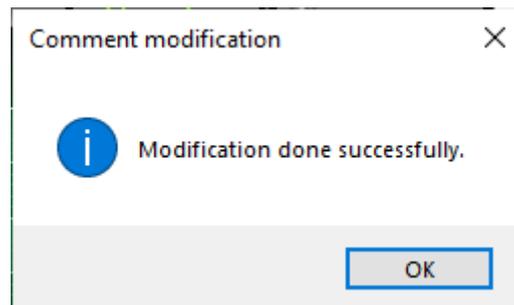

To back up your text click on the icon “Backup your Database” 

7.9.3 Calibrate the BeanDevice ProcessSensor

The CALYS 50 is a multifunction calibrator. It is specially designed for calibration and maintenance and can measure and simulate physical and electrical quantities, either on site or in the laboratory.

Measurement and transmission can take place simultaneously, with a double display.



Connect the channel of the BeanDevice to the calibrator's Output: Sens+ to the V and Sens- to COM

Then enter 1V from the calibrator and press ENTER to validate.

From the Beanscape software choose Unipolar mode as DAQ Polarity and configure the BeanDevice on LowDutyCycle with 6s.

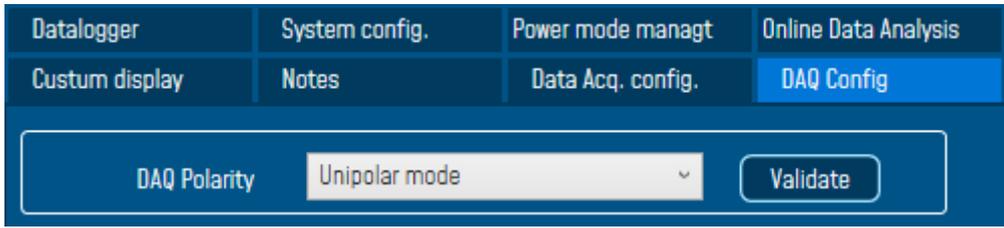


Figure 50: Polarity config

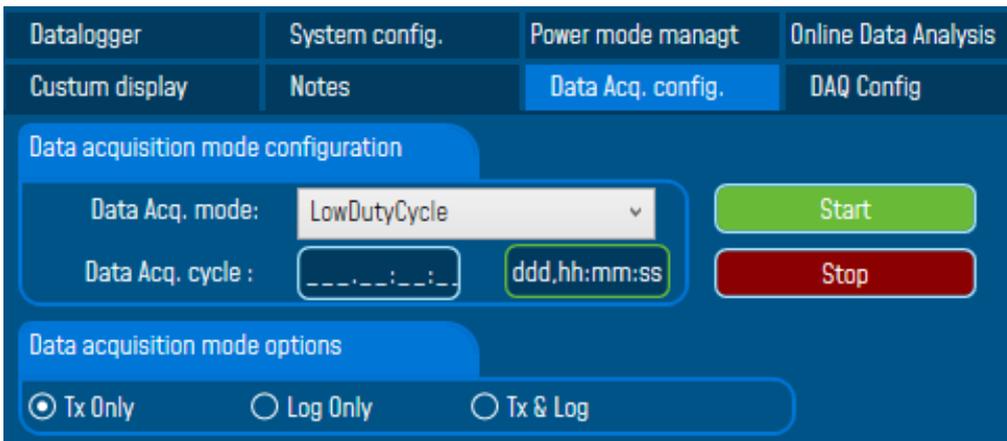


Figure 51: DAQ configuration tab

Then select the sensor profile used for calibration and copy the displayed value from the Measurement data frame.



Figure 52: Current Data measurement frame

Paste the value in the excel sheet in front of the corresponding injected value

CH0		Bipolar	Unipolar	Injected value (Volts)
sample1				1
sample2				4
Ratio				
offset				

The ratio will be automatically displayed.
Do the same steps with the second injected value, then copy the ratio and the offset values.

CH0	Bipolar	Unipolar	Injected value (Volts)
sample1		1.1893	1
sample2		4.0914	4
Ratio		1.033734192	
offset		-0.229420075	

Now from the BeanScape software select DAQ Calib. Unipolar and past the ratio and offset values then validate.

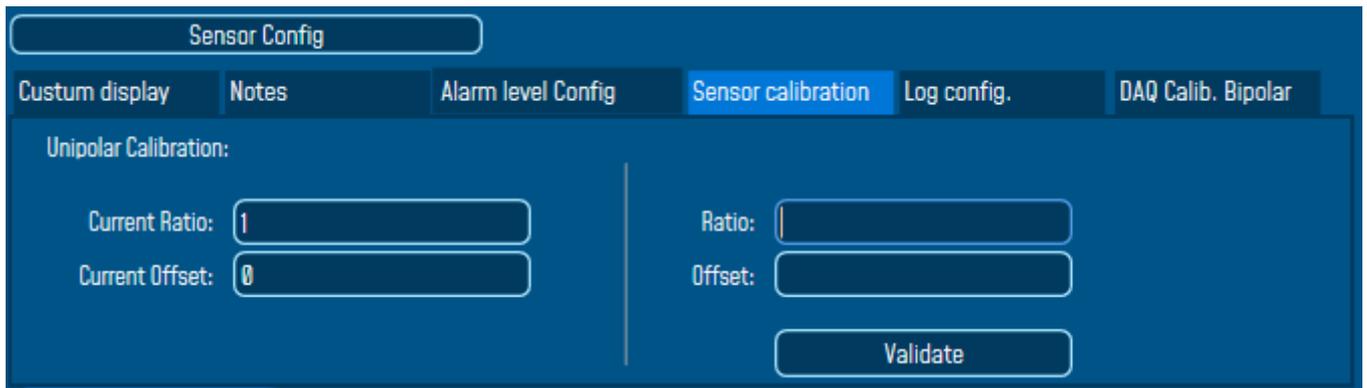


Figure 53: Sensor calibration

For Bipolar calibration you repeat the same steps.

7.9.3.1 Tab: Configuration

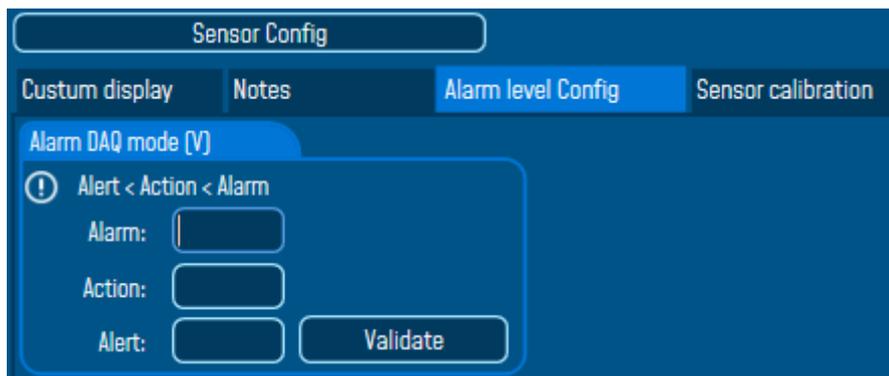


Figure 54: Alarm level config tab

Parameter	Description
Alarm threshold configuration	<p>You can configure threshold high values (High level alarm, High level alert) and low values (Low level alarm, Low level alert). In alarm mode, when a higher low threshold value is reached, an alarm notification is transmitted to the BeanGateway;</p> <p>If the sensor value is higher than High level alarm/High level alert, notification is send to the BeanGateway/BeanScape;</p> <p>If the sensor value is lower than Low level alarm/Low level alert, notification is send to the BeanGateway/BeanScape.</p> <p>Threshold values must be organized in this manner: High level alarm >=High level alert > Low level alarm >= Low level alert</p>

7.9.3.2 Tab: DAQ calibration Bipolar

These coefficients are used to calibrate the external sensors & Light sensor

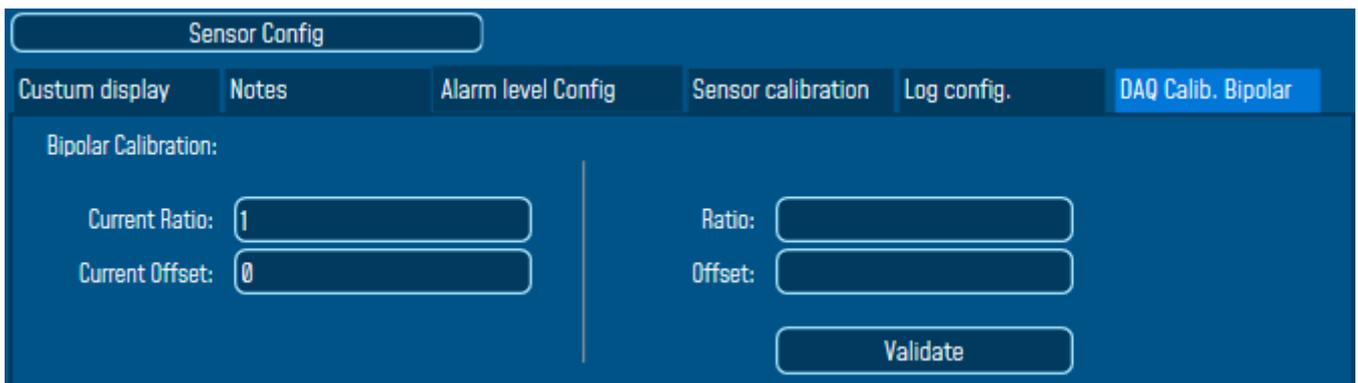


Figure 55: DAQ Calibration tab

The BeanScape® provides a calibration interface for each measurement channel:

- **Ratio** : multiplier coefficient
- **Offset**: adder/subtracted coefficient. Its unit is the sensor unit.

$$\text{Calibrated value} = (\text{Ratio} \times \text{Non Calibrated Value}) + \text{Offset}$$

Enter the calibration coefficients and then click on Validate.



The calibrations coefficients are saved on the BeanDevice® flash memory and are conserved during the lifetime of your product.



WARNING: These calibration coefficients should be accessible to an advanced user. A wrong calibration will result in false measurements.

Tab: Log configuration



This tab should not be confused with the Datalogger function available on the BeanDevice®

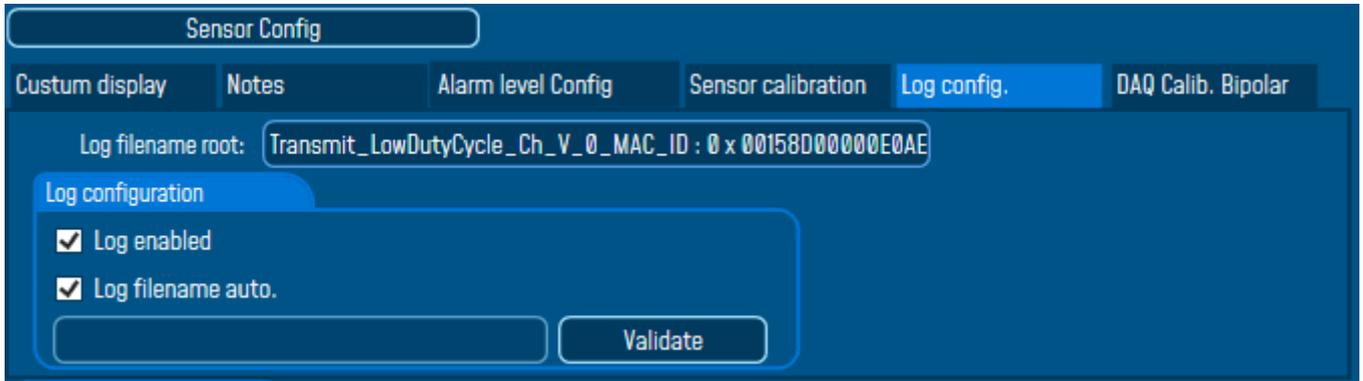


Figure 56: Log configuration tab

By default, Log file name is built with the measurement channel & BeanDevice® MAC Address:

< Sensor Channel Number > <MAC_ID>

- ✓ **Log enabled:** If checked, Log is enabled on the BeanScope®
- ✓ **Log filename auto.:** If checked, Log file name is named automatically

Click on **validate** in order to validate all your modifications.

For users who want to rename the log file, two solutions are provided:

Solution 1	<p>Add automatically the channel “Label” in your log file name:</p> <p><Label><Sensor channel Number> <MAC_ID></p>
Solution 2	<p>The log file name can be fully customized:</p> <p>Uncheck the case « Log filename auto” and add your own label</p>

7.9.4 Graphical display


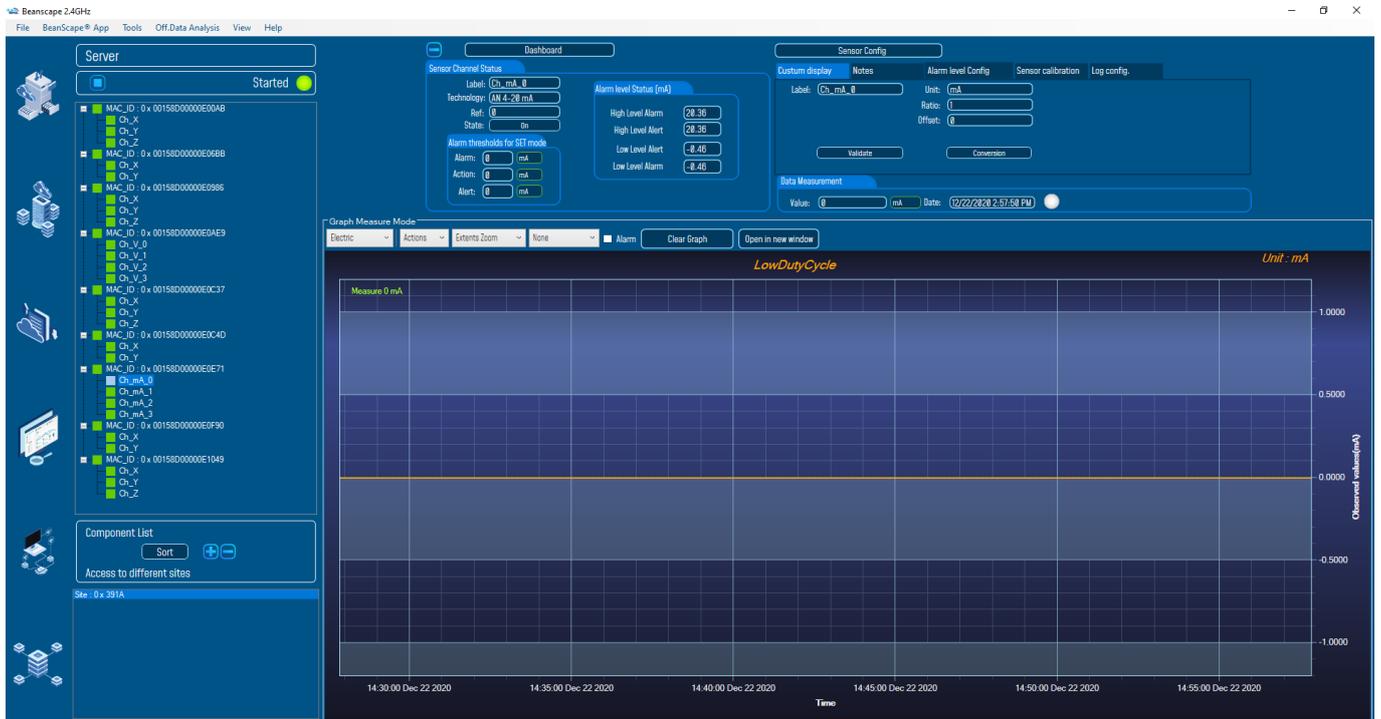


Figure 57: Channel acquisition graph visualization

The chart is composed of two parts:

- **Part 1:** This is a preview window, allowing you to observe sensors acquisitions:
- **Part 2:** A strip on the side composed of different frames allows customizing the graph;

The graph has two axes:

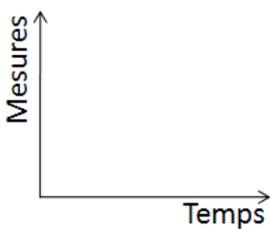

Axe-X: Timeline


Axis-Y: received sensor acquisitions

The BeanDevice® data acquisition mode and the last data acquisition can be visualized directly from the graph.




Figure 58: Graph visualization

7.9.4.1 Frame: Display

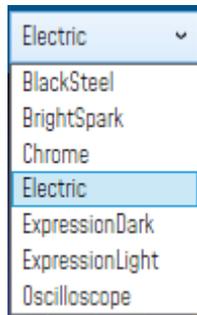

7.9.4.2 Frame: Symbols

From this frame, you can select the display mode of action of the chart. Three types of symbols are available:

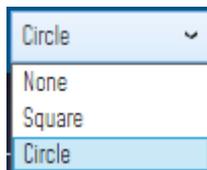

Circle: Brings up a point on each bar graph

Square: brings up a square on each measure of the graph


None: No logs is displayed on the graph



Figure 59: Graph measure mode: Frame Marks

7.9.4.3 Frame: Scale

From this frame, the scaling of the graphics can be customized to suit your needs.

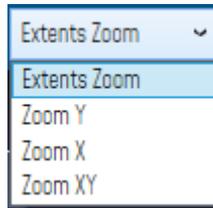

Checkbox "Zoom X and Y Zoom"

These boxes are useful for performing a graph zoom from the mouse wheel, there are four cases:

- **Case 1:** Case "Zoom X" ticked. The graph zoom will only affect the X axis.
- **Case 2:** Case "Zoom Y" ticked. The graph zoom will only affect the Y axis.
- **Case 3:** Case "Zoom XY" ticked." Zoom will affect both X and Y axes
- **Case 4:** Case "Zoom X", "Zoom XY" and "Zoom Y" not ticked. The zoom function from the mouse wheel is disabled.

7.10 DATALOGGER CONFIGURATION

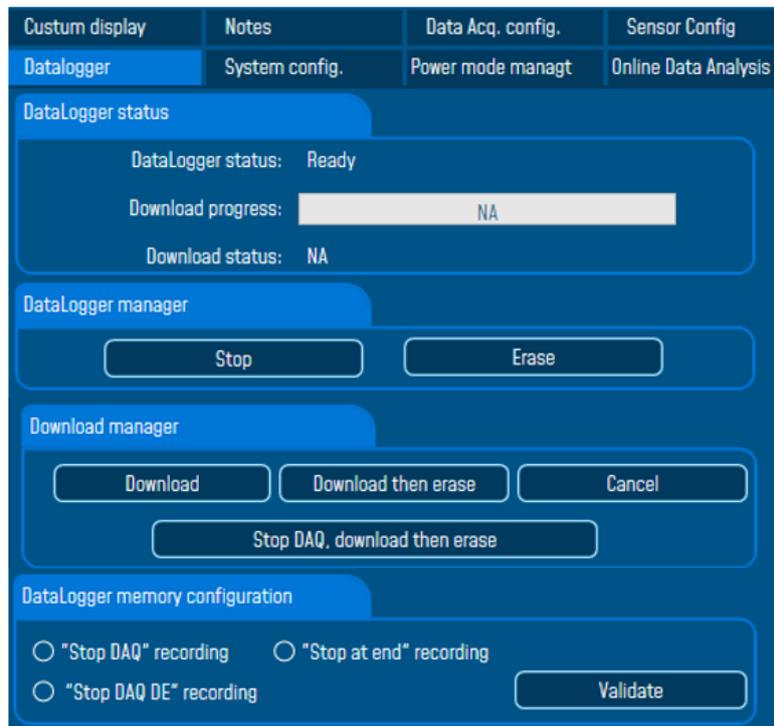



Figure 60: BeanDevice® Datalogger tab



Please read the technical note [TN_RF_007 – “BeanDevice® Datalogger User Guide”](#)

7.11 LOG FILE ORGANIZATION

7.11.1 Log File System Overview

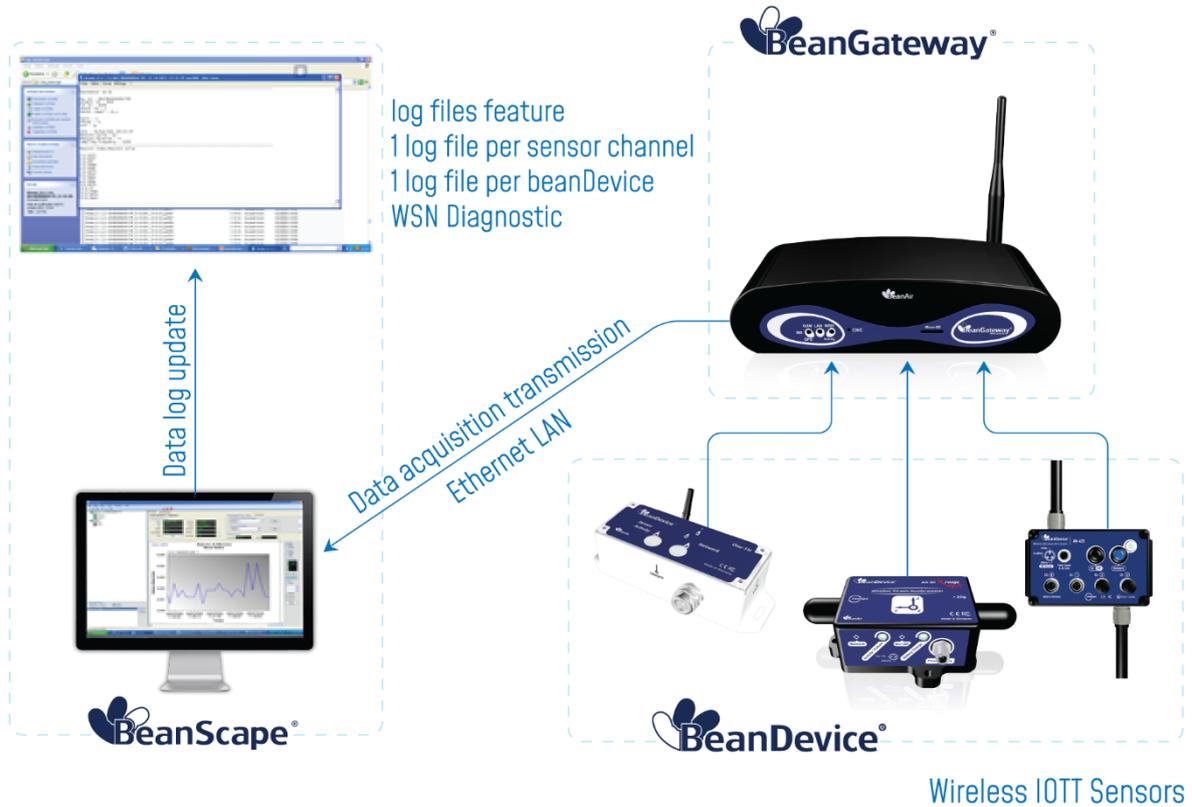

7.11.2 Log file directory

By default, the Log file directory is: **C:\log_beanscape**



The following procedure applies only for advanced users

Click on the tab Tools then Options to configure advanced settings in BeanScape®:

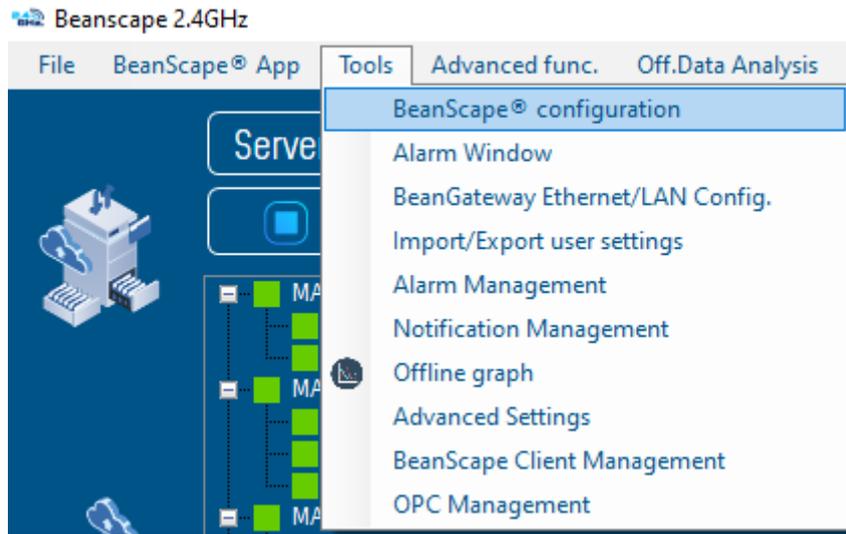


Figure 61: BeanScape® configuration menu

This window lets you configure the logs, and the data cache.

- You will see the following window:

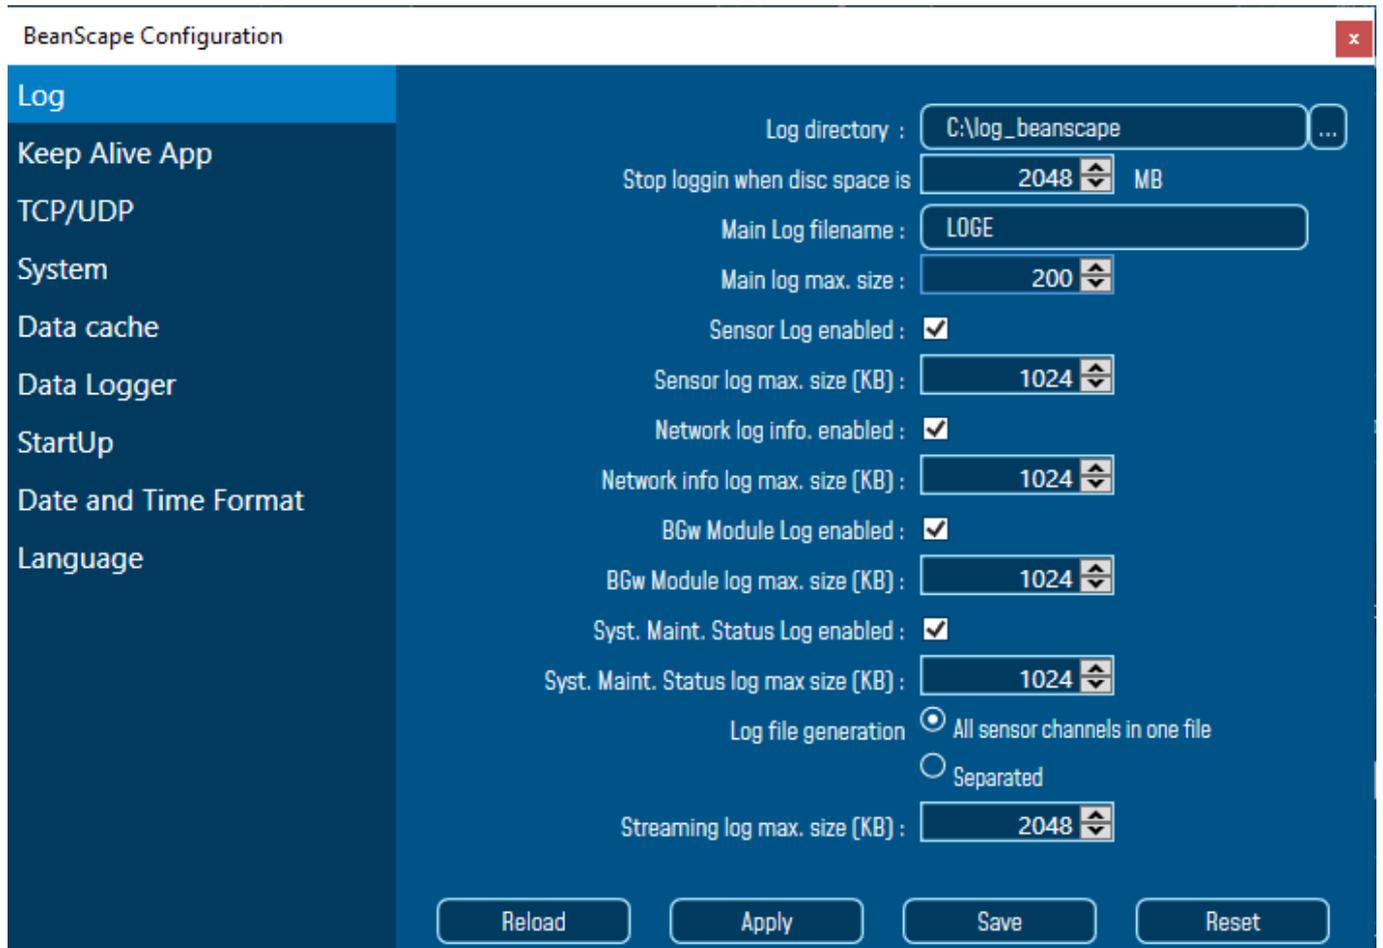


Figure 62: BeanScape® configuration window

■ Clicking the button  reverts back to its original configuration.

Log Folder

By Default, log files linked to the **BeanDevice®** are stored in the log folder (located in C:/log_beanscape directory):

“Folder MAC_ID”

Only the last 4 Char of BeanDevice® MAC ID are displayed.

User can change log folder name by clicking on “Custom display” tab located on the **BeanDevice®** profile:

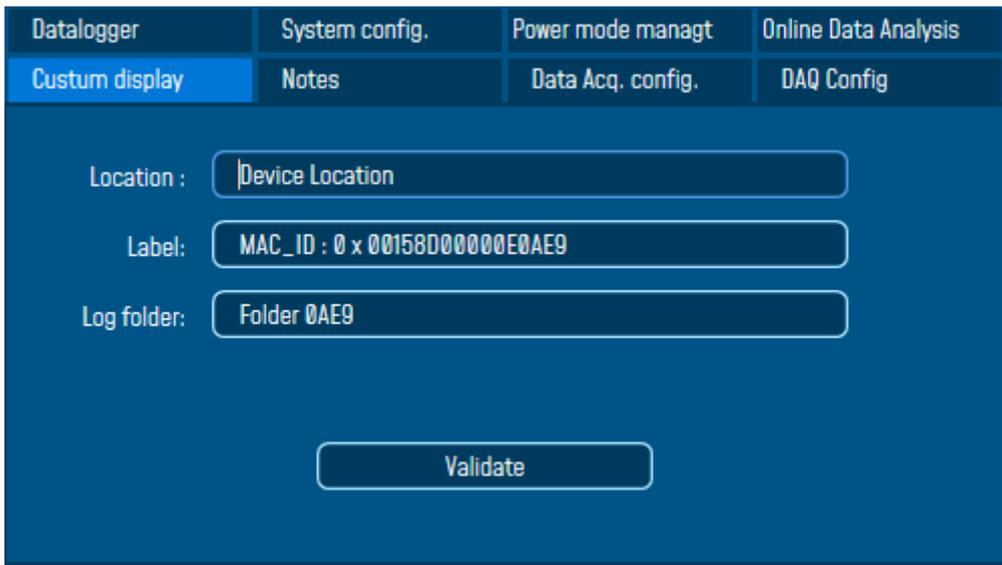


Figure 63: BeanDevice® Custom Display tab

Enter your own log folder name, then click on validate.

The following example shows the log folder changed to “Factory2”:

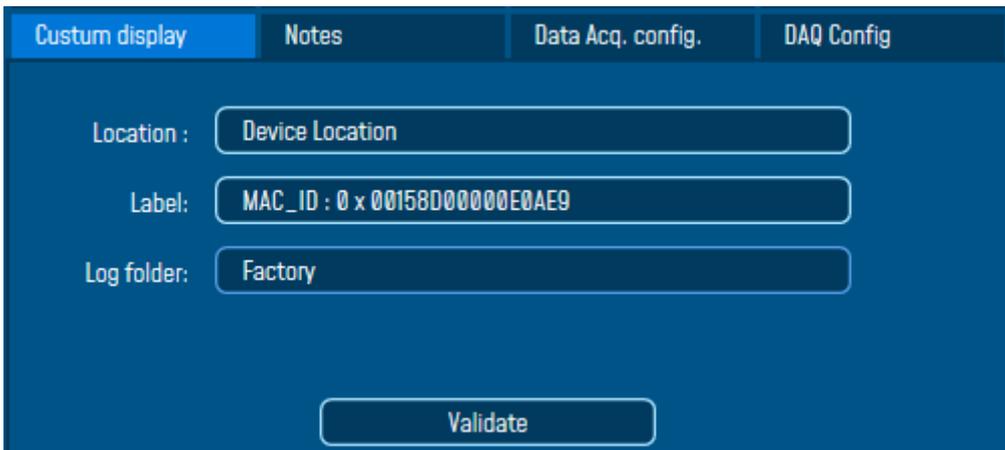


Figure 64: BeanDevice® custom display settings

7.11.3 Log file size configuration

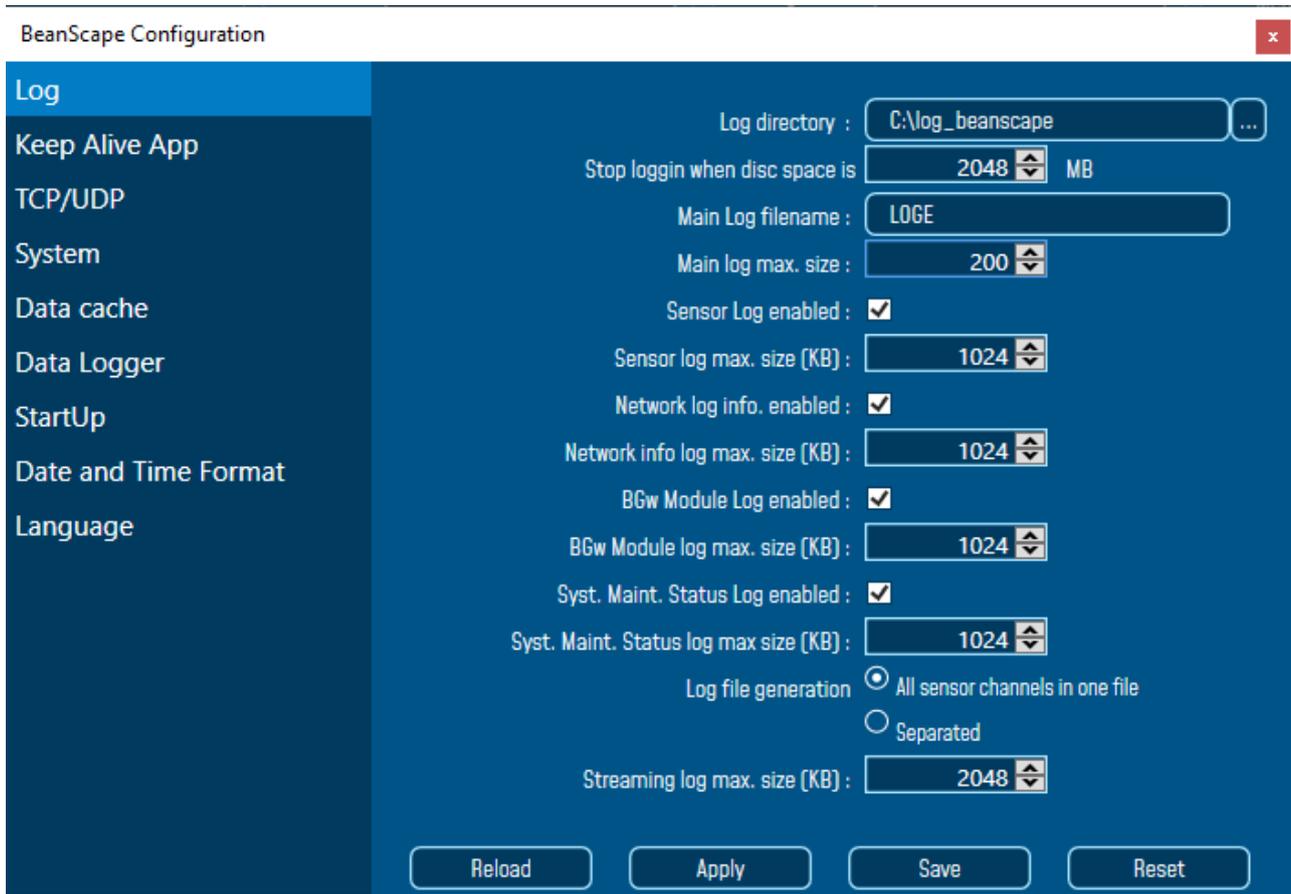


Figure 65: Logfile settings

- ✓ **LOG directory:** Enter here the path/folder where you would want to save the LOG files.
- ✓ **Main log filename:** Here you may enter the desired name in order to save the LOG file.
- ✓ **Main log max. size (KB):** Maximum file size in Kilobytes (KB) for your principal LOG file
- ✓ **Sensor Log Enabled:** Check this box if you want to enable the sensor(s) data acquisition in your LOG file
- ✓ **Sensor log max. size (KB) :** Maximum size in Kilobytes (KB) of sensor log files (**except** for streaming data acquisition mode)
- ✓ **Network log info. enabled :** Check this box if you want to enable network information in your LOG file
- ✓ **Network info log max. size (KB) :** Maximum size in Kilobytes for your network information LOG file
- ✓ **Streaming log max. size :** Maximum size in Kilobytes (KB) of sensor log files (**only** for streaming data acquisition mode)

7.11.4 Log file generation

By default, 1 log file is linked to 1 sensor channel. The user can select a log file linked to all the sensor channels present on the BeanDevice®.

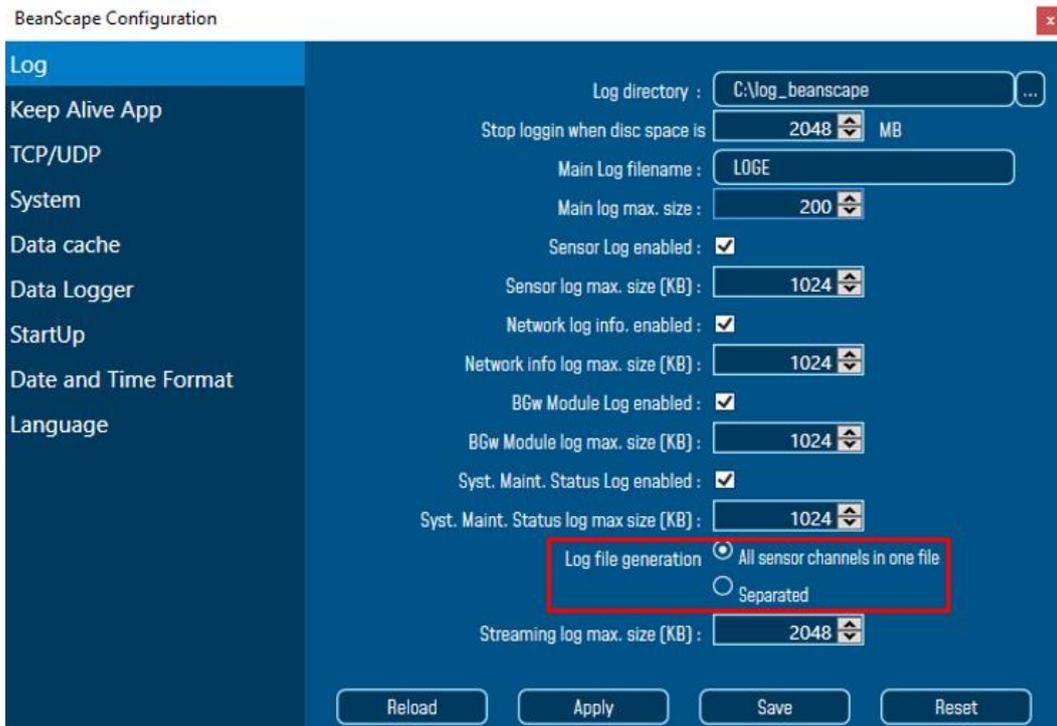


Figure 66: Log file generation options

- You should have all channels data recorded in one single file located in your C:\log_beanscape directory

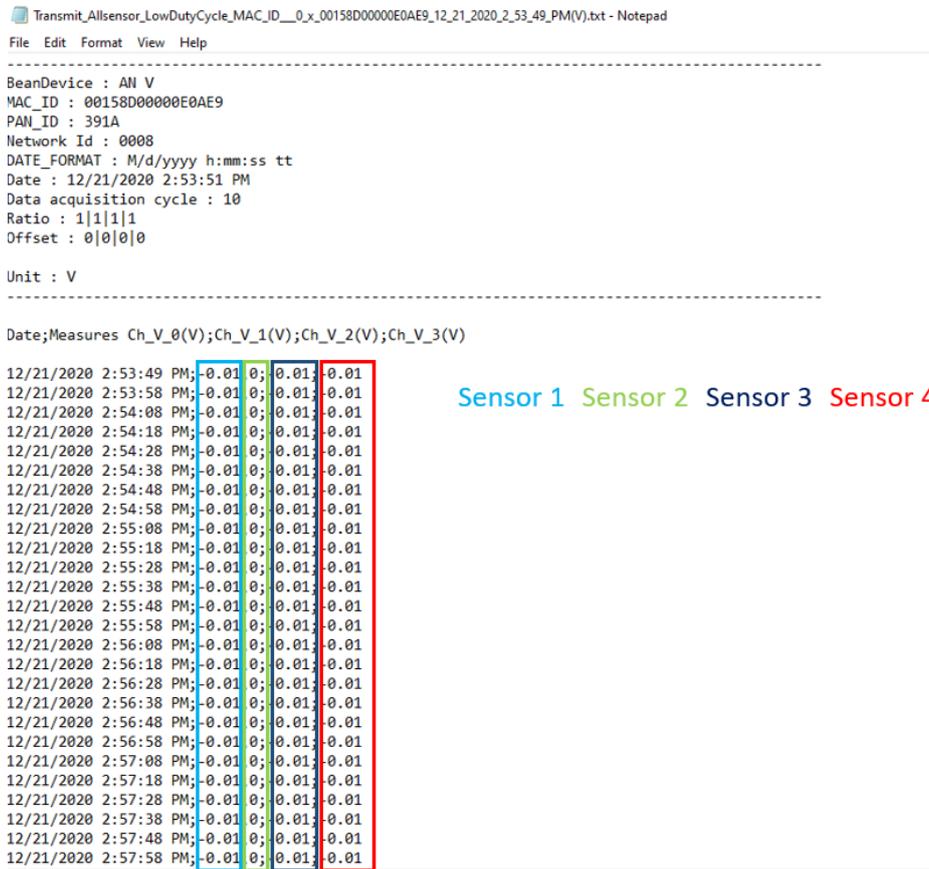


Figure 67: Example of Log file

7.11.5 Cache Data Configuration (for Graph)

BeanScape Configuration

Log	Max. points :	5000
Keep Alive App	Max. packets :	6
TCP/UDP	Max. diagnostics :	1000
System	Max. BGw Module status nbr. :	100
Data cache	Syst. Maint. Status max nbr :	500
Data Logger	Max. alarms :	25
StartUp	Max. streaming points :	5000
Date and Time Format		
Language		

Reload Apply Save Reset

Figure 68: Data cache configuration options

- ✓ **Maximum number of points:** Set here the maximum number of points displayed on the BeanScape® graph
- ✓ **Maximum number of packets:** Set here the maximum number of packets displayed on the BeanScape® graph
- ✓ **Max number of diagnostics:** Set here the maximum number of diagnostics displayed on the BeanScape® graph
- ✓ **Max number of alarms:** Set here the maximum number of alarms displayed on the BeanScape® graph
- ✓ **Maximum streaming points:** Set here the maximum number of points displayed in Streaming on the BeanScape® graph



Please note that the values backed up by the BeanScape® may affect the memory capacity of your computer depending upon the size of every file.

7.11.6 Log file related to data acquisition

7.11.6.1 Log filename root

For each sensor channel a log file is automatically created by the BeanScape®.
 The user can easily change the log file root:



Figure 69: Log Config tab on BeanScape®



This tab should not be confused with the Datalogger feature available on the BeanDevice®.

For further information, please refer to the section [Log configuration](#).

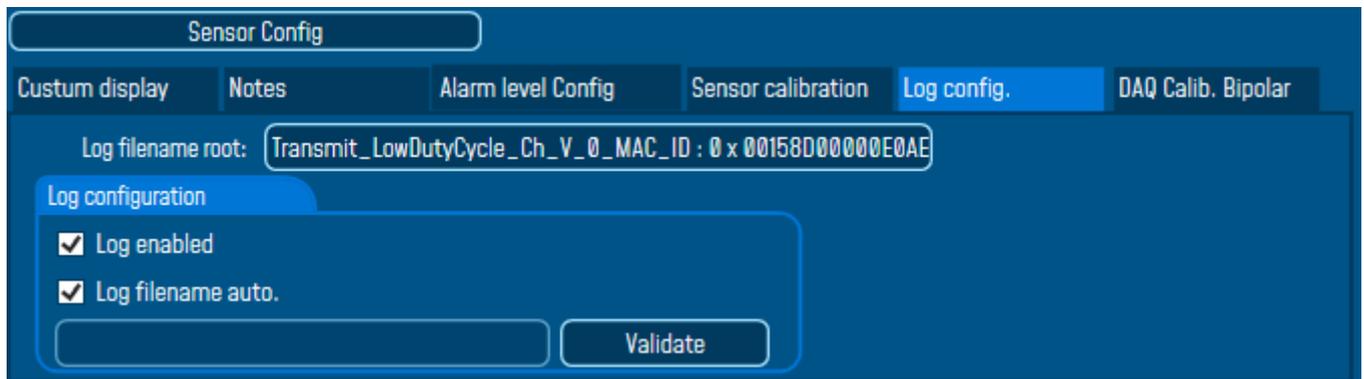


Figure 70: Log config tab

By default, Log file name is built with the measurement channel & **BeanDevice®** MAC Address:

< Sensor Channel Number > <MAC_ID>

- ✓ **Log enabled:** If checked, Log is enabled on the BeanScape®
- ✓ **Log filename auto.:** If checked, Log file name is named automatically

Click on **validate** in order to validate all your modifications.

For users who want to rename the log file, two solutions are provided:

Solution 1	Add automatically the channel "Label" in your log file name: <Label><Sensor channel Number> <MAC_ID>
Solution 2	The log file name can be fully customized: Uncheck the case "Log filename auto" and add your own label

7.11.6.2 Specific case: log filename creation in "Streaming" mode

In Streaming mode, log filename is built as follow:

Stream_Sensor_channel_MAC_ID_DATE_partXXX

- ✓ **Sensor channel = Sensor channel**
- ✓ **MAC_ID: BeanDevice® MAC ID**
- ✓ **DATE: date when the streaming mode starts**
- ✓ **partXXX : Log file sequence number, part000 corresponds to the first log file**

Example:

Stream_0 x 0_0 x 00158D000004C79F_02-11-2011_17.55.05_part000

Stream_0 x 2_0 x 00158D000004C79F_02-11-2011_17.55.05_part001

Stream_0 x 1_0 x 00158D000004C79F_02-11-2011_17.55.05_part001

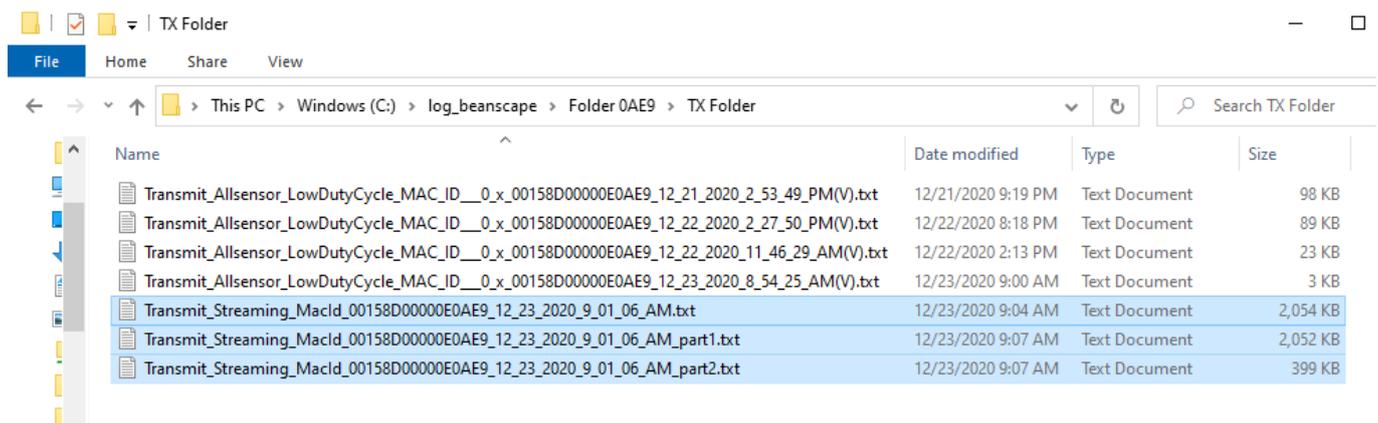


Figure 71: log file parts

7.11.6.3 Log file analysis

```

Transmit_Streaming_MacId_00158D00000E0AE9_12_23_2020_9_01_06_AM.txt - Notepad
File Edit Format View Help
-----
BeanDevice : AN V

Mac Id : 00158D00000E0AE9
Network Id : 0008
Pan Id : 391A
Ratio : 1|1|1|1
Offset : 0|0|0|0

Unit : V
DATE_FORMAT : M/d/yyyy h:mm:ss tt
Date : 12/23/2020 9:01:06 AM

Data acquisition cycle : NA
Data acquisition duration : NA
Sampling rate : 400
-----
Index;Measures Ch_V_0(V);Ch_V_1(V);Ch_V_2(V);Ch_V_3(V)

0;0;0;-0.01;-0.01;
1;0;0;-0.01;-0.01;
2;-0.01;0;-0.01;-0.01;
3;-0.01;0;-0.01;-0.01;
4;-0.01;0;-0.01;-0.01;
5;-0.01;0;-0.01;-0.01;
6;-0.01;0;-0.01;-0.01;
7;-0.01;0;-0.01;-0.01;
8;-0.01;0;-0.01;-0.01;
9;-0.01;0;-0.01;-0.01;
10;-0.01;0;-0.01;-0.01;
11;-0.01;0;-0.01;-0.01;
12;-0.01;0;-0.01;-0.01;
13;-0.01;0;-0.01;-0.01;
14;-0.01;0;-0.01;-0.01;
15;-0.01;0;-0.01;-0.01;
16;-0.01;0;-0.01;-0.01;
17;-0.01;0;-0.01;-0.01;
18;-0.01;0;-0.01;-0.01;
19;-0.01;0;-0.01;-0.01;
20;-0.01;0;-0.01;-0.01;
21;-0.01;0;-0.01;-0.01;
22;-0.01;0;-0.01;-0.01;

```

Figure 72: Log file example (Streaming mode)

The date which is displayed in the log file corresponds to the date when the streaming mode starts.

Measure index allows the user to use a timestamp, the time value between the Index N and N+1 corresponds to the period rate.

Example: Data acquisition starts at 17h55min05s

A data acquisition with a measurement index of 30 (value -0,0035) corresponds to a time 17h55min05s30ms.

7.11.7 Log file organization in "Streaming" mode

7.11.7.1 Log file naming format

In Streaming mode, log file is built with a different format:

Stream_**Sensor_channel**_**MAC_ID**_**DATE**_part**XXX**

- ✓ **Sensor channel = Sensor channel**
- ✓ **MAC_ID: BeanDevice® MAC ID**
- ✓ **DATE: date when the streaming mode starts**
- ✓ **partXXX: Log file sequence number, part000 corresponds to the first log file**

Example:

Stream_0 x 0_0 x 00158D000004C79F_02-11-2011_17.55.05_part000

Stream_0 x 2_0 x 00158D000004C79F_02-11-2011_17.55.05_part001

Stream_0 x 1_0 x 00158D000004C79F_02-11-2011_17.55.05_part001

7.11.7.2 Log file analysis

Log file related to wireless network diagnostic provides the following information:

- **Date** : diagnostic date
- **LQI TX**: Link quality indicator on the BeanDevice® side
- **LQI RX**: Link quality indicator on the BeanGateway® side
- **Local PER Tx**: Local Packet Error Rate on the BeanDevice® side
- **Local PER Rx**: Local Packet Error Rate on the BeanGateway® side
- **Global PER**: N.A.
- **Battery voltage**: internal battery voltage
- **Battery level**: battery level of charge
- **Internal temperature**: Local temperature of the BeanDevice®

```

00158D0000E0AE9_WirelessNetwkInfo.txt - Notepad
File Edit Format View Help
-----
BeanComponent Wireless Network Information
DATE_FORMAT : M/d/yyyy h:mm:ss tt
Date : 12/21/2020 2:53:48 PM
PAN_ID : 391A
MAC_ID : 00158D0000E0AE9
-----

Date ; LQI Tx ; LQI Rx ; Local PER Tx ; Local PER Rx ; Battery Voltage ; Battery Level ; Internal Temperature ; DisableDischarge ;

12/21/2020 2:53:46 PM;126;0;0;0;4.108;87.65;20.750;N;N;N;N;N;0.00
12/21/2020 2:54:28 PM;138;0;0;0;4.108;87.65;22.125;N;N;N;N;N;0.00
12/21/2020 2:55:18 PM;144;0;0;0;4.108;87.65;23.250;N;N;N;N;N;0.00
12/21/2020 2:56:08 PM;174;0;0;0;4.108;87.65;24.000;N;N;N;N;N;0.00
12/21/2020 2:56:58 PM;132;0;0;0;4.108;87.65;24.500;N;N;N;N;N;0.00
    
```

Figure 73: Wireless Network Info log file

If the BeanDevice® is configured with the streaming data acquisition mode, the following diagnostic information are not refreshed:

- **Battery voltage**
- **Battery level**
- **Internal temperature**

```

Fichier Edition Format Attichage ?
-----
BeanComponent Wireless Network Information
Date : 5/15/2014 4:50:44 PM
PAN_ID : 31BB
MAC_ID : 00158D0000AD564
-----


Date ; LQI Tx ; LQI Rx ; Local PER Tx ; Local PER Rx ; Global PER ; Battery Voltage ; Battery Level ; Internal Temperature

5/15/2014 4:50:43 PM;174;NA;0.00;NA;0.00;4.094;0.00;24.625;N;N;N;N;N; NA
15/05/2014 16:50:45.000000;168;;0.00;;;;
15/05/2014 16:50:45.150000;180;;0.00;;;;
15/05/2014 16:50:45.300000;162;;0.00;;;;
15/05/2014 16:50:45.450000;168;;0.00;;;;
15/05/2014 16:50:45.600000;174;;0.00;;;;
15/05/2014 16:50:45.750000;186;;0.00;;;;
15/05/2014 16:50:45.900000;138;;0.00;;;;
15/05/2014 16:50:46.050000;144;;0.00;;;;
15/05/2014 16:50:46.200000;160;;0.00;;;;
    
```


Figure 74: Wireless Network Info log file during streaming mode

7.11.7.3 How to open a measurement file with excel


Step 1 : Open Excel

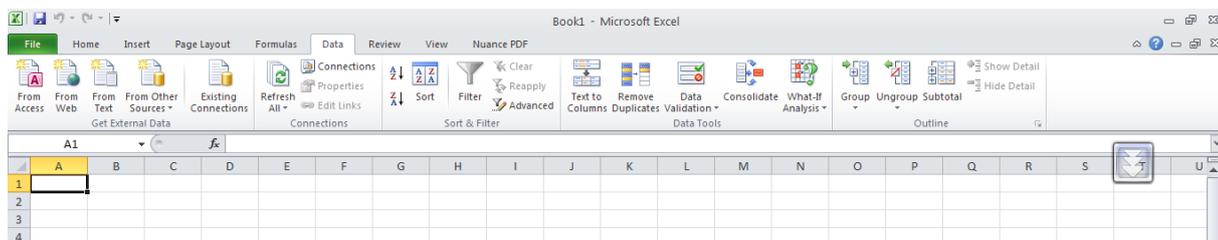

Step 2: Go on « Data » Tab, then select “From Text”

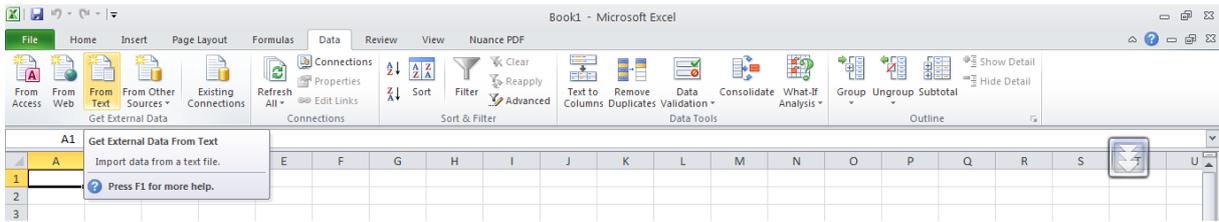


Step 3 : Choose your log file

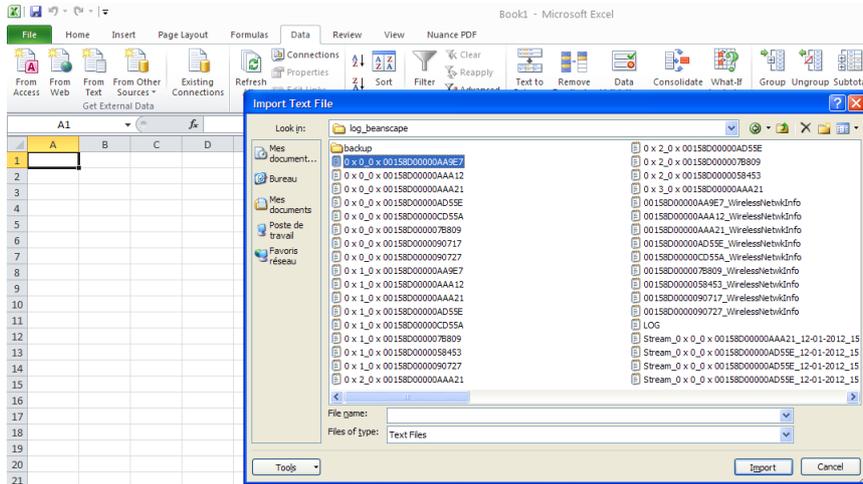

Step 4: Text import wizard will open, select « Delimited » for Characters such as commas or tabs separate each field.


On **“Start import at row”** field: Select the number of lines that you want to suppress from the header:

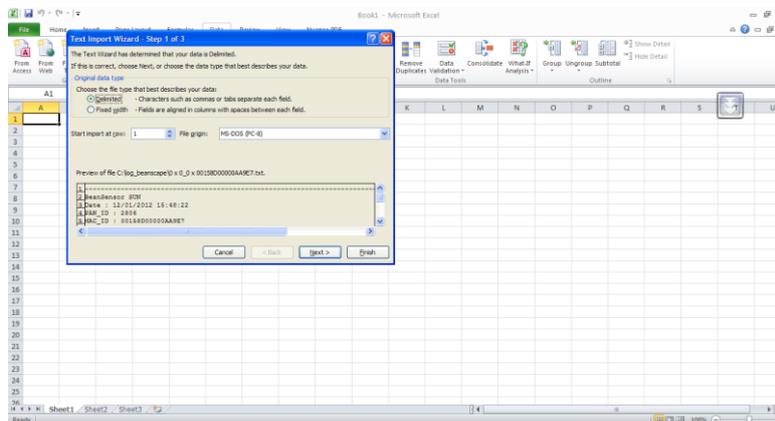


Select semicolon




Select Text

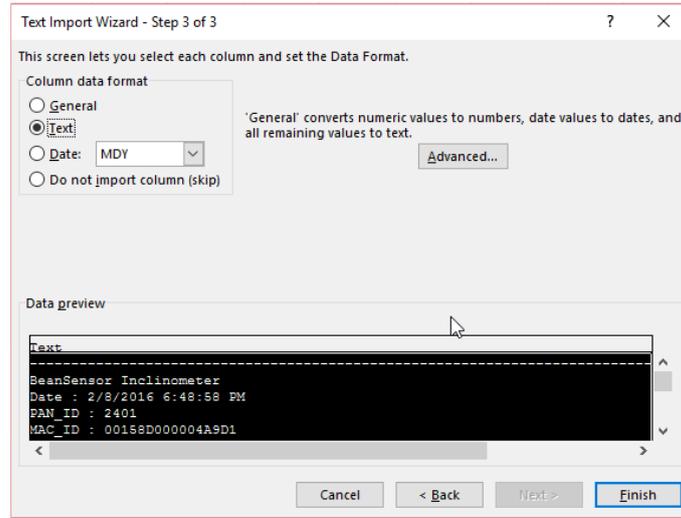

Click on OK

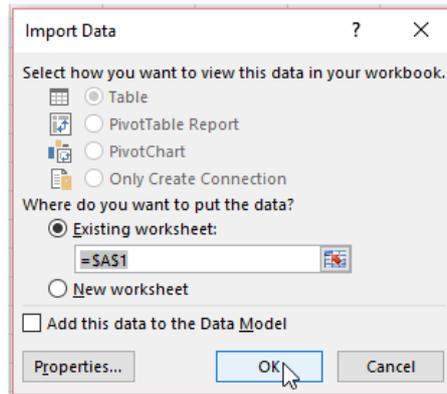

Click on format cells:

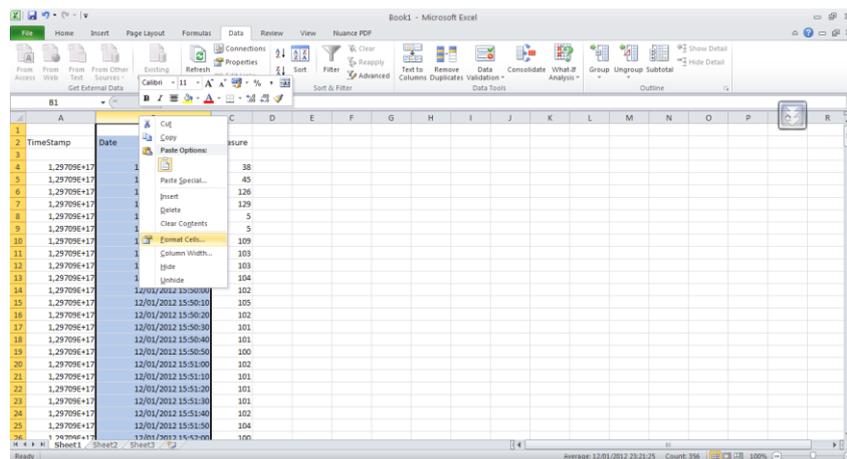

[See "Exporting a log file to Excel" YouTube video](#)

7.11.7.4 Calibration settings log file

Once you connect the BeanDevice® to the BeanGateway® for the first time, all the calibration values will be backed up in the Calibration settings log file inside the BeanDevice folder.

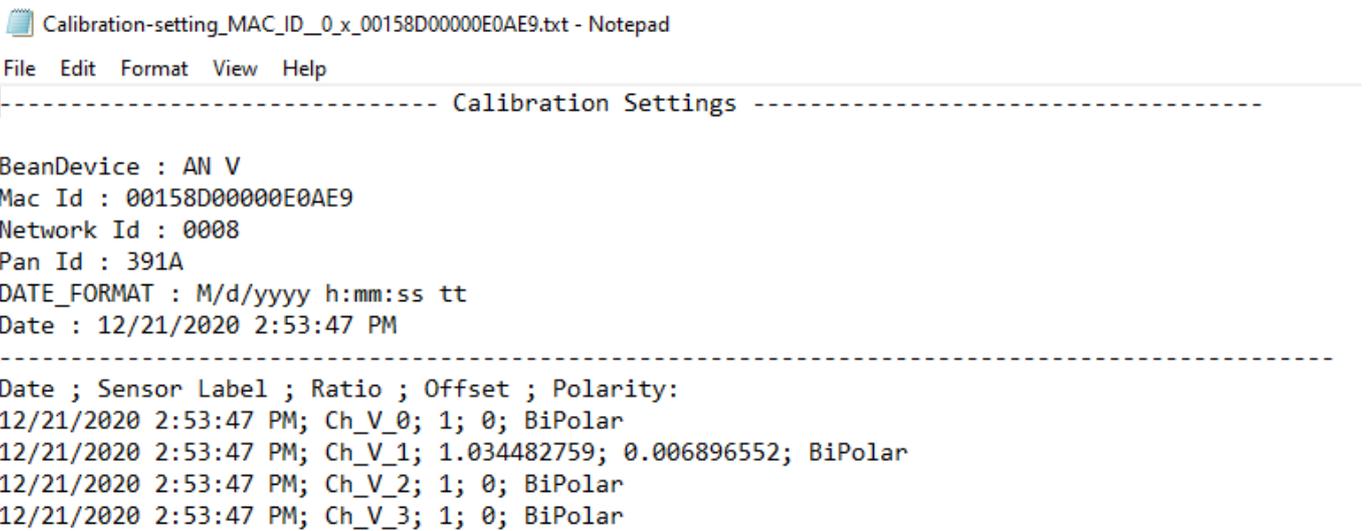
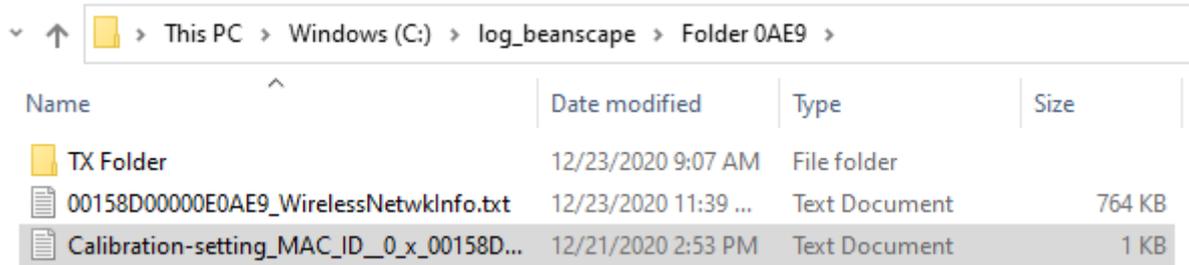


Figure 75: Calibration log file

If you change the your BeanDevice® calibration values, you can easily retrieve them from the calibration settings log file.

8. ALARM MANAGEMENT

8.1 EMAIL CONFIG

User can receive alarms notification by email. This function is only available with “Alarm” data acquisition mode and “S.E.T” mode.

From your BeanScape® software click on “Tools” tab then “Alarm Management”

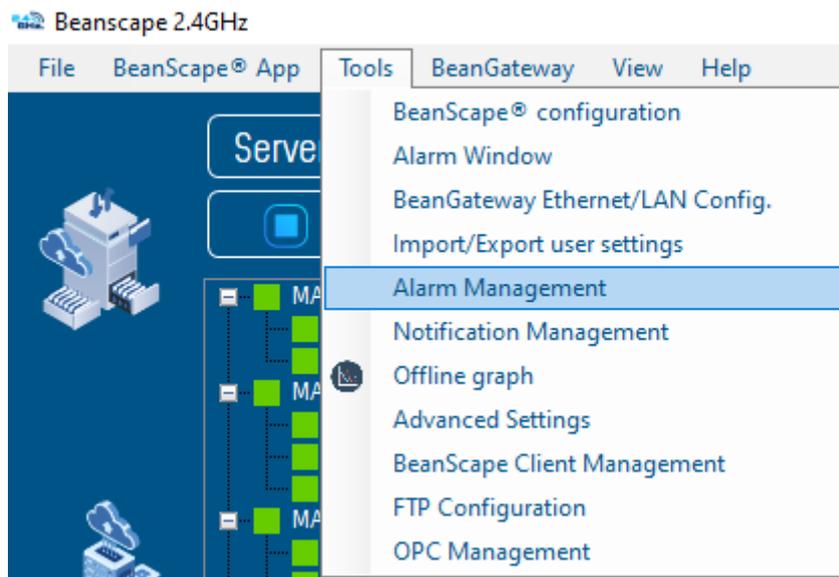


Figure 76: Alarm management menu

A new window will pop up with **SMTP configuration** and reports management, also other system related to alarm notification (Internal temperature, Battery level, Packet Error Rate, Link Quality Indicator) are configured from this window

Check on **Enable Notification by email**: **Enable Notification by email** and fill out the parameters described below:

Field	Description
<i>From</i>	<i>Enter the email address sending the alarm notification</i>
<i>To</i>	<i>Enter the receiver(s) address(es) for alarm notification (max. 3)</i>
<i>SMTP server</i>	<i>Enter your Outgoing SMTP server</i>
<i>Port</i>	<i>Enter your port Number for your outgoing SMTP server</i>
<i>User name</i>	<i>Enter your full email address</i>
<i>Password</i>	<i>Enter the password (case sensitive) of your email account</i>
<i>Max Email per minute</i>	<i>Maximum number of emails allowed to be sent in one minute</i>

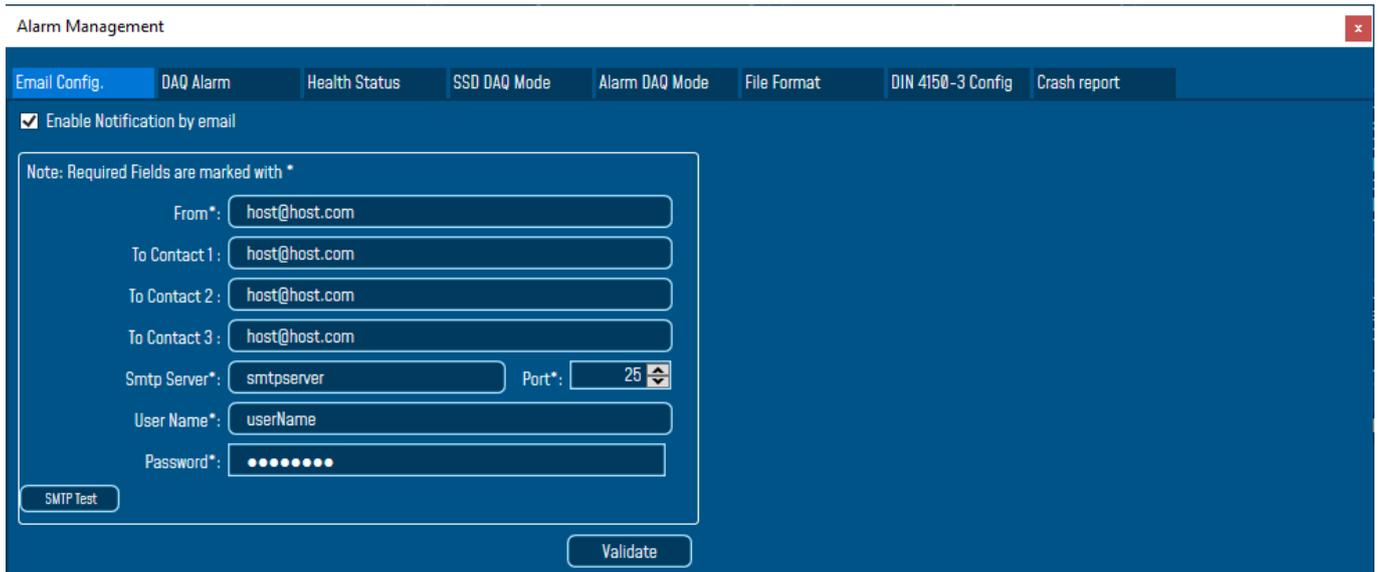


Figure 77: Alarm management window



Users who use the Gmail or Hotmail emails, it's recommended to use the port number 25 while setting the SMTP configuration. Otherwise, users will face issues concerning receiving the Alarm emails.



Do not use the port number 488 instead of 25 while configuring the SMTP server in order to cancel all the issues that might affect the process of receiving the Alarm Emails.



Concerning the number port of the Gmail and Hotmail SMTP, it's highly recommended to use the port number 25 for both servers. DO NOT use any other port number

8.2 DAQ ALARM

The **DAQ alarm** is related to the **S.E.T mode**, you can select Report format (word, PDF, png) and the specific Report/File related to the S.E.T mode to be sent via email.

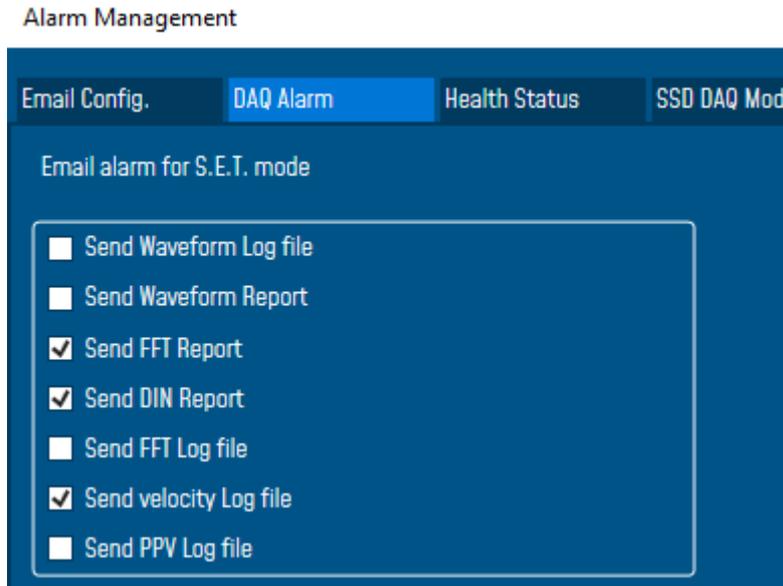


Figure 78: Frame: Email alarm for S.E.T mode



More details about FFT Report/ Log files can be found on the Data acquisition modes available on the BeanDevice [Technical note](#)



See « Alarm by email » Youtube video



See «S.E.T mode for 2.4GHz» Youtube video

If a threshold is reached, it is possible to have audio alarm on your PC, it is also possible to import your own MP3 sound.

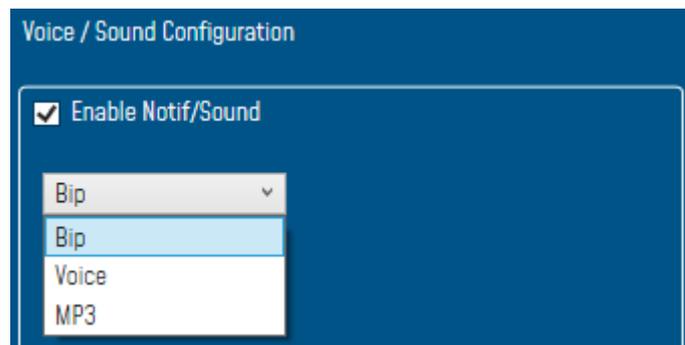


Figure 79: Frame: Sound config

8.3 ALARM DAQ MODE

To enable email notification for Alarm mode, navigate to [Alarm DAQ Mode](#) tab check [Enable email](#), for Audio notification on PC check [Enable Notif/Sound](#)

Alarm Management

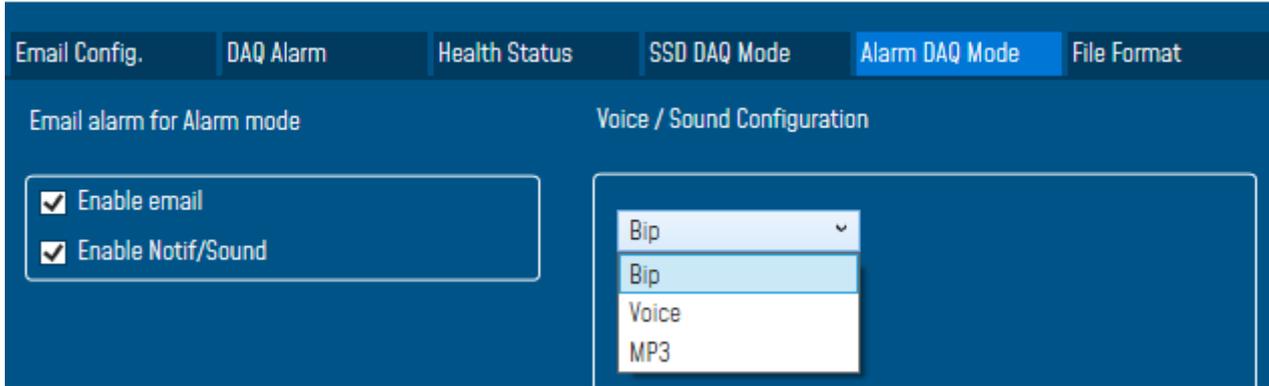


Figure 80: Email alarm for Alarm mode

To Test your Configuration, you can send a test email by clicking on SMTP Test, if everything is ok, you will receive a validation email then Validate and close the window.



Figure 81: Alarm Mailing SMTP Test

8.4 SYSTEM ALARM

Same as the DAQ Alarm tab, the **System Alarm tab** contains SMTP configuration in order to receive notification on system status:

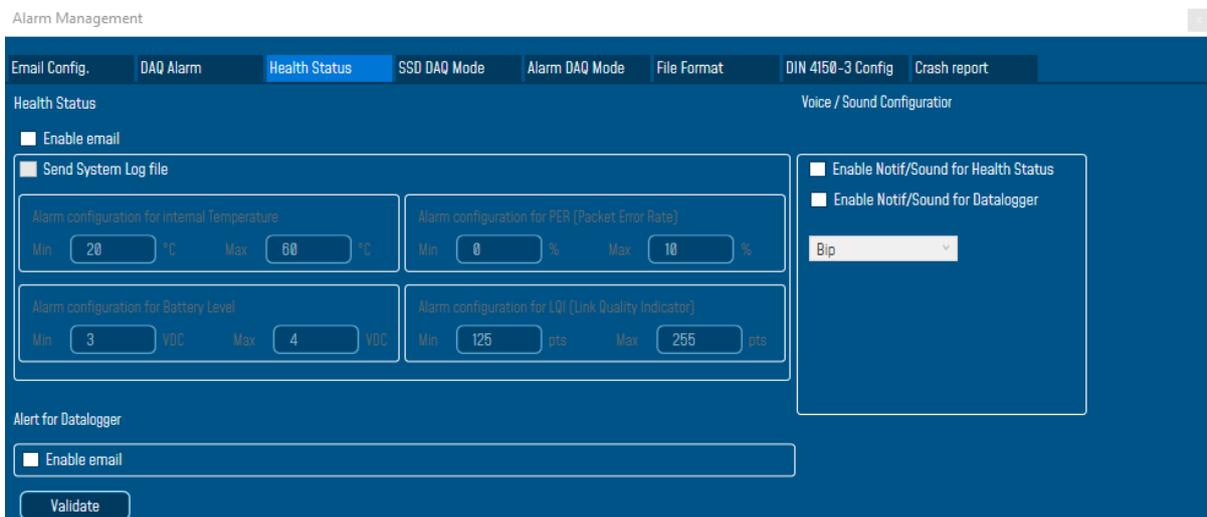


Figure 82: BeanDevice® Health Status management

- **Internal temperature:** email notification if the internal temperature reached the pre-defined levels.
- **Battery level:** email notification if the battery level reached the pre-defined minimum and maximum voltages.
- **Packer error rate (PER):** email notification if the PER reaches the pre-defined levels
- **Link quality indicator (LQI):** email notification when the LQI reaches the pre-defined levels

Check Send System Log file to receive all the related information within a log file.

Figure 83: System Alarm Settings

From System Alarm, user can receive Alert for Datalogger by enabling Notification or Emails, also receiving Alert for Diagnostic.

Figure 84: Enable/Disable Notif/mail for Diagnostic and Datalogger

8.5 FILE FORMAT

In this area, user can choose the report format and apply a custom document header setting as uploading a logo and other textual information related to monitoring site:

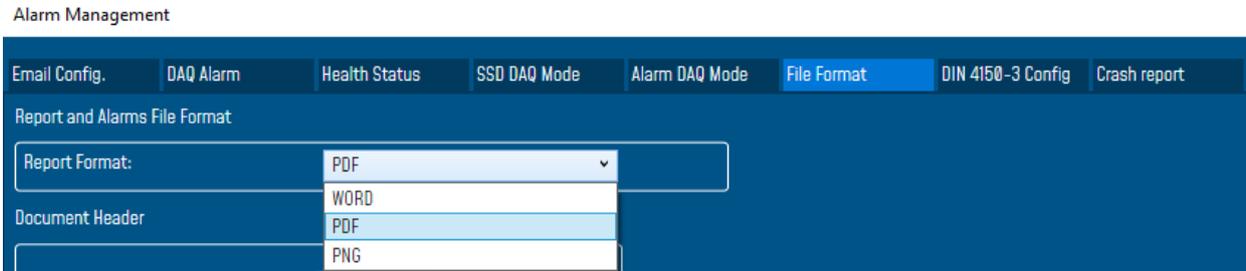


Figure 85: File Format settings

- **Logo:** Choose a picture to define it as a logo
- **User Name:** Use a specific User name
- **Monitoring Site:** Name you Monitoring Site
- **Location:** Your Monitoring Site location



Figure 86: Alarm Note settings

8.1 CRASH REPORT

If the software crashes down, the user can send us a detailed report within all the information related to this crash.

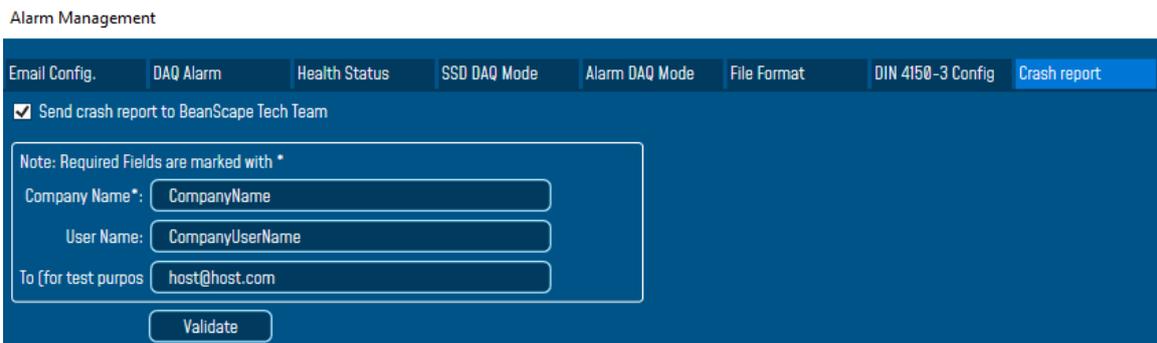


Figure 87: Crash Report settings

9. TOOLS TAB

Many features are available in the tools tab, so user has access to several options and configurations related to BeanScape® & BeanDevice® management.

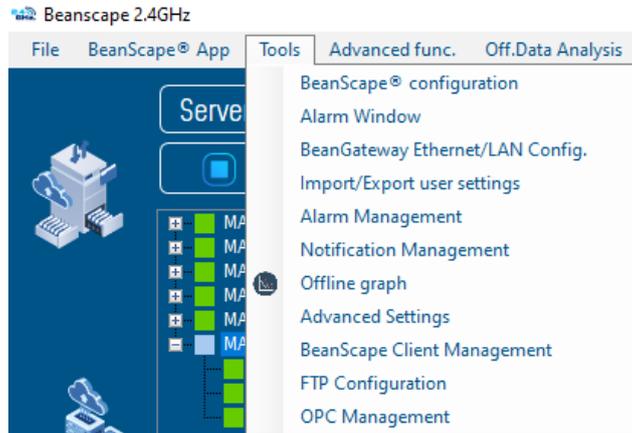


Figure 88: Tools tab main menu

9.1 BEANSCAPE® CONFIGURATION

BeanScape® menu window contains several configuration options related to the system configuration, Log file management and many other options.

9.1.1 Log file configuration

Here the user can manage the log file size, log file name, log file generation option and so on.

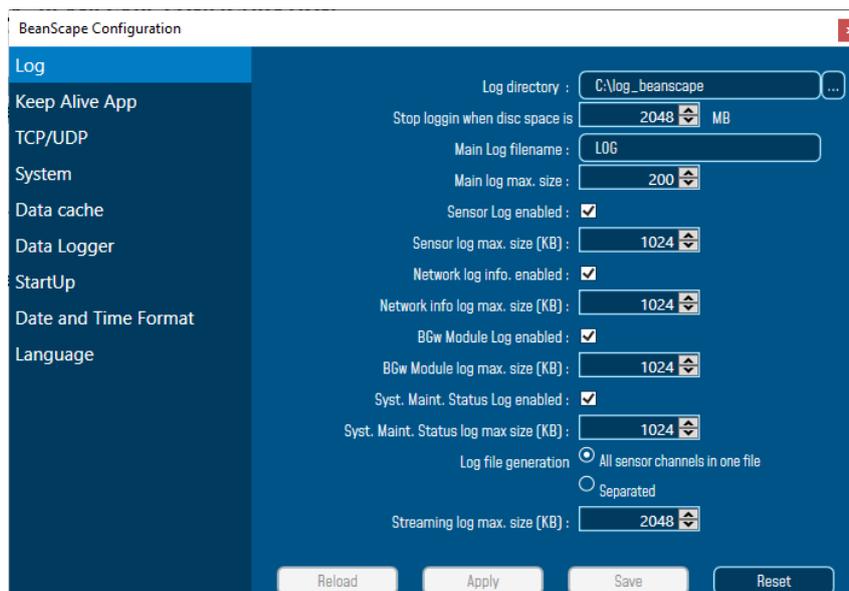


Figure 89: Log file configuration

9.1.2 Keep Alive App

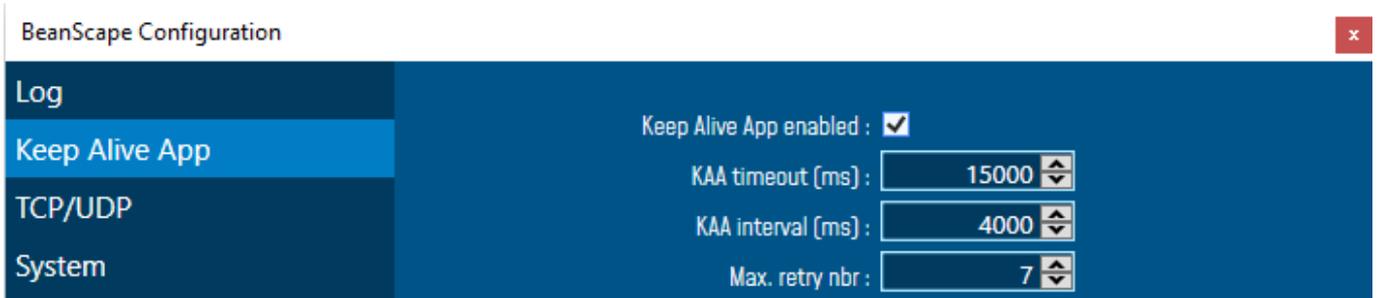


Figure 90: Keep Alive app

Three parameters related to keepalive are available:

- **Keep alive timeout** is the duration between two keep alive transmissions in idle condition. TCP keepalive period is required to be configurable and by default is set to no less than 2 hours.
- **Keep alive interval** is the duration between two successive keep alive retransmissions, if acknowledgement to the previous keep alive transmission is not received.
- **Max retry** is the number of retransmissions to be carried out before declaring that remote end is not available.

Keepalive packet contains null data. In a TCP/IP over Ethernet network, a keepalive frame is of 60 bytes, while acknowledge to this also null data frame and is of 54 bytes.

9.1.3 BeanGateway® Configuration via TCP/UDP

User can change the TCP/UDP ports and UDP server. By default, the TCP port is set to 5313, UDP port 53130 and the UDP server is 127.0.0.1

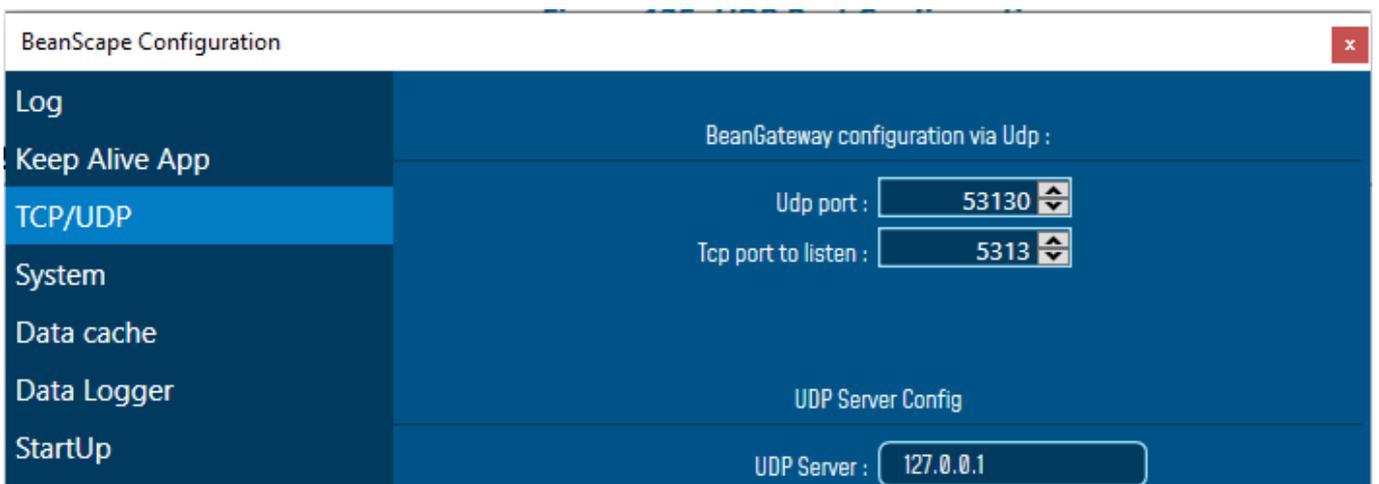


Figure 91: TCP/UDP configuration

9.1.4 System Configuration

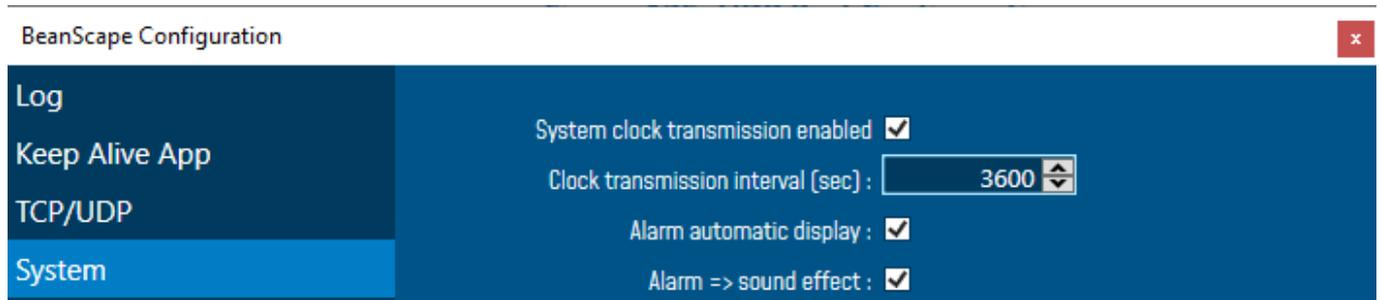


Figure 92: System Config

- ✓ **System clock transmission enabled:** Check this box to enable the system clock transmission.
- ✓ **Clock transmission interval:** Choose the clock transmission interval in seconds.
- ✓ **Alarm automatic display:** Check this box if you want to see an alarm window displayed automatically when a window alarm threshold is exceeded.
- ✓ **Alarm → Sound Effect:** Check this box if you want to hear a sound effect when a threshold is exceeded.

9.1.5 Data cache configuration

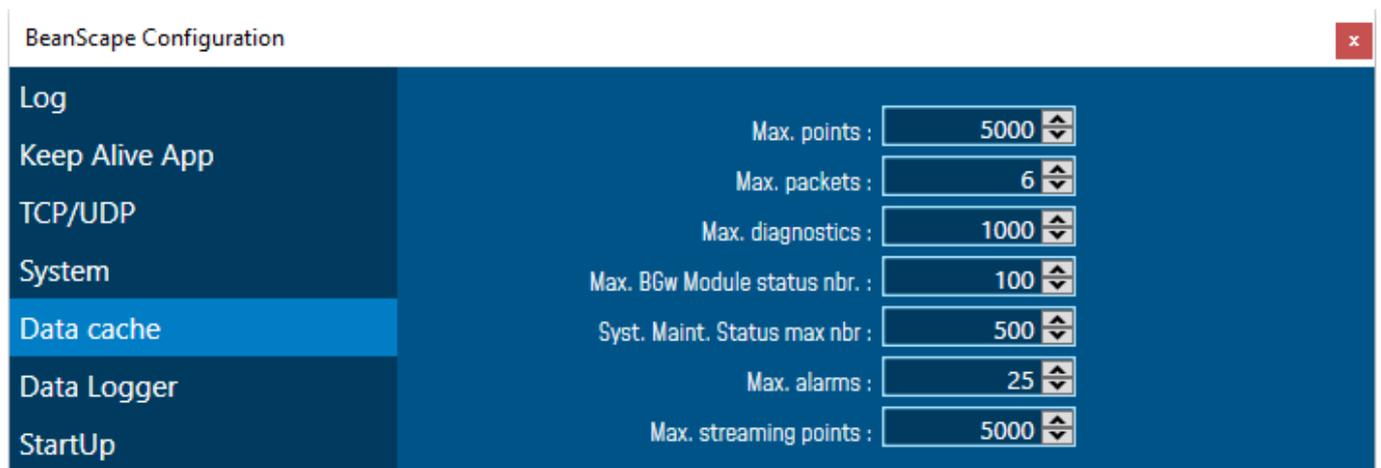


Figure 93: Data Cache configuration

- **Maximum number of points:** Set here the maximum number of points displayed on the BeanScape® graph
- **Maximum number of packets:** Set here the maximum number of packets displayed on the BeanScape® graph
- **Max number of diagnostics:** Set here the maximum number of diagnostics displayed on the BeanScape® graph
- **Max BGw Module status number:** Set here the maximum number of modules displayed on the BeanGateway® Status graph on BeanScape® graph

- **System Maint Status max number:** Set here the maximum number of points displayed on the BeanGateway® Status graph on BeanScape® graph
- **Max. alarms:** Set here the maximum alarms number
- **Max. Streaming points:** Set here the maximum streaming points number.

9.1.6 Data Logger configuration

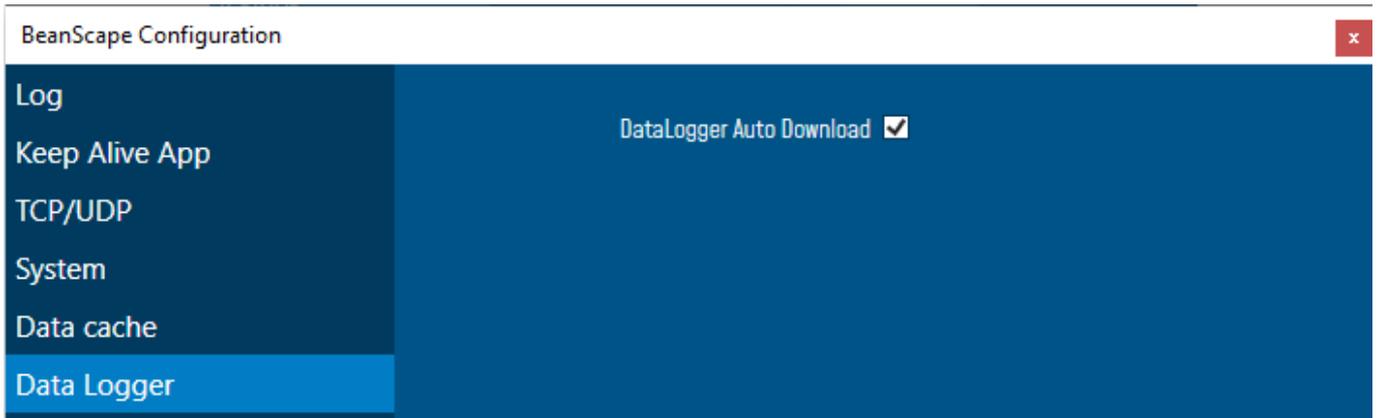


Figure 94: Data logger configuration

Check the data logger downloader check box to enable the automatic downloading process once, you start the connection.

9.1.7 Startup

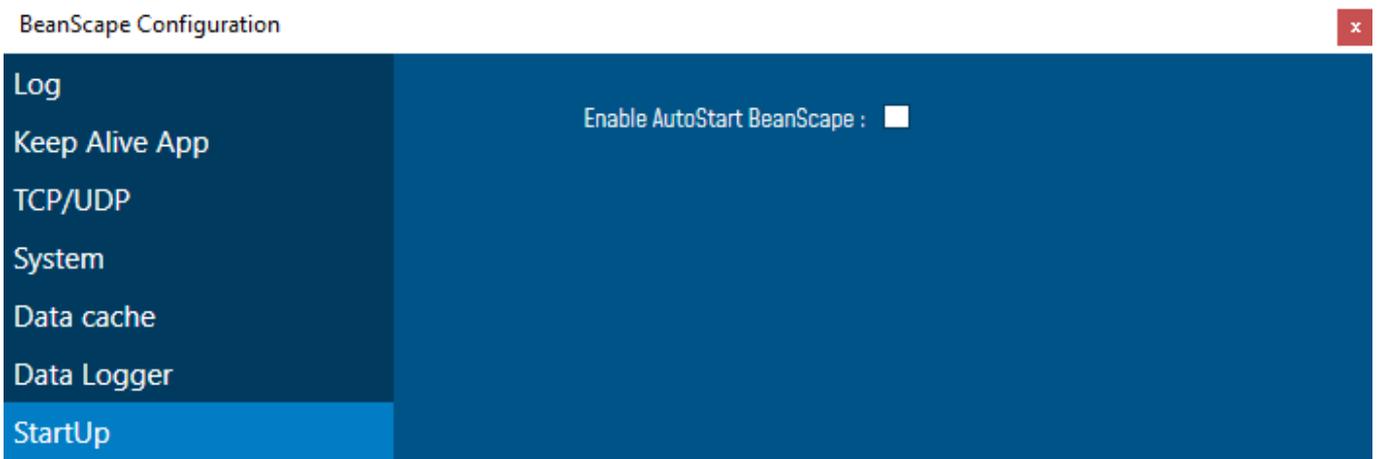


Figure 95: BeanScape® startup

Check the AutoStart check box to enable auto launch BeanScape® software once you start your PC.

9.1.8 Date & Time format



Figure 96: Date & time settings

Select the suitable date and time format from the scroll down menu then validate.

9.1.9 Language

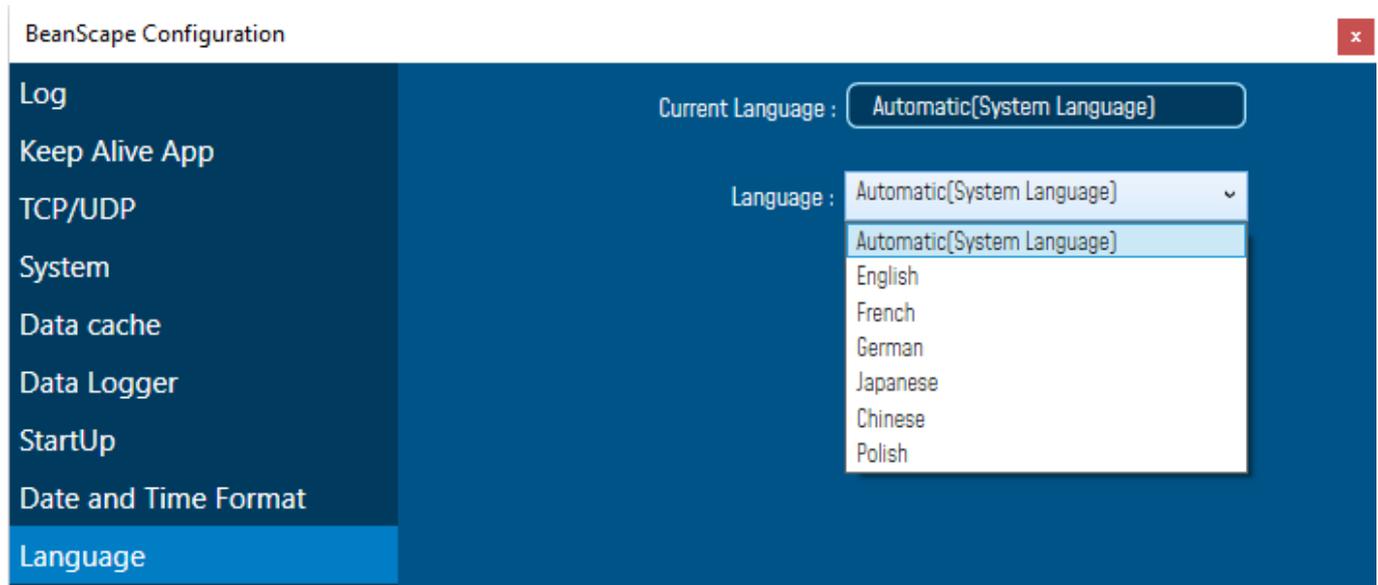


Figure 97: BeanScape® language

BeanScape® software support several languages, select your suitable one from the scroll down list.

9.2 ALARM WINDOW

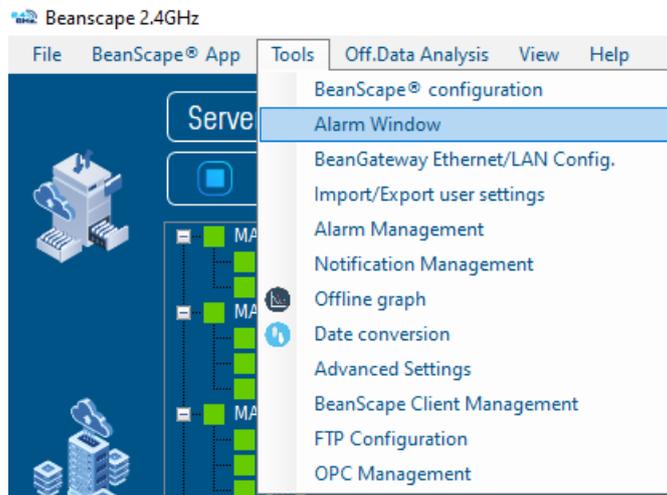


Figure 98: Alarm Window

All the Alarm events will be displayed on the alarm window with the corresponding date and time and on which sensor the alarm was occurred.

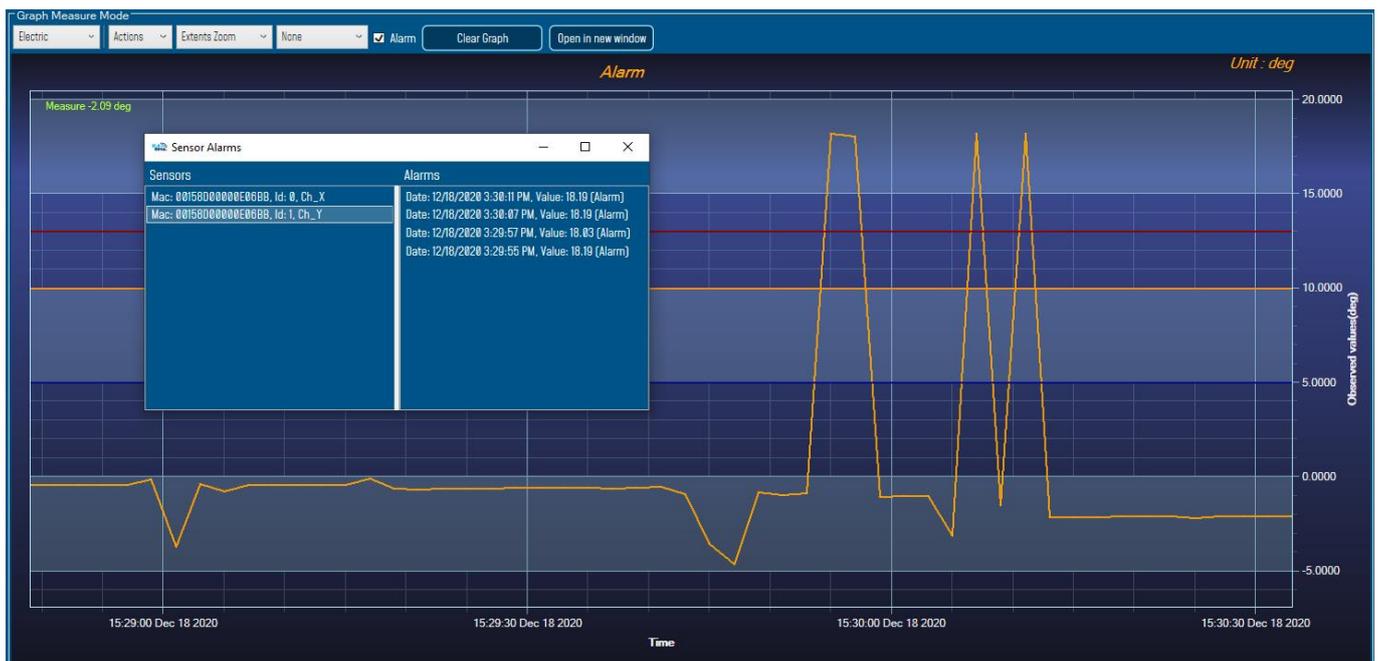


Figure 99: Alarm window display

9.3 IMPORT/EXPORT USER SETTINGS

9.3.1 Custom User Configuration

9.3.1.1 Export Function

Click on the tab *Tools* then “*Export/Import user settings*”

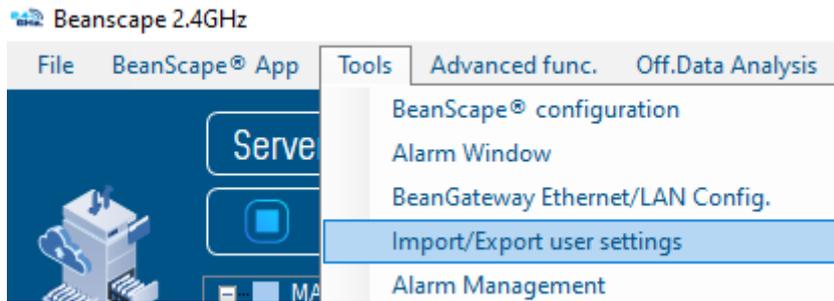


Figure 100: Import/Export feature

A new window will appear, which contains the **Custom User Configuration** and the **BeanScape Configuration**,

- **Custom User Configuration** represent the settings that have relationship with the BeanGateway and the BeanDevices®.
- **BeanScape Configuration** is related to BeanScape settings.

Under Custom User Configuration click on *Export*:

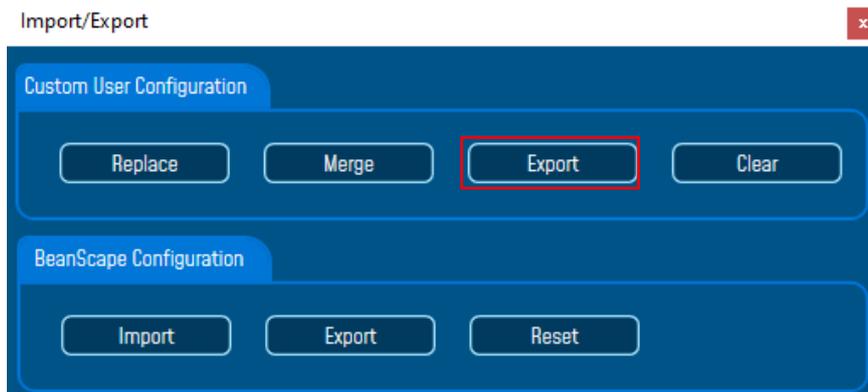


Figure 101: Custom user configuration section

User configuration is exported in XML format:

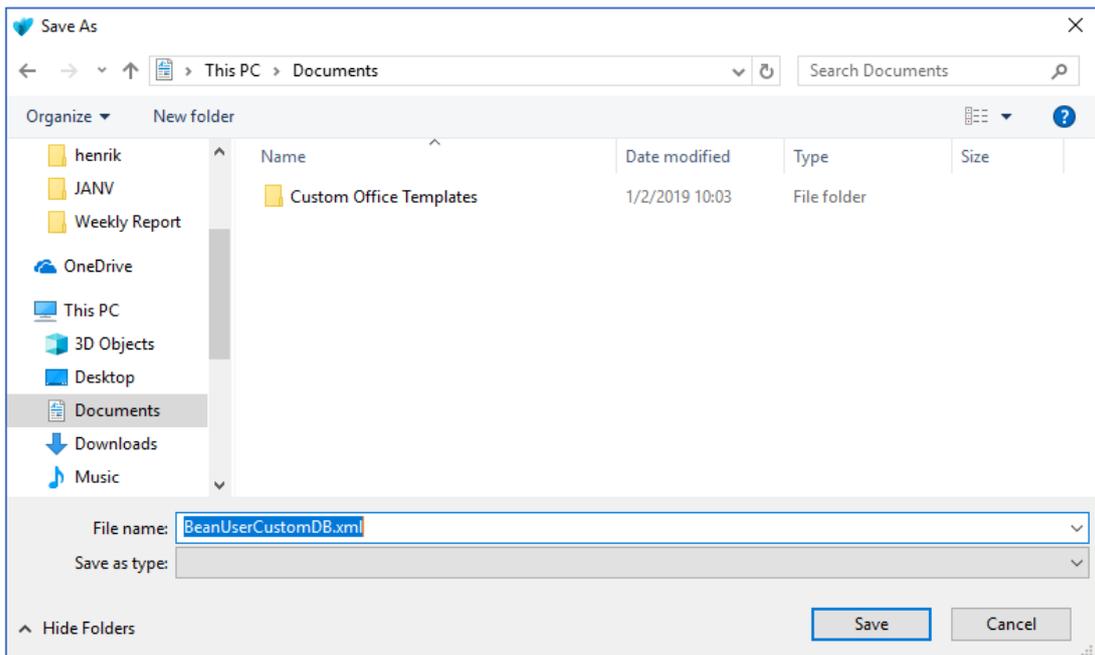


Figure 102: user export settings

```

C:\Users\GraphicDesigner\Desktop\BeanUserCustomDB.xml - Sublime Text (UNREGISTERED)
File Edit Selection Find View Goto Tools Project Preferences Help

BeanUserCustomDB.xml x
1 <?xml version="1.0" standalone="yes"?>
2 <BeanScape_User_Settings xmlns="BeanUserCustomDB">
3   <Site>
4     <PAN_ID>070D</PAN_ID>
5     <MAC_ID>00158D00000E070D</MAC_ID>
6     <SITE_LBL>PAN_ID : 0 x 070D</SITE_LBL>
7     <SITE_REF>SITE_REF</SITE_REF>
8     <SITE_TYPE>SITE_TYPE</SITE_TYPE>
9     <SITE_COMMENTS />
10  </Site>
11  <Platform>
12    <PAN_ID>070D</PAN_ID>
13    <MAC_ID>00158D00000E0CE6</MAC_ID>
14    <PLATFORM_LBL>MAC ID : 0 x 00158D00000E0CE6</PLATFORM_LBL>
15    <PLATFORM_REF>PLATFORM_REF</PLATFORM_REF>
16    <PLATFORM_TYPE>PLATFORM_TYPE</PLATFORM_TYPE>
17    <PLATFORM_FOLDER_NAME>Folder_0CE6</PLATFORM_FOLDER_NAME>
18    <FFT_REALTIME>>false</FFT_REALTIME>
19    <FFT_SHIFT>>false</FFT_SHIFT>
20    <FFT_AUTOREPORT>>false</FFT_AUTOREPORT>
21    <FFT_LOGFILE>>false</FFT_LOGFILE>
22    <FFT_VECTOR>128</FFT_VECTOR>
23    <FFT_VECTOR_MANUAL>>false</FFT_VECTOR_MANUAL>
24    <FFT_WINDOW_TYPE>0</FFT_WINDOW_TYPE>
25    <FFT_ALGORITHM>0</FFT_ALGORITHM>
26    <ZERO_PADDING>>true</ZERO_PADDING>
27    <MANUAL_FFT>>false</MANUAL_FFT>
28    <Waveform_Report>>false</Waveform_Report>
29    <_Waveform_LogByEmail_>>false</_Waveform_LogByEmail_>
30    <_Set_ThresholdType_>0</_Set_ThresholdType_>
31    <IIRFILTER>>false</IIRFILTER>
32    <VELOCITY_REALTIME>>false</VELOCITY_REALTIME>
33    <VELOCITY_DIN_REPORT>>false</VELOCITY_DIN_REPORT>
34    <VELOCITY_LOGFILE>>false</VELOCITY_LOGFILE>
35    <PPV_LOGFILE>>false</PPV_LOGFILE>
    
```

Figure 103: Custom DB example

9.3.1.2 Import Function

Click on **Replace** to import user configuration, by choosing replace function the old Custom_DB will be replaced with the new one.

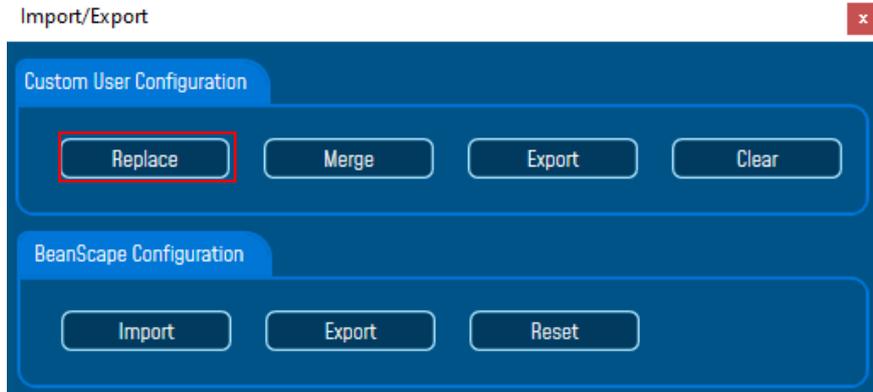


Figure 104: Custom user configuration window

By choosing **Merge** function the old Custom_DB will be merged with the new one.

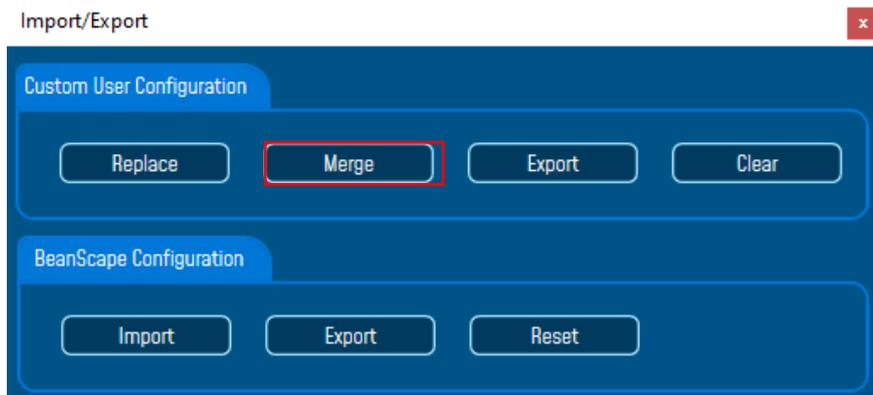


Figure 105: Custom user configuration (merge)

Click on **Clear** to clear the Custom_DB.



Don't try to change manually the XML file, there is a high risk to corrupt it.

9.3.2 **BeanScape® Configuration**

9.3.2.1 Export Function

Click on **Export** to export BeanScape configuration

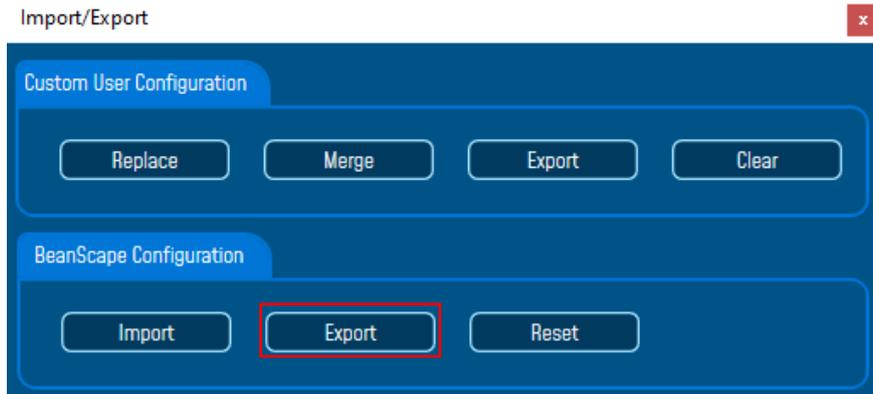


Figure 106: Export window for BeanScape Config

BeanScape configuration is exported in XML format:

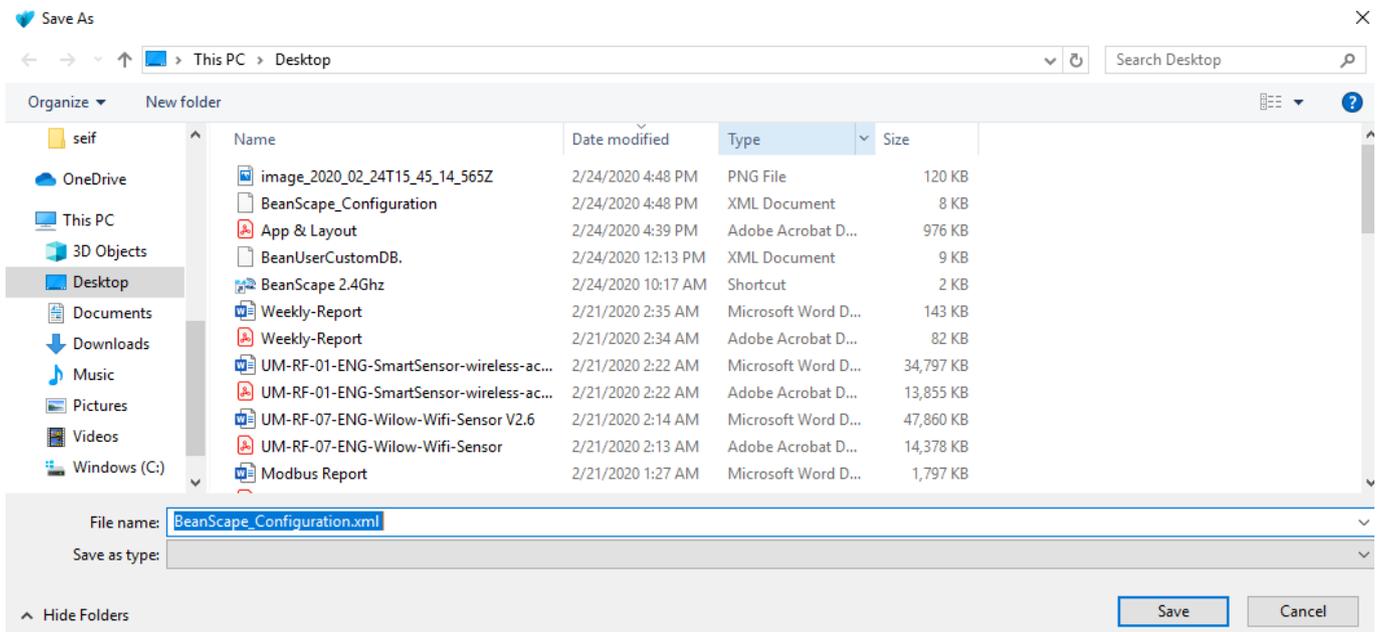


Figure 107: BeanScape Config exportation

9.3.2.2 Import Function

Click on **Import** to import BeanScape configuration

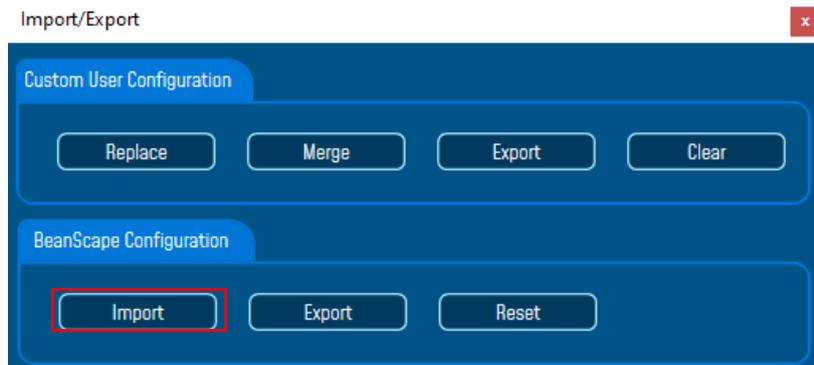


Figure 108: Import function for BeanScape Config

Click on **Reset** to reset the BeanScape configuration.

9.4 NOTIFICATION MANAGEMENT

Several notification options are available, linked to the BeanDevice® status information and BeanScape® software. Click on Tools Tab and navigate to Notification Management option, new window will pop up.



Figure 109: Notification Management Window

By enabling the notification option, user have the possibility to choose a displayed notification message on the screen of his PC and a received Log file containing the notification details.

9.5 OFFLINE GRAPH

Offline Graph gives the ability to read previous measurements files, proceeding by browsing the files and then clicking on view.

Under the Tool menu on the BeanScape® software, select Offline Graph option, a new window will pop up, and will be ready to be used to display graphs from the saved measurements.

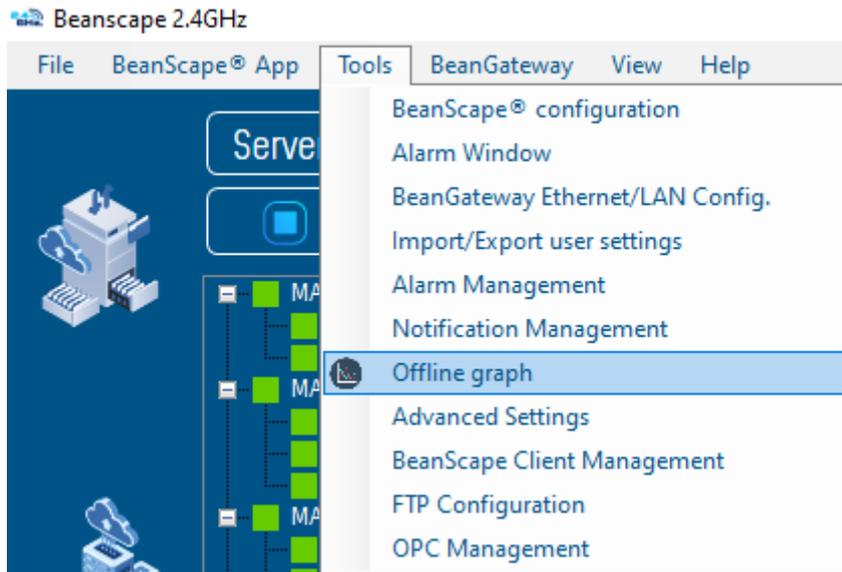


Figure 110: Offline graph menu on BeanScape®

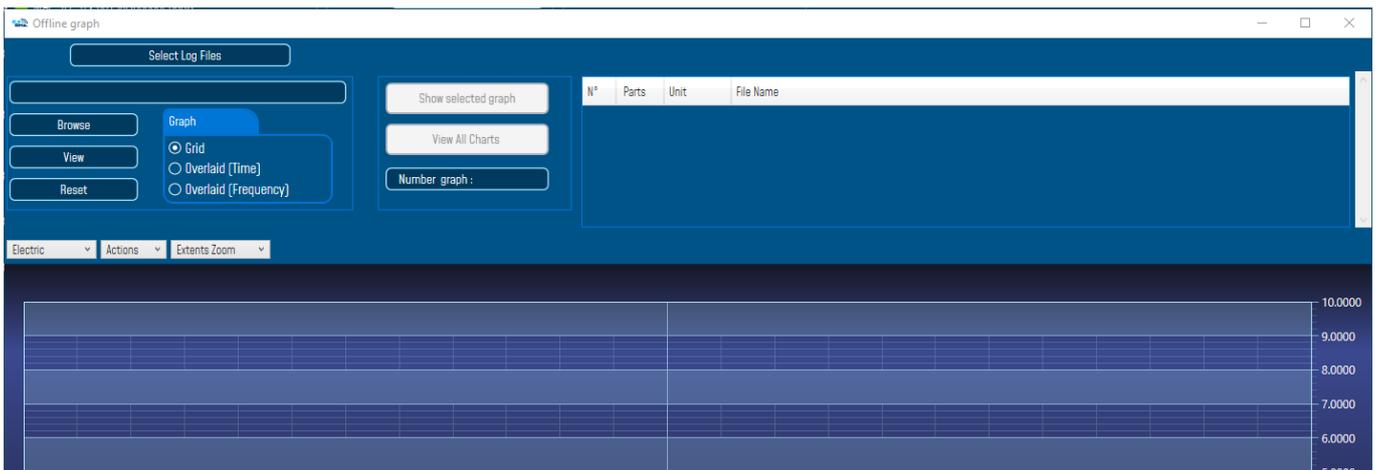


Figure 111: Offline graph window

- Chose Grid if you want to see the graphs displayed on a grid
- Chose overlaid if you want to see the graphs displayed overlaid (pick Time for temporal x axis or frequency for frequential x axis)

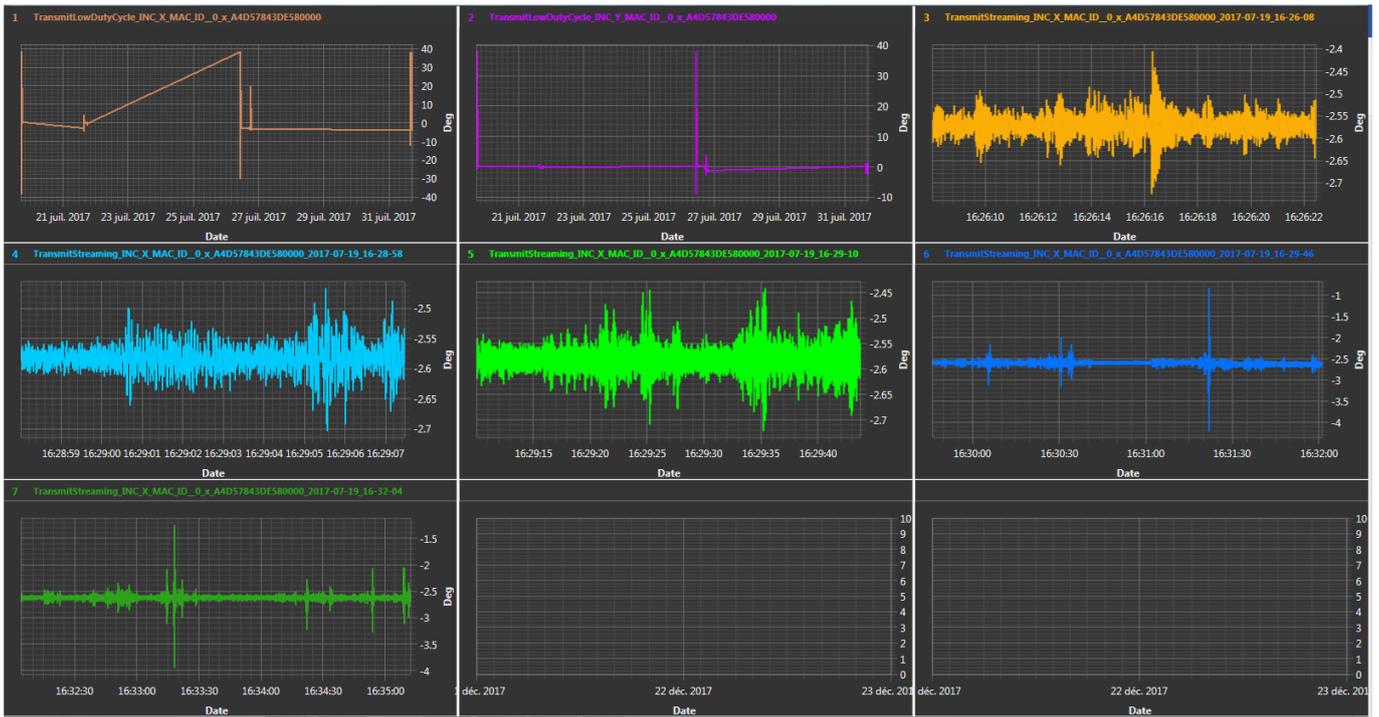


Figure 112: Grid display of graphs

9.6 DATE CONVERSION

Data downloaded from the data logger are organized in a system well optimized to minimize non-important data and leave maximum storage space for measurement values, hence using indexation to refer to measurement timing.

To make these files more readable we use the Data Conversion tool.

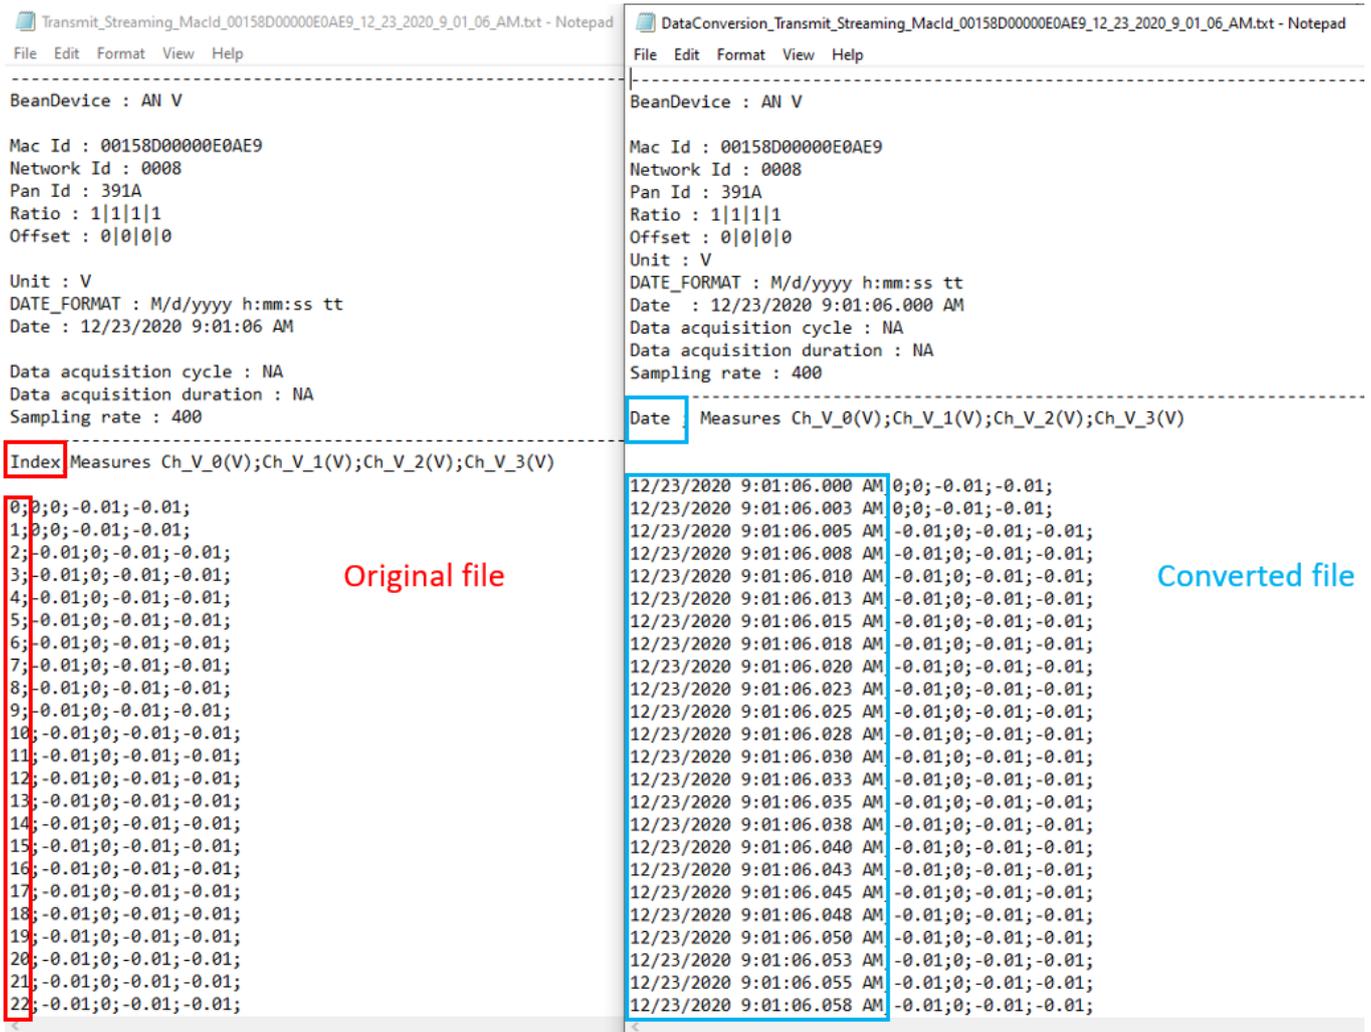


Figure 113: Data conversion example

Under the Tool menu on the BeanScape® software, select Data Conversion, a new window will pop up, where downloaded data can be converted.

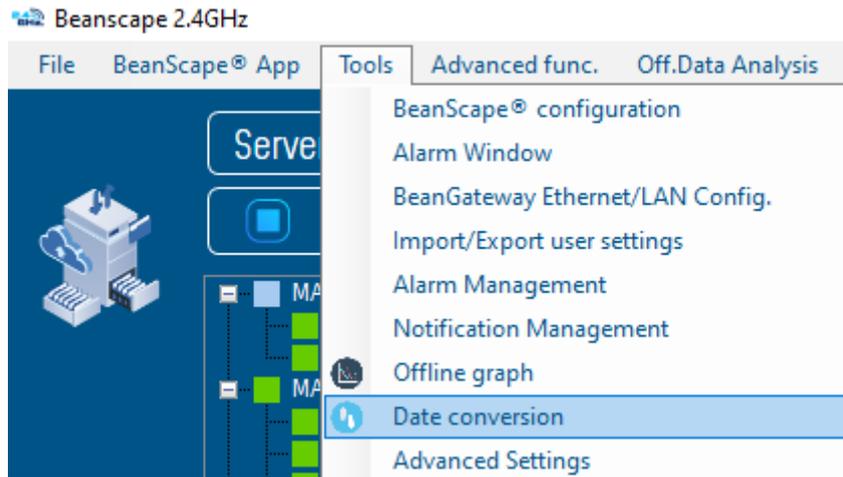


Figure 114: Data Conversion menu on BeanScape®

A new window will open:

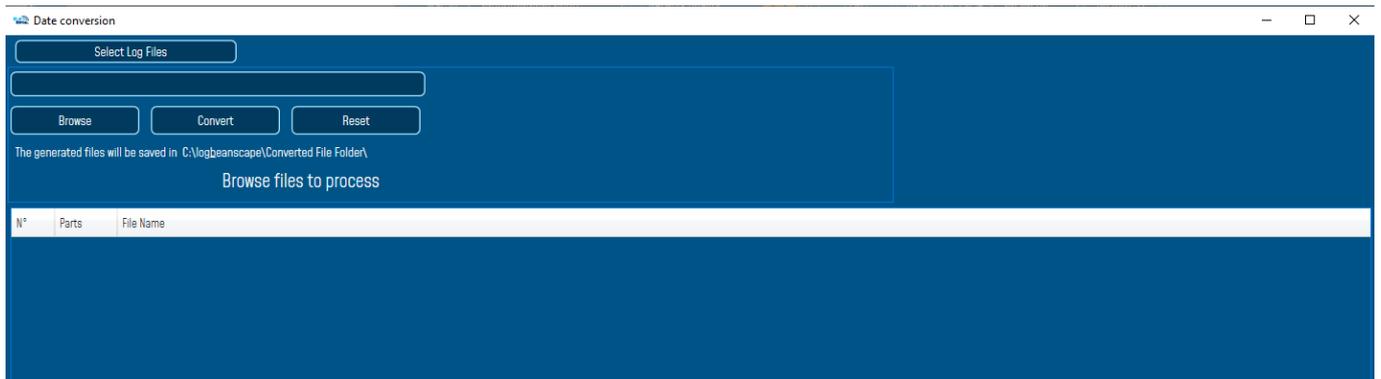


Figure 115: Data Conversion window

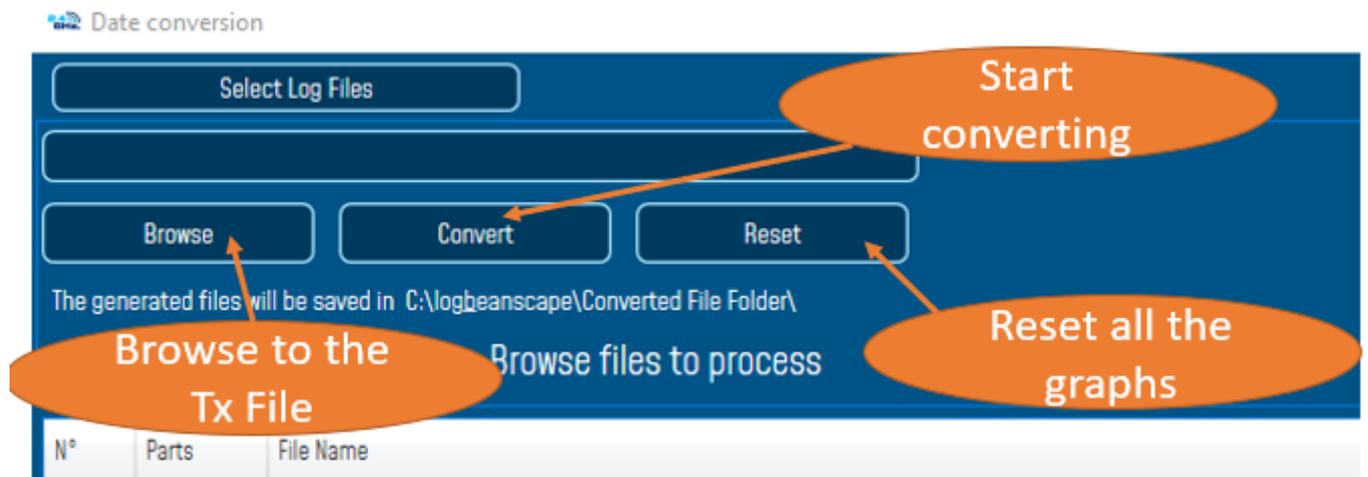


Figure 116: Data Conversion main options

- Click on browse and import streaming file containing the logged measurement.

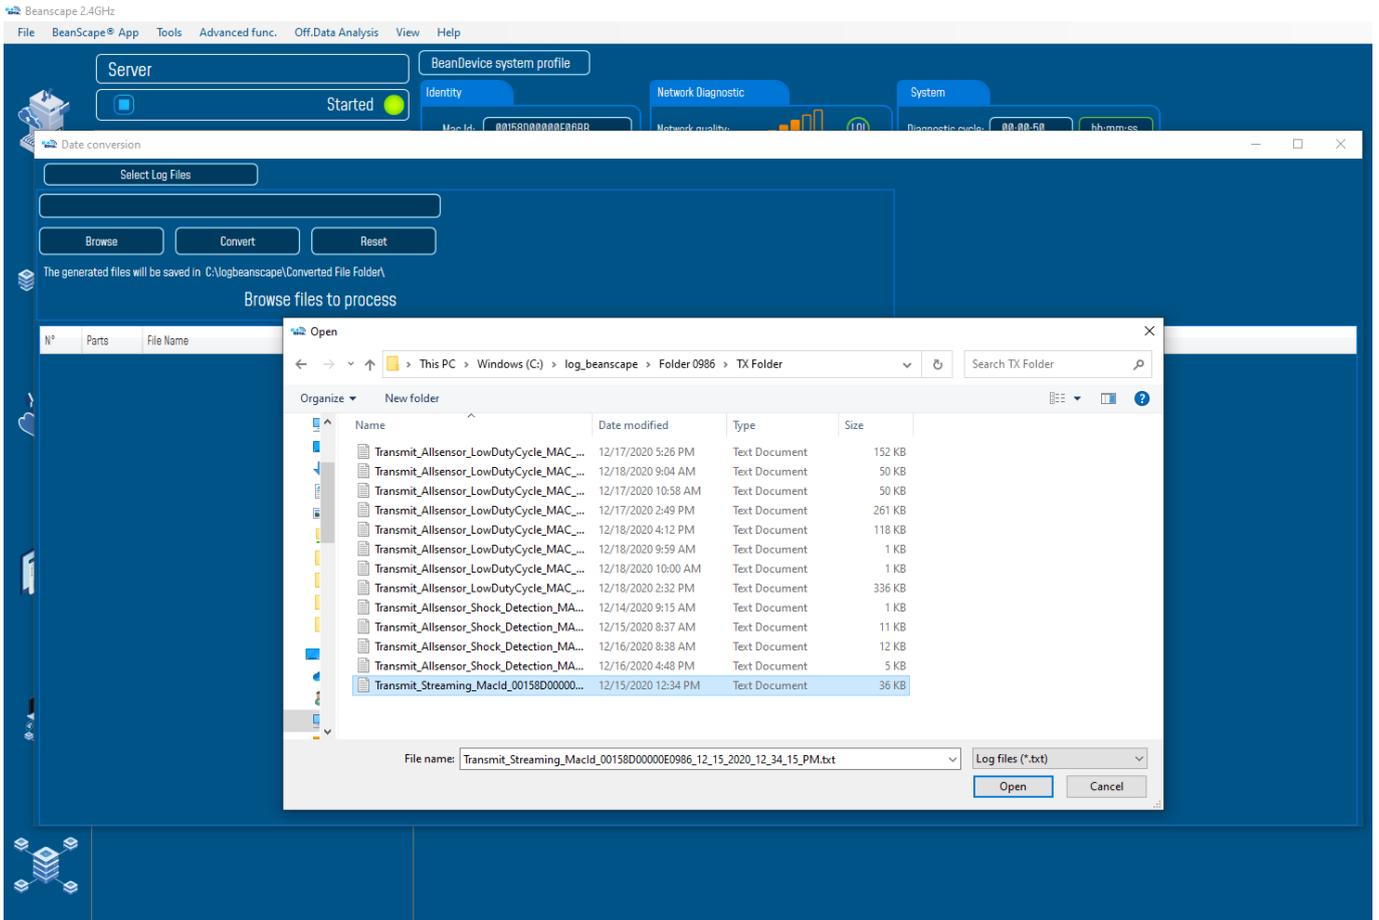


Figure 117: Importing files into Data Conversion tool

- Overview of the selected files

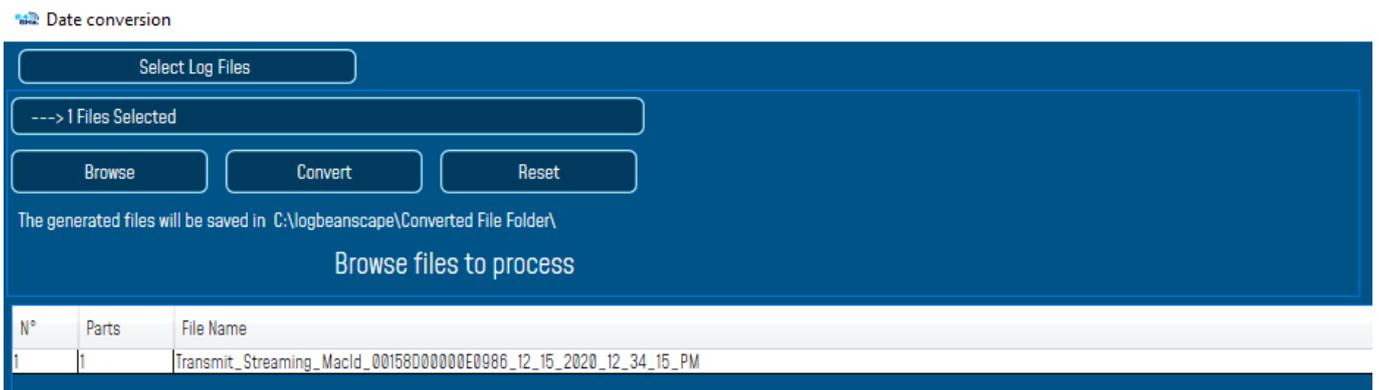


Figure 118: Overview of the selected files on Data Conversion window

- Select the converted file to view or go to your log directory and you will find all the converted files in a new generated folder named **Converted File Folder**

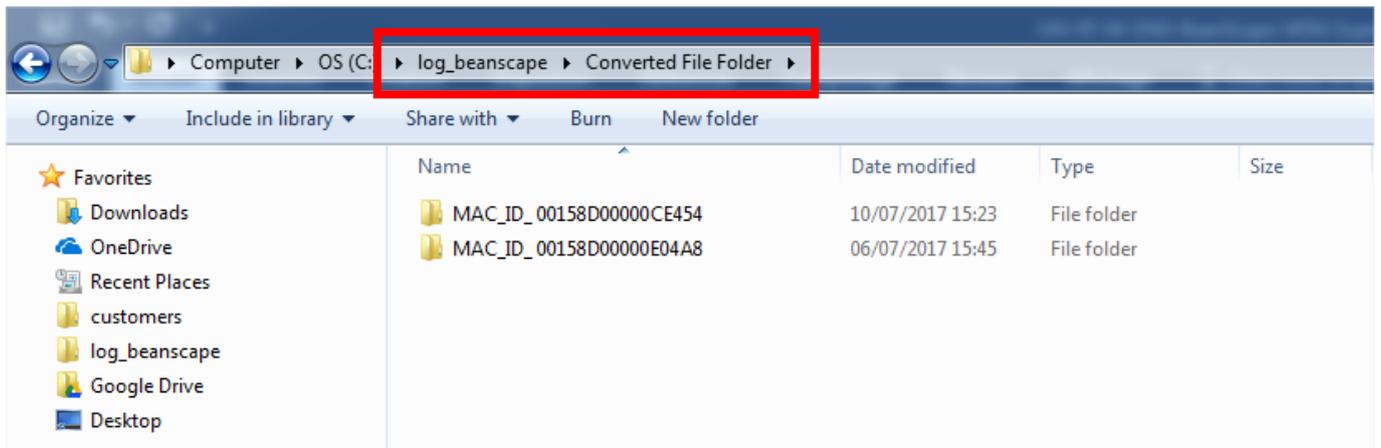


Figure 119: Overview: Converted File Folder

9.7 ADVANCED SETTINGS

Navigate to **Tools** and click on Advanced settings.

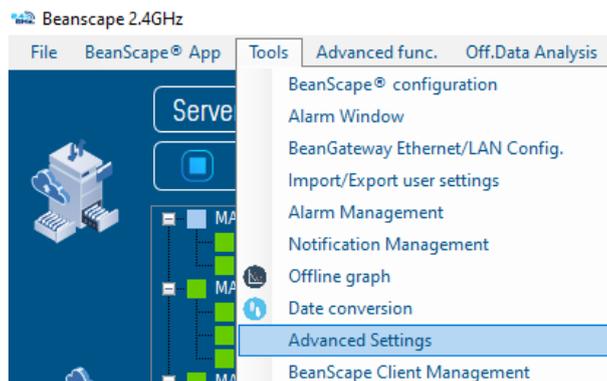


Figure 120: Advanced settings

A new window will pop up in which user can find several settings

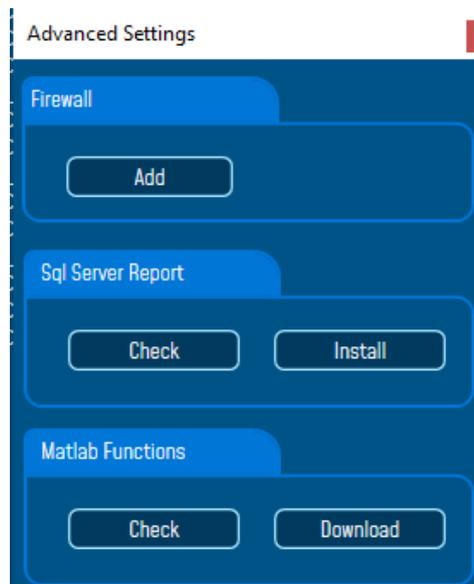


Figure 121: Advanced settings

9.7.1 Firewall

Click on **Add** button in order to add BeanScape on firewall, with that user will be sure that the firewall will not interrupt the connection between BeanScape software and the BeanGateway.



Figure 122: Add BeanScape to Firewall

Right after clicking on Add a notification message will be displayed on the screen saying that BeanScape was added to firewall successfully.

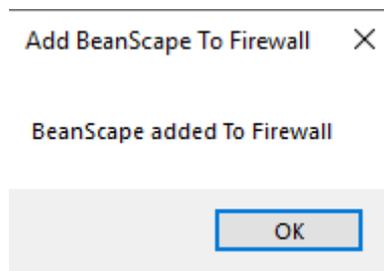


Figure 123: Notification message

9.7.2 SQL Server Report

Click on Check to check if the SQL Server was installed on your PC.

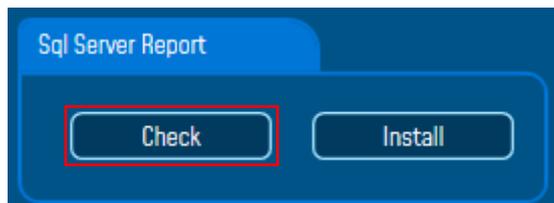


Figure 124: SQL Server installation

If the SQL Server is installed a pop-up notification will be displayed on the PC screen saying that the SQL Server is already installed.

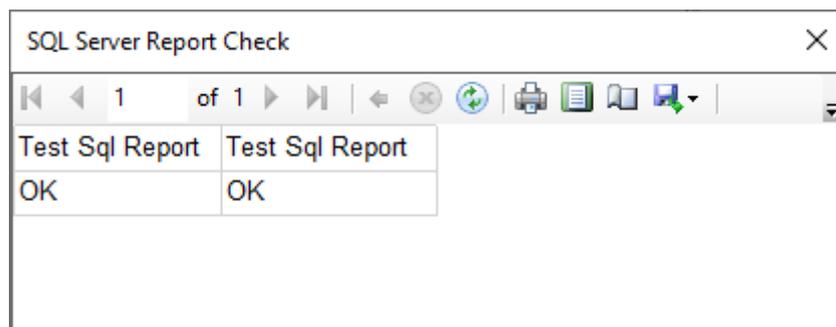


Figure 125: installation notification for SQL Server Report

If it is not the case just click on Install button to install it.

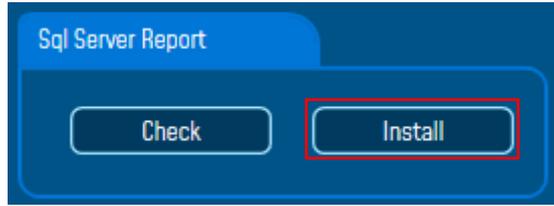


Figure 126: SQL Server Report Installation

9.7.3 MATLAB Function

Click on Check to check if the SQL Server was installed on your PC.

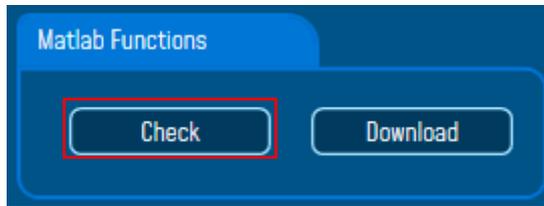


Figure 127: Check MATLAB extension

If the MATLAB extension was already installed a pop-up notification will be displayed on the PC screen saying that is installed.

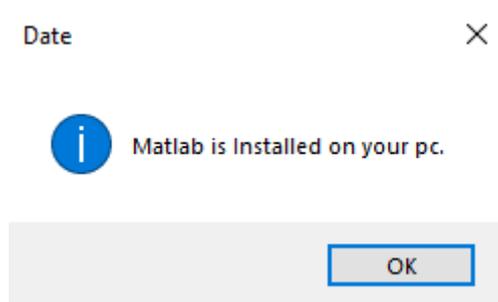


Figure 128: Notification message

Otherwise Click on Download button to download the extension then install it on your PC.

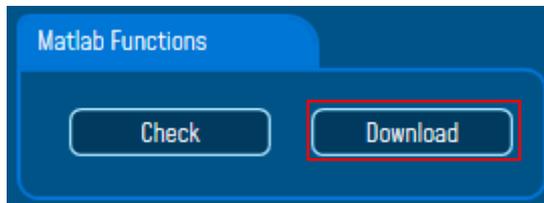


Figure 129: Download MATLAB extension

9.8 BEANSCAPE® CLIENT MANAGEMENT

This option is available only on BeanScape® Multiview version

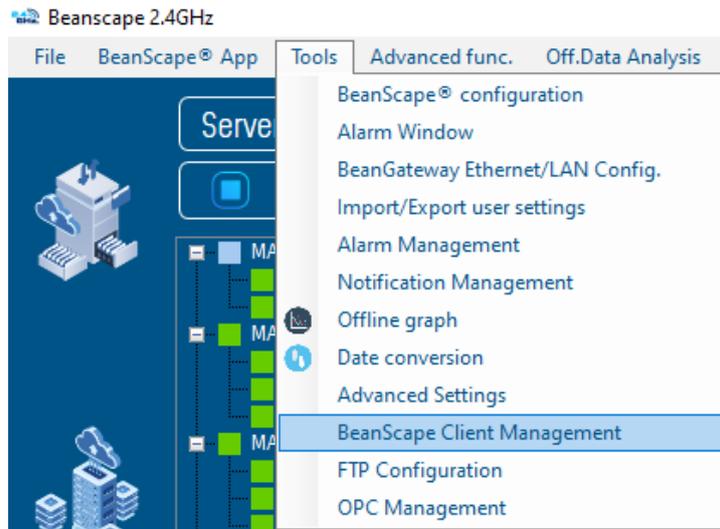


Figure 130: Client management

Based on Client/Server paradigm, this option allows user to switch between client and server mode by entering a right serial key, and it gives the possibility also to give the client the rights to manage the system.

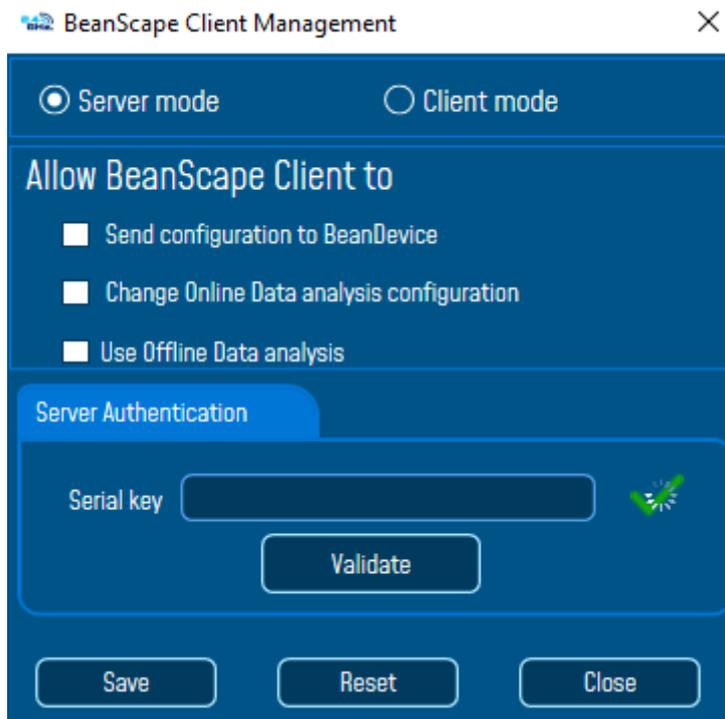


Figure 131: Client/Server Management

9.9 FTP CONFIGURATION

The user has the ability to send all his measurement data log files to the FTP Server through the FTP feature.

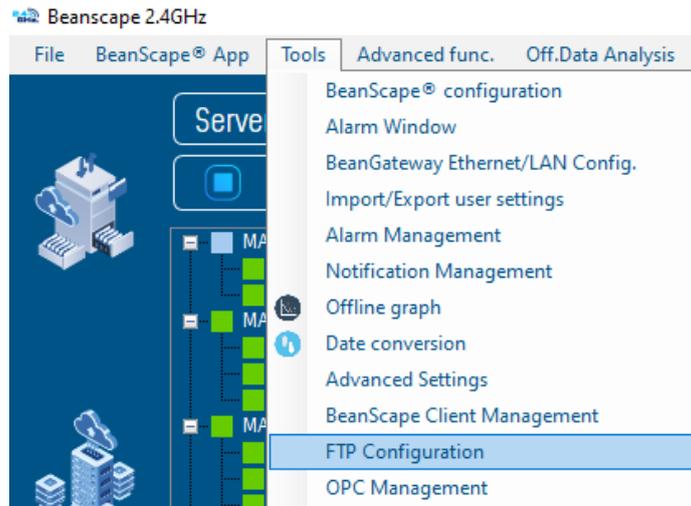


Figure 132: FTP Configuration

Check FTP enable check box then enter the right FTP Server setting using the following window

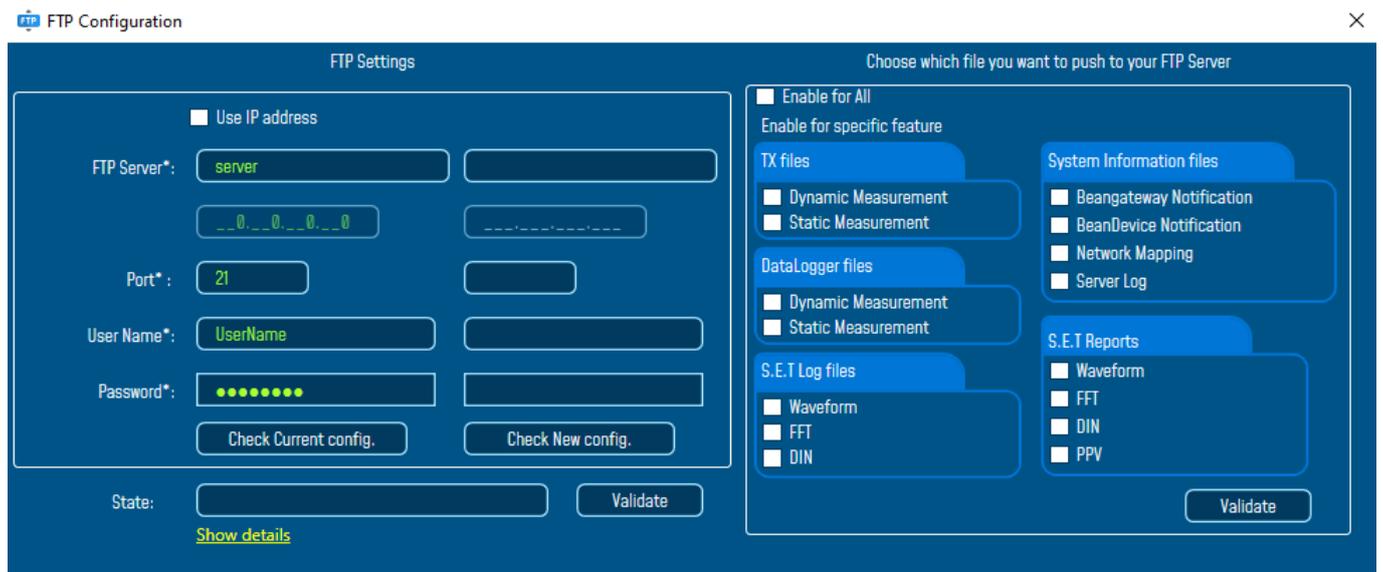


Figure 133: FTP configuration window

You should connect to your FTP server before setting up the FTP configuration on the Beanscape software.

FTP Settings

Use IP address

FTP Server*: server

Port*: 21

User Name*: UserName

Password*: ●●●●●●

Check Current config. Check New config.

State: Validate

[Show details](#)

Figure 134: FTP Server settings

- **FTP Server:** Enter your FTP Server DNS or IP address by checking use IP address checkbox
- **User Name:** Enter your FTP user name
- **Password:** Enter your right FTP password
- **Port:** By default, the FTP port is 21, you can change it also
- **Check New Configuration:** click on check new configuration to make sure the settings are correct.
- **Validate:** click on validate to save the setting and proceed
- **State:** display if the connection status successfully established or failed.

If the connection was failed please click the Show details link to see the cause of the issue.

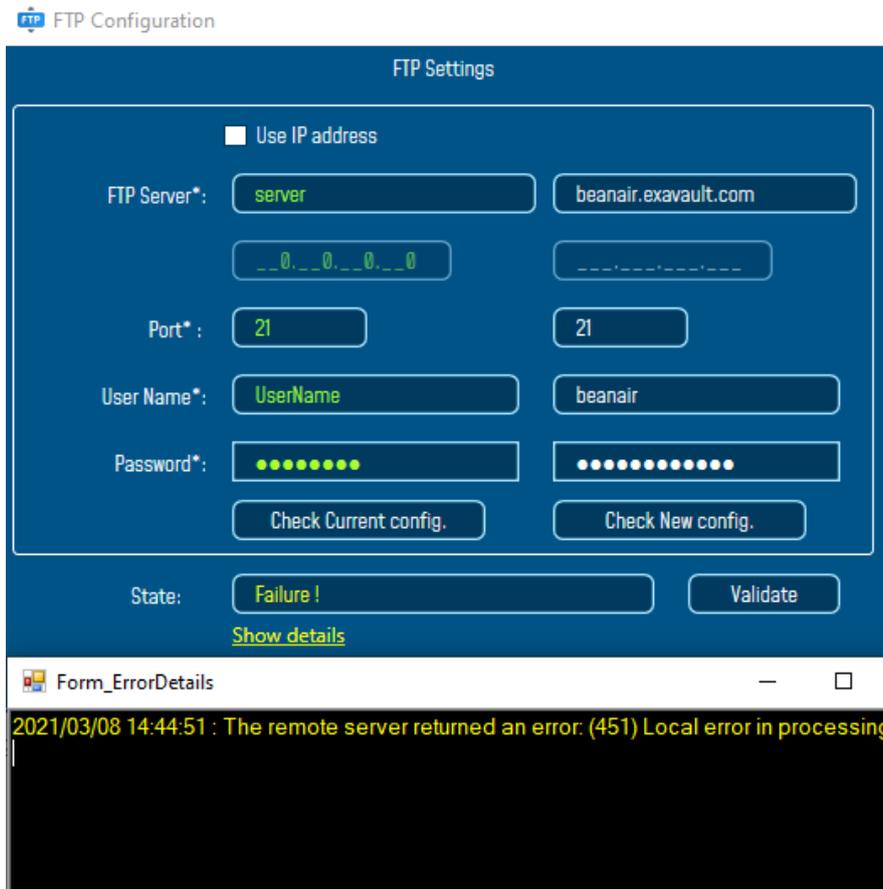


Figure 135: Failure details

Then check the type of files which you want to send to you FTP server, and click on Validate

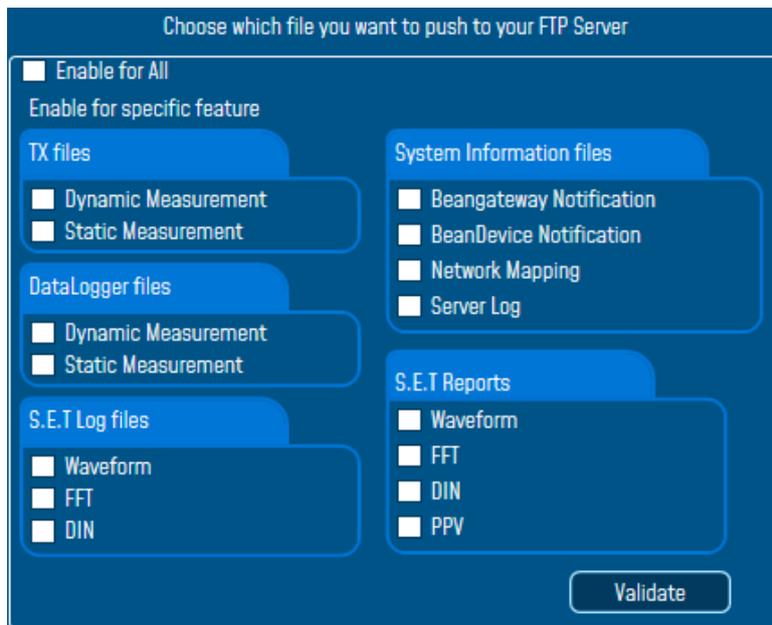


Figure 136: the available type of files

The files will be stored on your FTP server every 1 min.

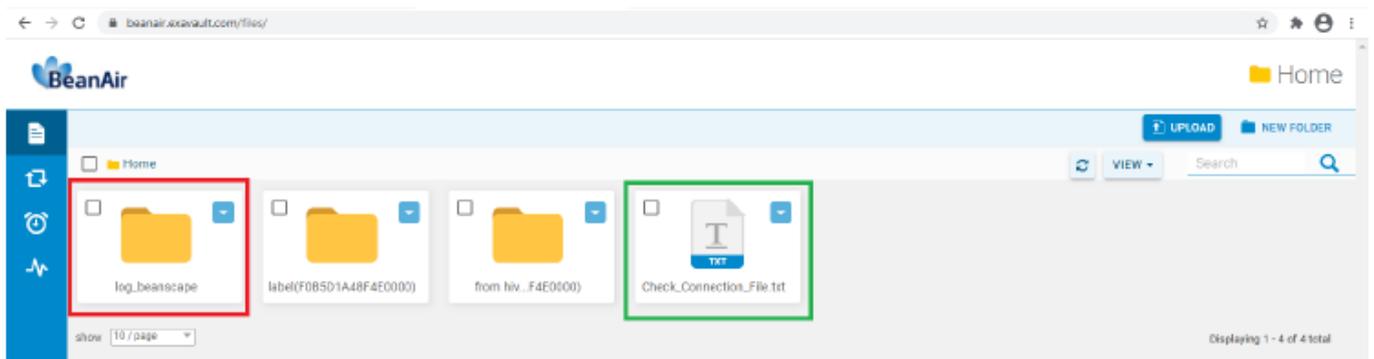


Figure 137: Files stored on the FTP server



The FFT, DIN report and PPV reports/files are not available on the BeanDevice AN-XX, the user can receive only the SET mode waveforms on his FTP Server.

10. VIEW TAB

BeanScope® 2.4GHz software comes with two view options, a Standard view and an Expert view.

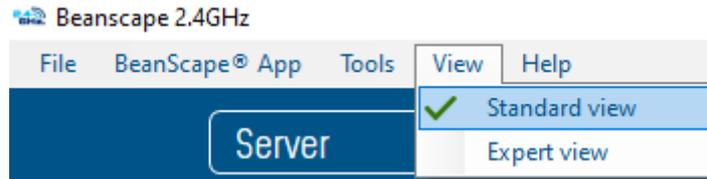


Figure 138: View tab

10.1 STANDARD VIEW

Once you open BeanScope® software and start the server, the standard view is selected as default view.

The standard view is just a simplified dashboard displaying the needed information that makes the system easy to use.

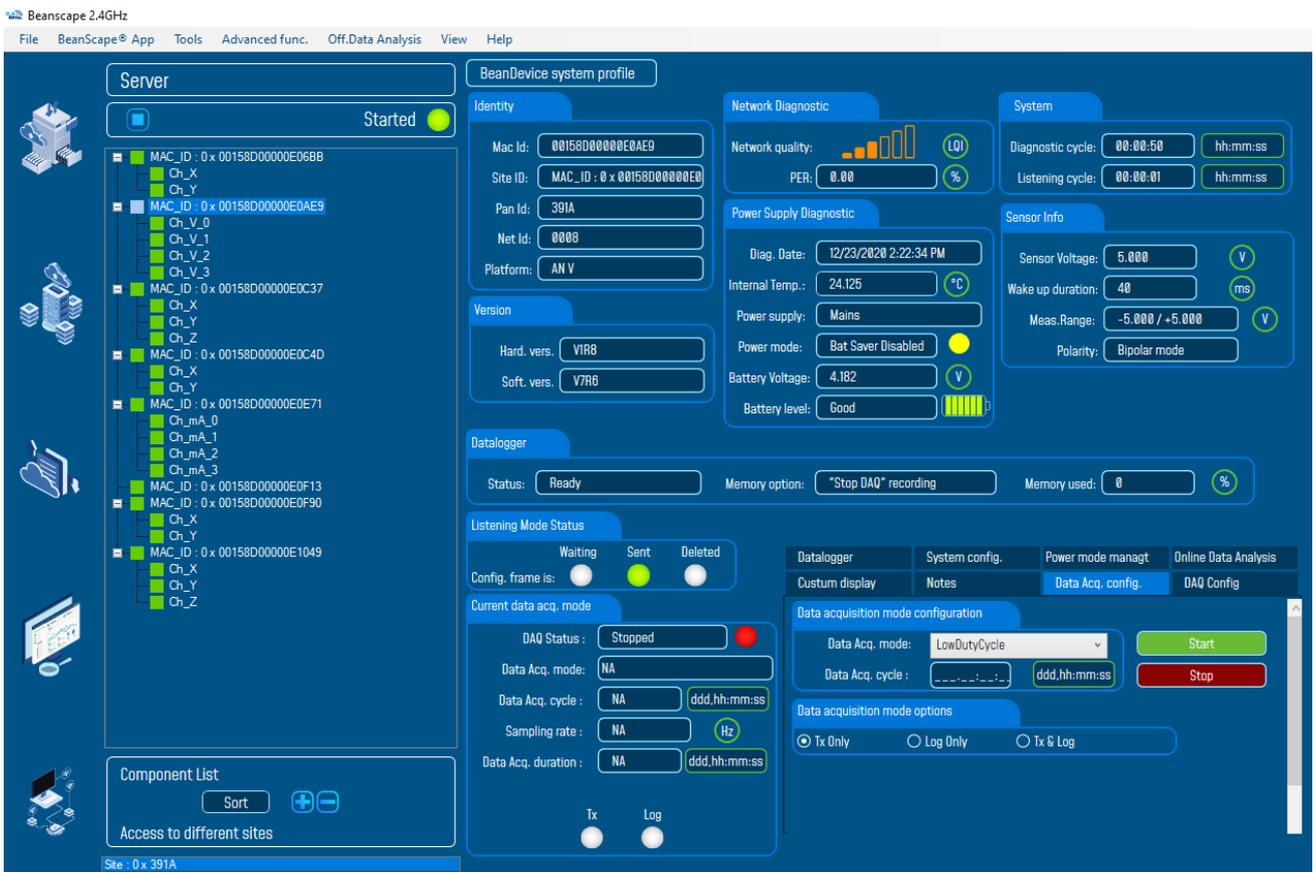


Figure 139: Standard View dashboard



By connecting the BeanGateway® directly to the PC, the Expert view should be the selected view.

10.2 EXPERT VIEW

The expert view contains more technical features for expert using.
 To change the view simply go to **View** tab then select **Expert view**.

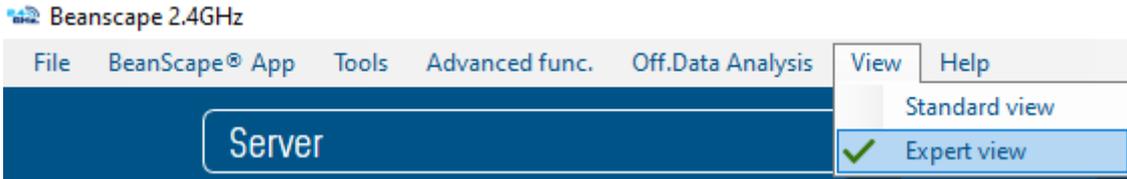


Figure 140: Expert View

You need to enter the right serial key in order to have access to the expert view

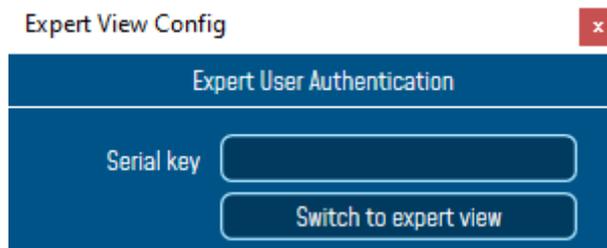


Figure 141: Serial Key

Once you choose the Expert view you notice that the dashboard display looks quite different and that there are more information and features were added to the chart.

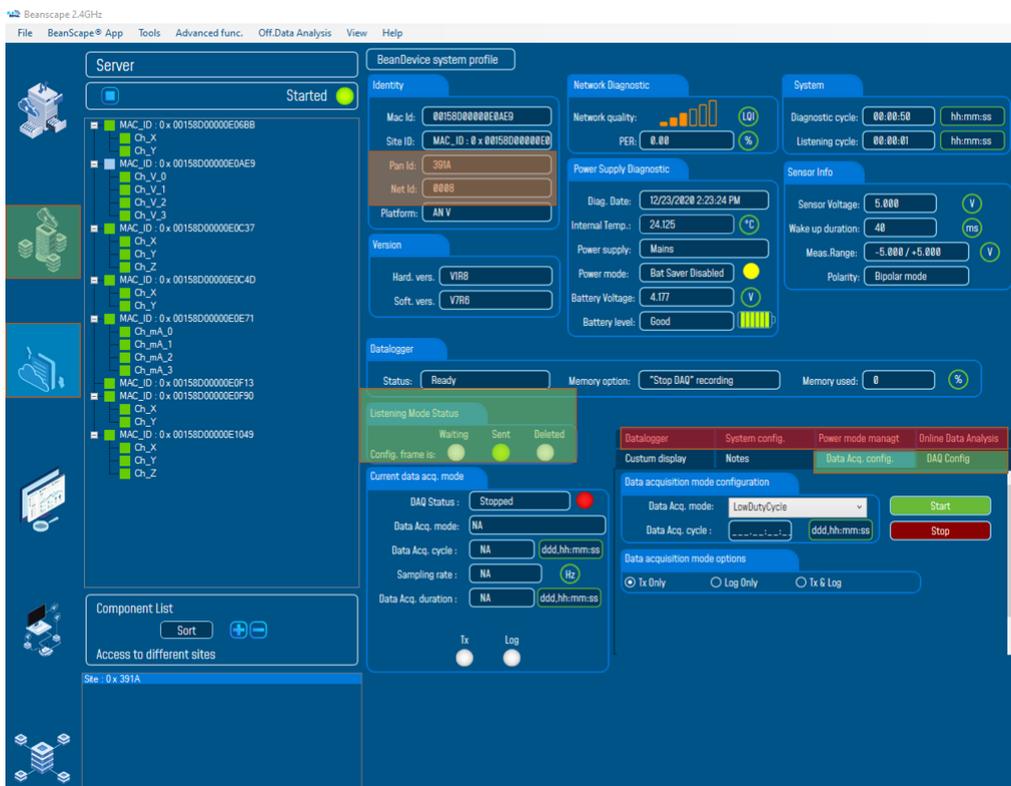


Figure 142: Expert view dashboard


The PAN ID, Net ID, PER level, the system information and much more options are accessible from only the expert view.

10.2.1 Data Acquisition configuration


- Data Acq Config tab



- DAQ Config tab

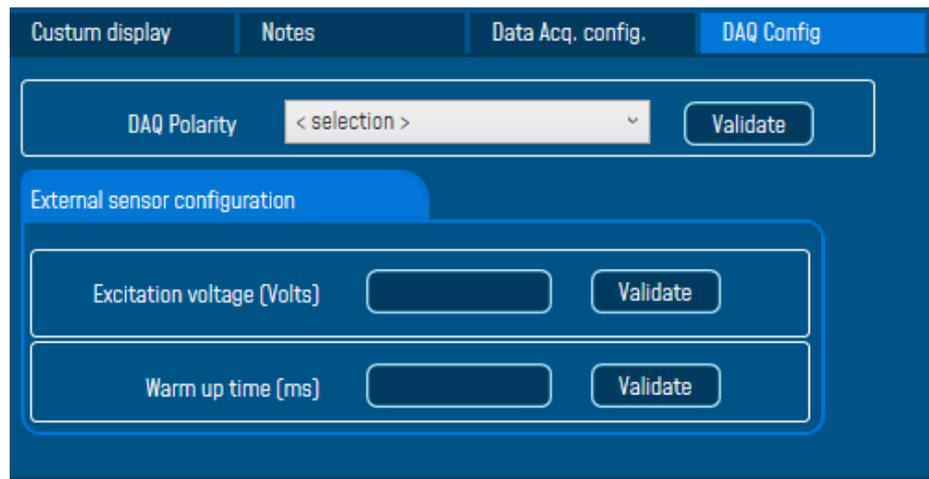


- Datalogger tab

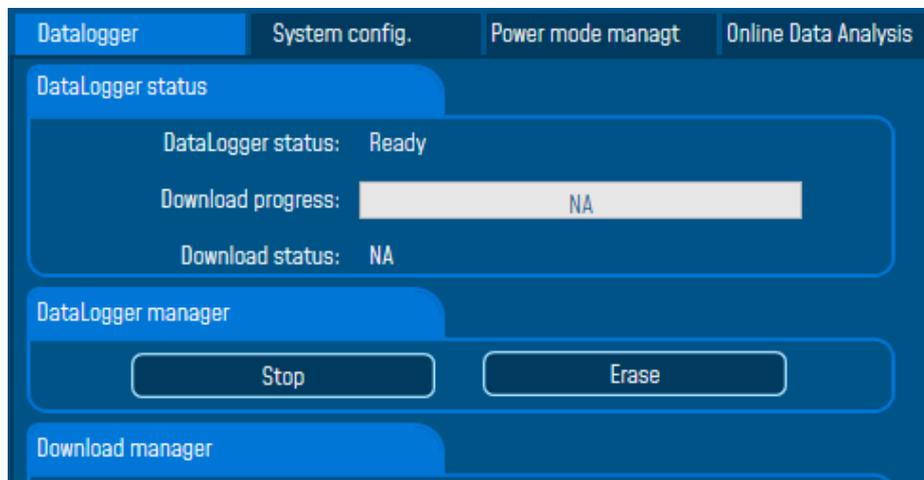


- System config tab



- Power management tab

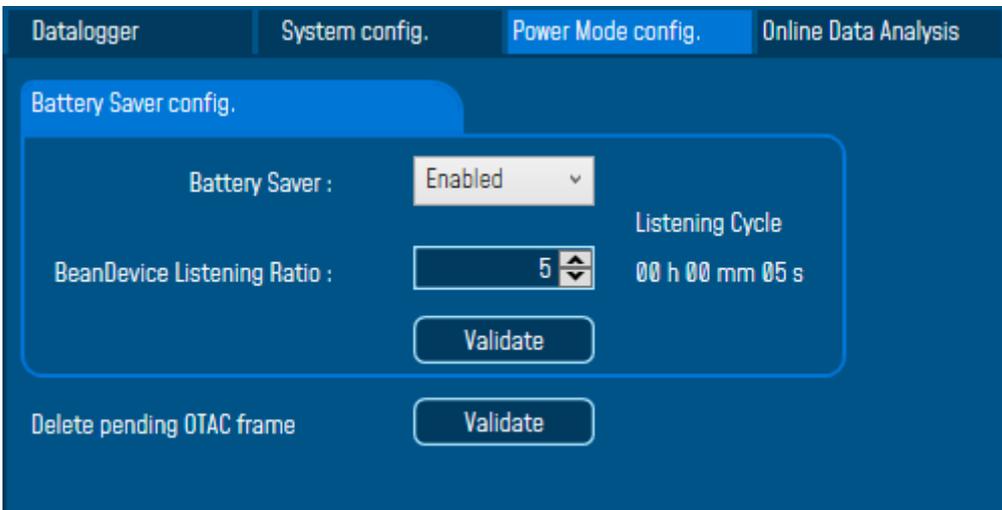

- Online Data Analysis

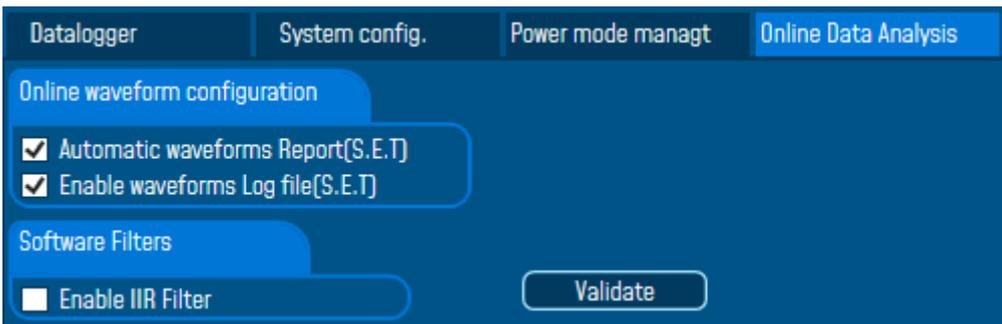

10.2.2 Tools tab

More options are available on the expert view



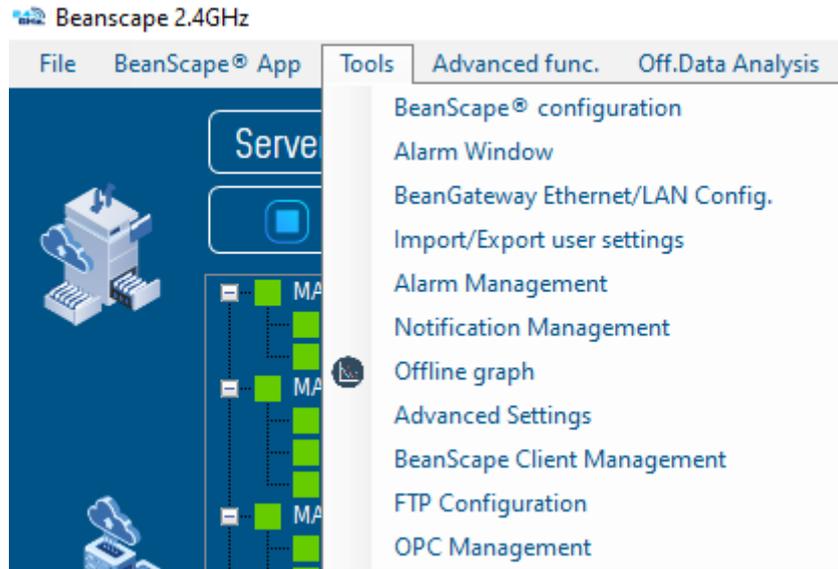


Figure 143: Tools options list on the expert view


- BeanScape® configuration

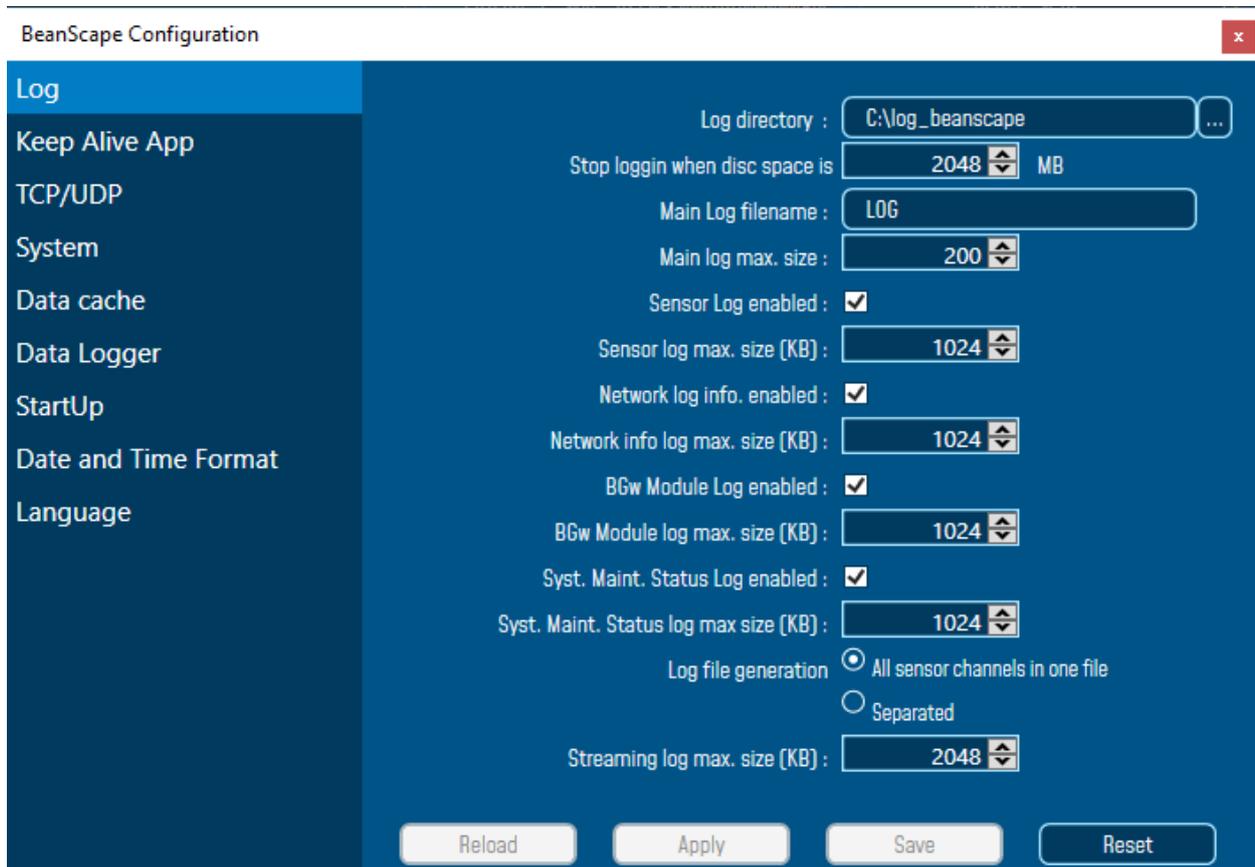

- Import/Export user settings

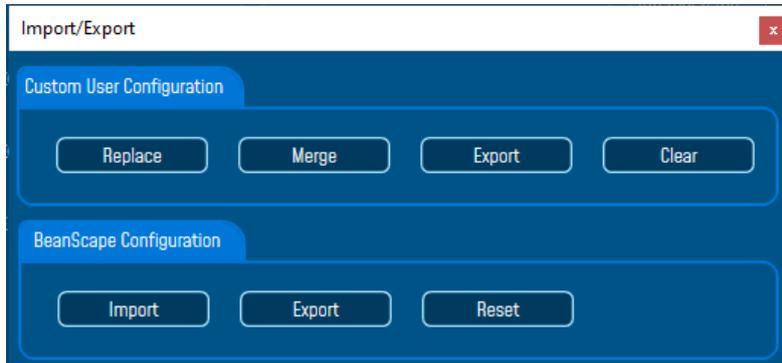


- Alarm Management Toolbox

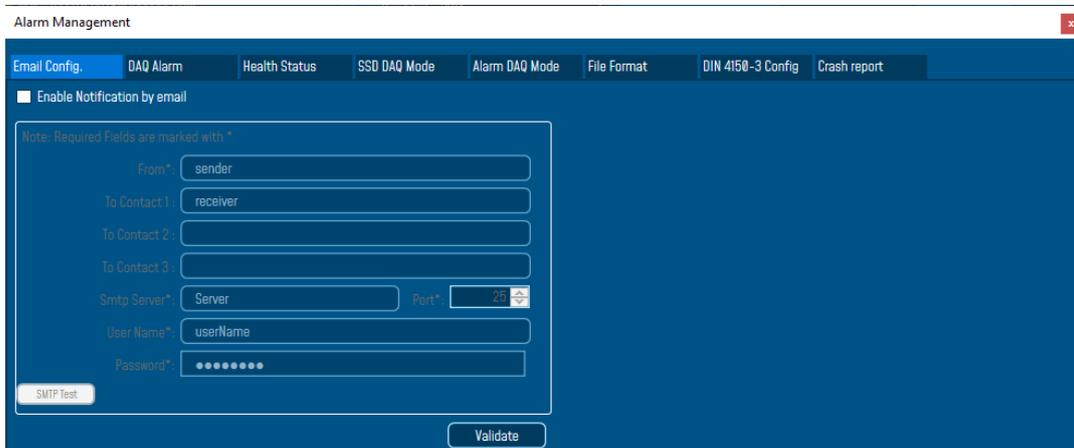


- Notification Management




- Offline Graph

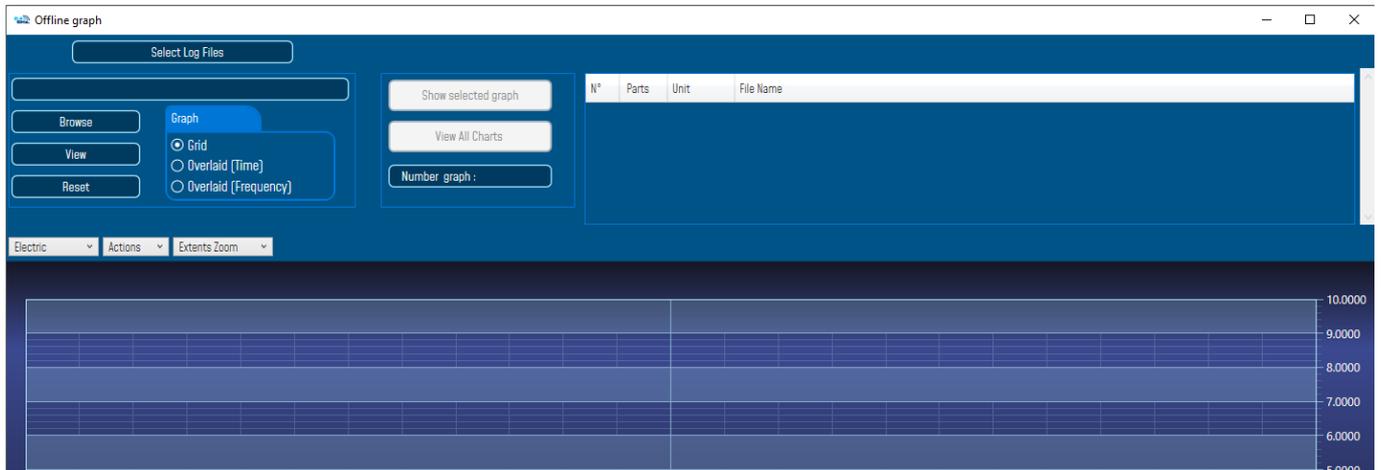


- Advanced Settings

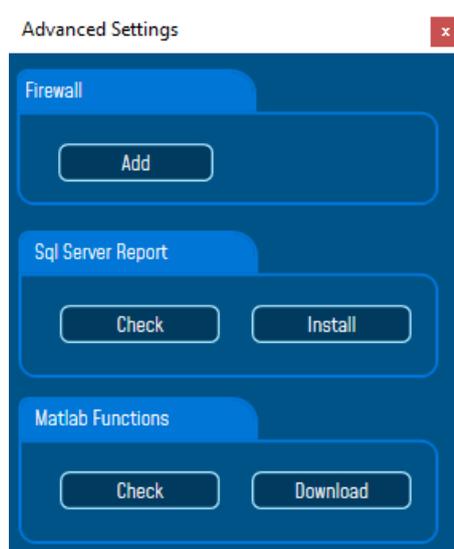

- BeanScape Client Management

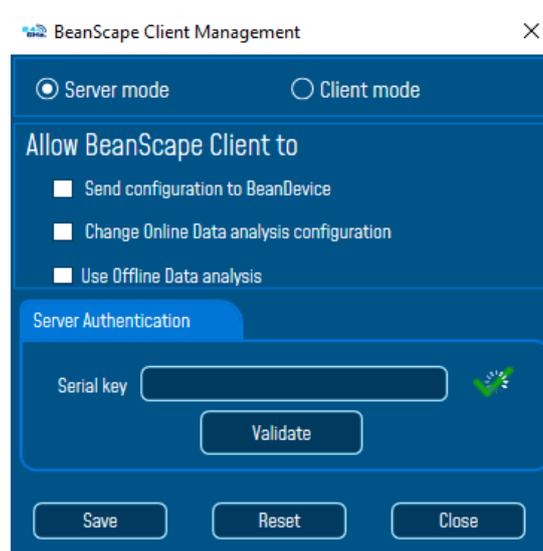

- OPC Management

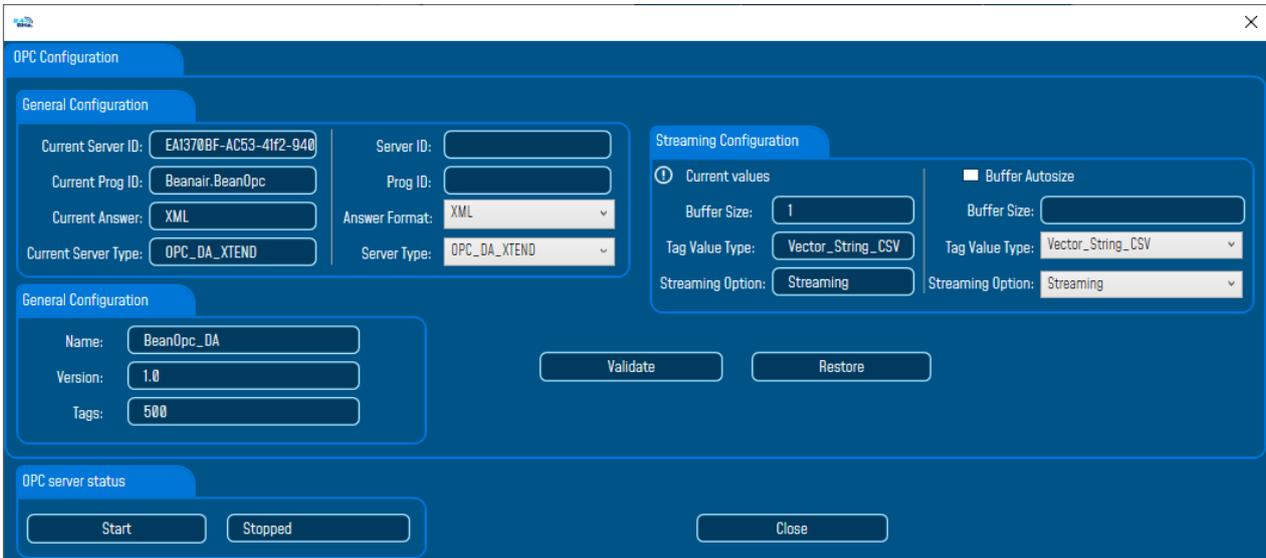

10.2.3 Advanced Functions

This option is related to the BeanDevice®


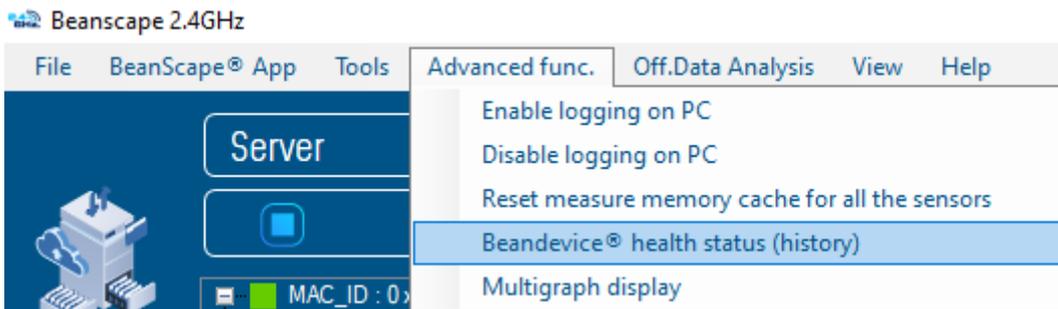


Figure 144: BeanDevice® health history

- Enable logging on PC: to generate a log file which contains all the data and will be backed up on your PC
- Disable logging on PC: there is no log file containing the data stored on your PC
- Reset measure memory cache for all sensors: to Reset the cache
- BeanDevice® health status



- Multigraph display

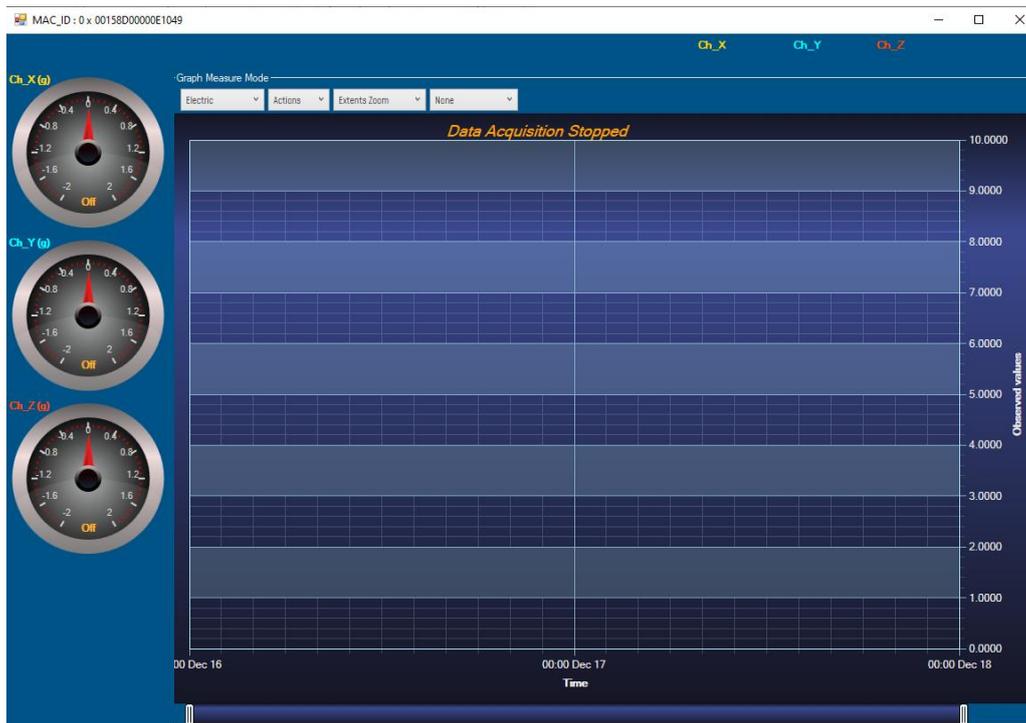

11. BEANDEVICE® MAINTENANCE & SUPERVISION (FOR EXPERIENCED USER)

This section allows to an experienced user to configure correctly the Wireless Sensor Networks.

11.1 HOW TO OPTIMIZE THE BATTERY AUTONOMY ON YOUR BEANDEVICE®

The battery autonomy depends on several parameters:

- ✓ The environment where the BeanDevice® is deployed
- ✓ Data acquisition mode which is configured

The table below presents the BeanDevice® current consumption during radio TX or during Sleep mode:

<i>BeanDevice® version</i>	<i>Current consumption during radio TX at 25°C, powered by a battery of 3,6V</i>	<i>Current consumption in sleep mode at 25°C, powered by a battery of 3,6V</i>
BeanDevice® AN-mV	60-61 mA (external sensor power supply not included)	< 40 uA
BeanDevice® AN-420	60-61 mA (external sensor power supply not included)	< 40 uA
BeanDevice® AN-V	60-61 mA (external sensor power supply not included)	< 40 uA



For further information, please read the technical note [TN_RF_002 - Current consumption in active & sleeping mode](#)


The following table gives you a list of recommendations in order to extend the battery autonomy of your BeanDevice®:

Influence factors on battery autonomy	Observations	Recommendations
<i>Sleep power mode on the BeanDevice®</i>	The BeanDevice® can be configured with sleep mode from the BeanScope® interface	By activating sleep power mode on your BeanDevice®, you will dramatically decrease battery autonomy of your BeanDevice®. By activating sleep mode, the BeanDevice® current consumption can decrease from 30 mA to 10-45 micro-amperes. <i>For further information, please read the technical note TN_RF_010 – « BeanDevice® Power Management »</i>
<i>Sampling rate in streaming mode</i>	The higher your sample rate, the higher the RF transmissions are more consistent and your consumption will grow.	Choose the right sampling rate on your BeanScope® interface.
<i>TX Power</i>	More your TX power is important more the current consumption of the BeanDevice® is important	If your wireless range is low, try to use a lower TX Power.
<i>Packet Error Rate (PER)</i>	A high packet error rate can cause a higher retransmission data and this increase the current consumption.	Try to replace your BeanDevice® in an area where the radio link is much better (see Link Quality Indicator value).

11.2 OVER-THE-AIR CONFIGURATION (OTAC) PARAMETERS BACKED UP ON FLASH

The BeanDevice® integrates an internal flash memory used to backup OTAC (Over-the-air configuration) configuring parameter backups and restoration.

This memory is organized into several levels:

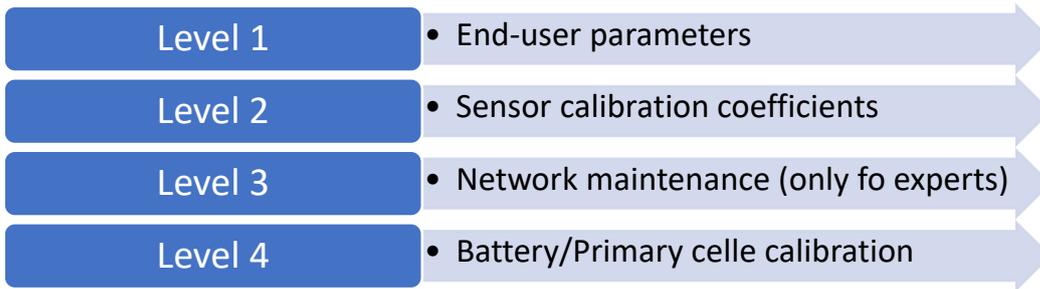

11.2.1 Level 1: End-user OTAC parameters

The following table presents all the default configuration parameters:

To restore these default parameters, you must perform a *Network context deletion*. The “Network” push button is outside the product.

Parameter	BeanDevice® version		
	AN-420	AN-V	AN-mV
Power Mode	Active	Active	Active
Data Acquisition duty cycle	10s	10s	10s
Acquisition duration time	OK	OK	OK
Sampling rate	OK	OK	OK
Data Acquisition mode	LowDutyCycle	LowDutyCycle	LowDutyCycle
TX Power	+18dBm	+18dBm	+18dBm
Alarms Threshold	H1 :20 H2 :20 S2 :4 S1 :4	H1 :10 H2 :10 S2 :0 S1 :0	H1 :20 H2 :20 S2 :0 S1 :0
Pre-process duration time	30 ms	30 ms	30 ms
Sensor polarity	N.A.	Unipolar	Unipolar



Level 2, 3 & 4 of Configuration parameters are not affected by network context deletion (by hardware or software)

11.2.2 Level 2: Sensor calibration parameters

The table below shows the sensor calibration parameters depending on BeanDevice® version:

Parameter	BeanDevice® Version		
	AN-420	AN-V	AN-mV
Sensor gain	OK	OK 2 gains value (unipolar & bipolar)	OK 2 gains value (unipolar & bipolar)
Sensor offset	OK	OK 2 offset value (unipolar & bipolar)	OK 2 offset value (unipolar & bipolar)

11.2.3 Level 3: Network maintenance (only for expert in wireless sensor networks)

The table below shows the sensor calibration parameters depending on *BeanDevice®* version:

Parameter	BeanDevice® Model		
	AN-420	AN-V	AN-mV
Software reset counter	OK	OK	OK
Physical reset counter	OK	OK	OK
Threshold value on software reset	OK	OK	OK

11.2.4 Level 4: Primary cell/Rechargeable battery calibration

The table below shows Primary cell/Rechargeable battery calibration depending on *BeanDevice®* version:

Parameter	BeanDevice® Model		
	AN-420	AN-V	AN-mV
Battery, primary cell ID	OK	OK	OK
Calibration battery/pile	OK	OK	OK

11.3 NETWORK DIAGNOSTIC FROM YOUR BEANSCAPE® SOFTWARE

The BeanScape® provides network diagnostic information which is described in this chapter.

11.3.1 Displaying Network information

1. Launch your BeanScape® application
2. Select your BeanDevice® profile, a new tab "Advanced func." will appear in your BeanScape® toolbar;
3. Click on this tab, and then click on "BeanDevice health status (history)".

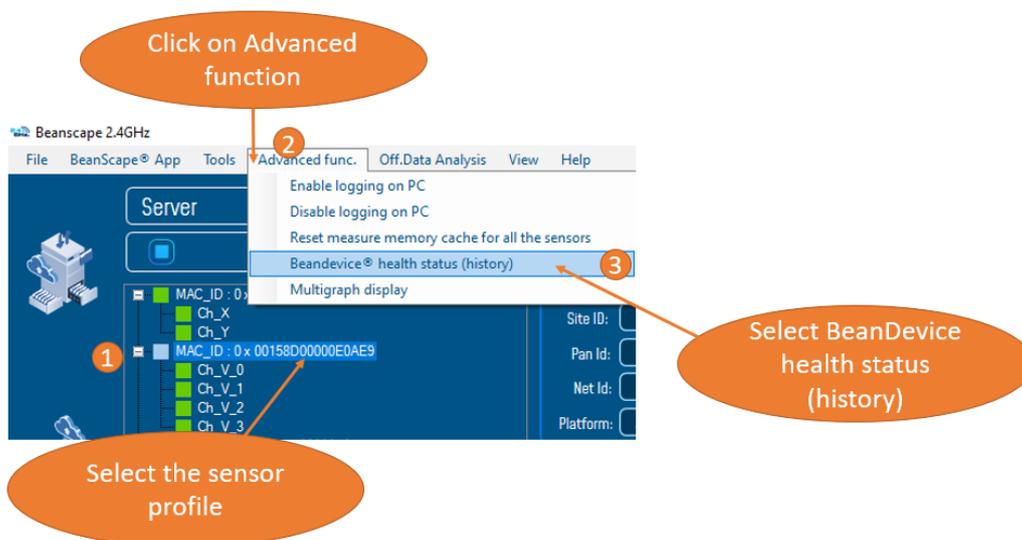


Figure 145: *BeanDevice®* health status option

A new window pop up:

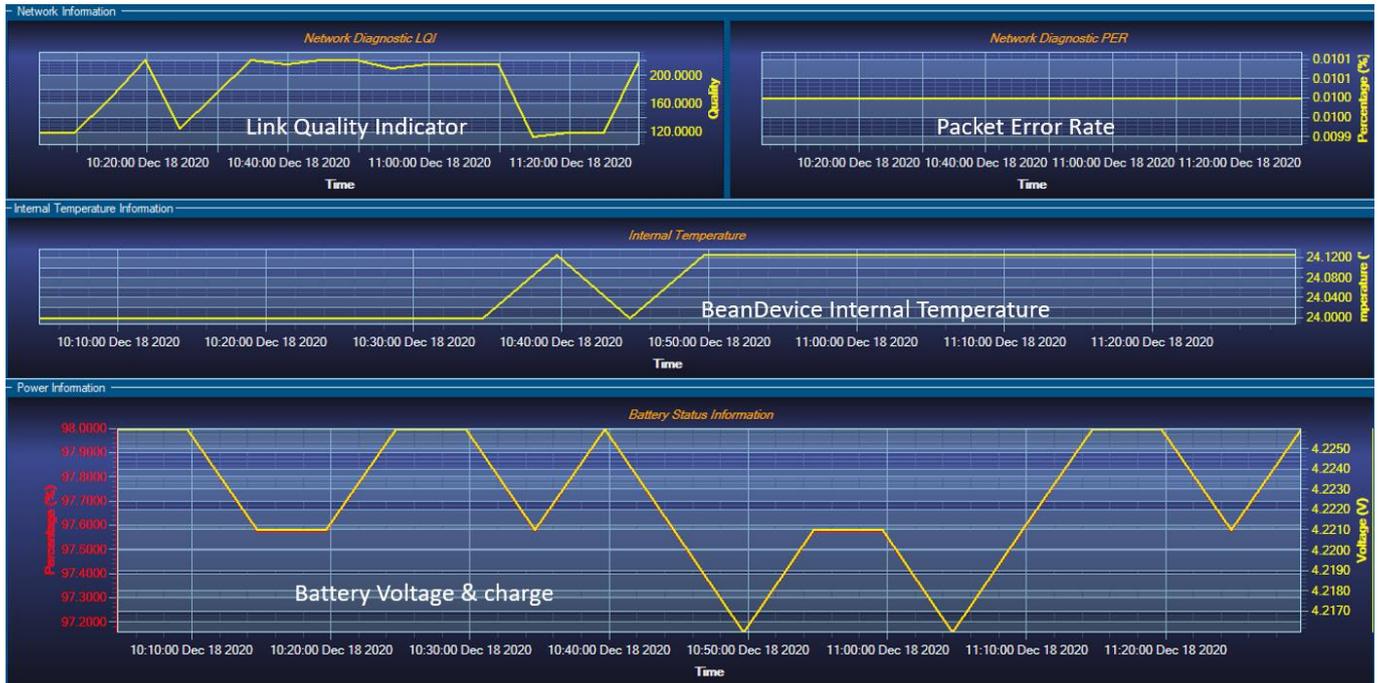


Figure 146: BeanDevice® health status window

11.3.1.1 Packet Error Rate

Packet error rate (PER) is the number packet errors divided by the total number of transferred packets during a studied time interval. PER is a unit less performance measure, often expressed as a percentage number.

PER is only available with IEEE 802.15.4 Network, it represents the ratio of “lost data/data send” between the BeanDevice® and the BeanGateway®.

11.3.1.2 LQI (Link Quality Indicator)

LQI (Link Quality Indicator) represents the radio signal quality in your Environment. It is possible that LQI is low due to EMC interference or metal presence in the environment.

If you encounter such problems, several solutions are proposed to increase your LQI:

- ✓ Try to configure your receiver antenna and your transmitter antenna on the same antenna pattern (cf. the Beam with of your antenna)
- ✓ Use a high gain antenna (in outdoor use only) for a better RF Link Budget
- ✓ Fix your BeanDevice® & BeanGateway® on a top of a mast or a building.



For further information, read the application note on “How to extend your wireless range?”

11.3.1.3 Internal temperature monitoring

An internal temperature sensor is used for onboard & battery temperature monitoring

11.3.1.4 Battery charge monitoring

Battery charge is based on current accumulation. The BeanDevice® integrates a current accumulator circuit which facilitates remaining capacity estimation by tracking the net current flow into and out of the battery. Current flow into the battery increments the current accumulator while current flow out of the battery decrements it.

Voltage measurement corresponds to battery voltage.

11.3.2 Scrolling menu « BeanSensor »

The BeanDevice® Advanced function feature provides access to several options and settings: like the multi-graph mode (display of multiple windows on a graph measuring the same screen), deleting graphs displayed and the activation / deactivation of logging measurements.

To access to the menu list, click on the sensor profile attached to your BeanDevice®. You will then see the BeanDevice® Advanced functions tab.

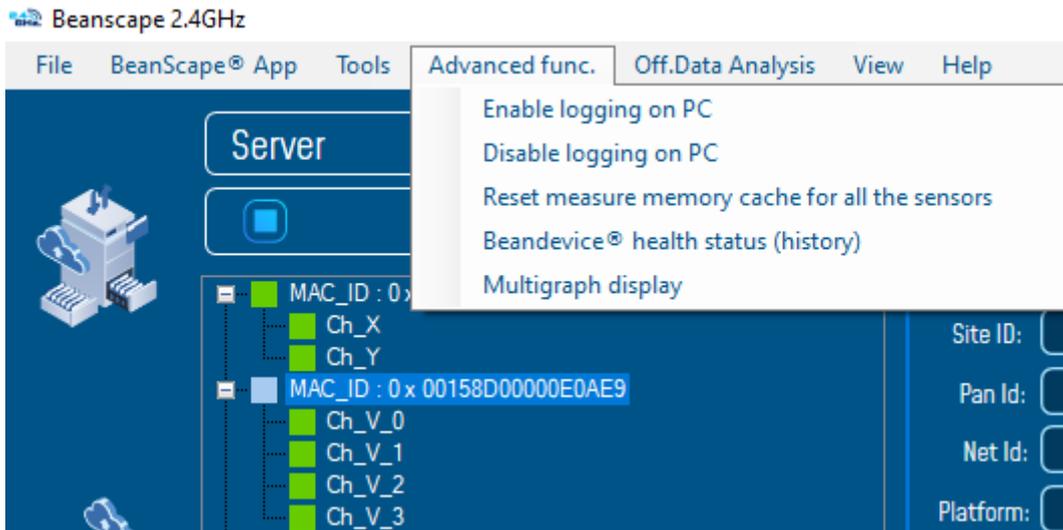


Figure 147: BeanDevice® Advanced functions

By clicking on the scrolling menu « BeanSensor », you can access to the following features:

11.3.2.1 Disable/Enable log

All the data received on the BeanScope® are stored in a log file in CSV format.

This feature allows you to enable / disable data logging on your log file.

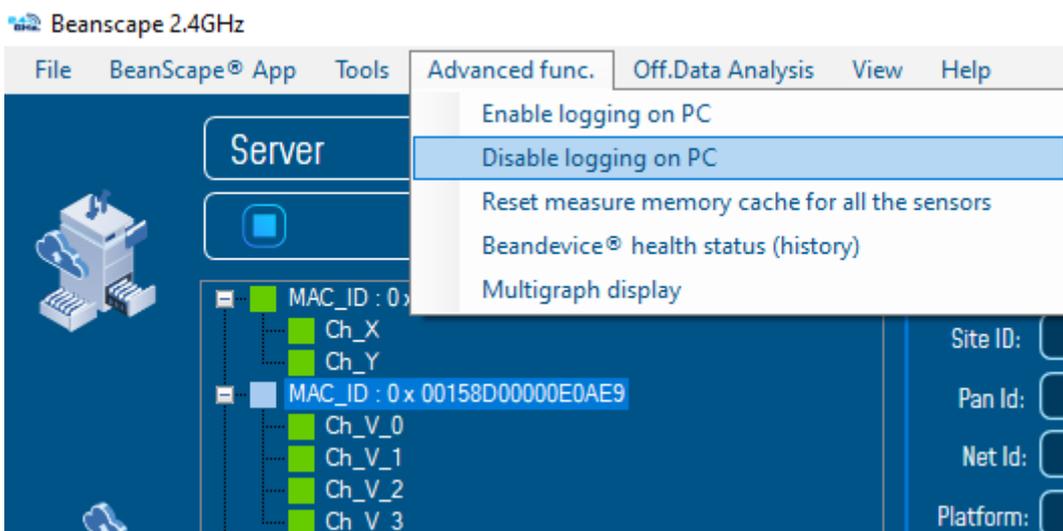


Figure 148: Disable logging on PC

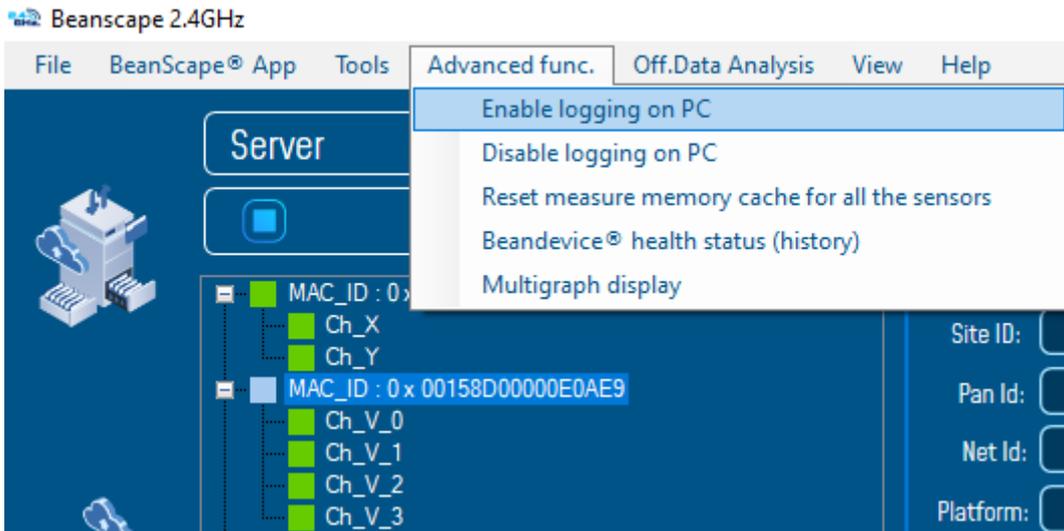


Figure 149: Enable logging on PC



For further information about CSV log file, please read the Beanscape® user manual.

11.3.2.2 Buffer reset

This function clears the graphical display concerning recorded measurements of your sensor. The data stored in a log are not affected by this function.

By clicking on « Buffer reset », a second window appears asking you to confirm your choice:

- Yes, you accept to delete the whole measure data of this BeanSensor;
- No, don't delete the whole measure data of this BeanSensor;

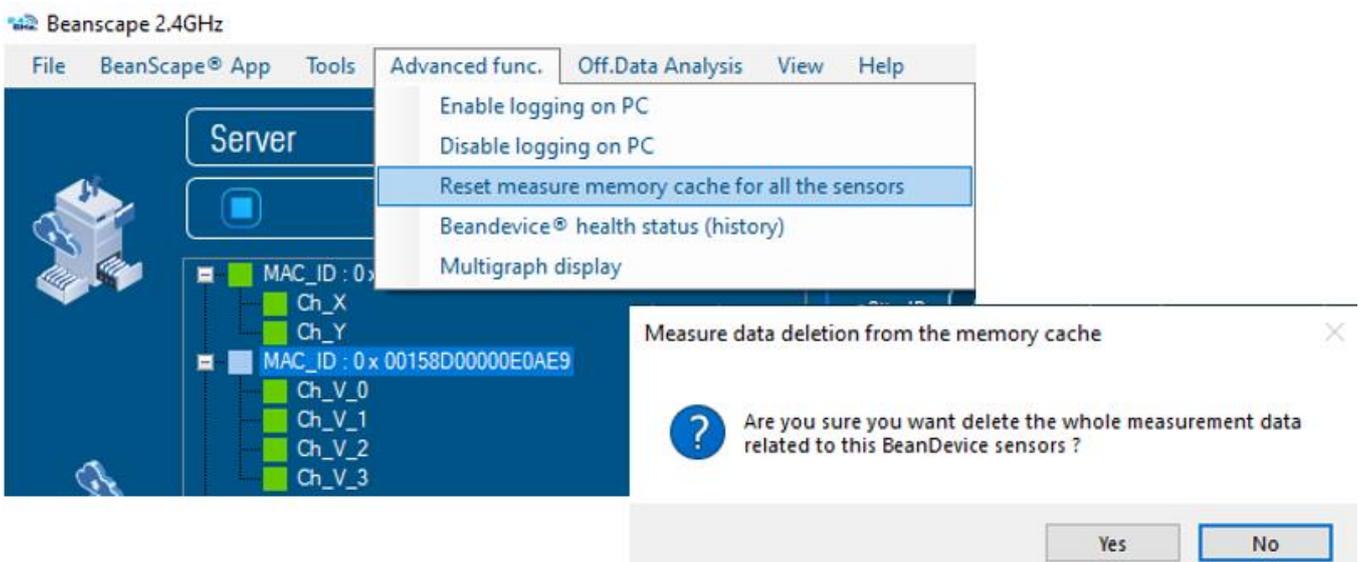


Figure 150: Buffer Reset option

11.3.2.3 Open the graph in a new window

By clicking on “Open the graph in a new window”, you can open a graph corresponding to your sensor.



Figure 151: BeanSensor: Open the graph in a new window

You can easily open several graphs in a window.

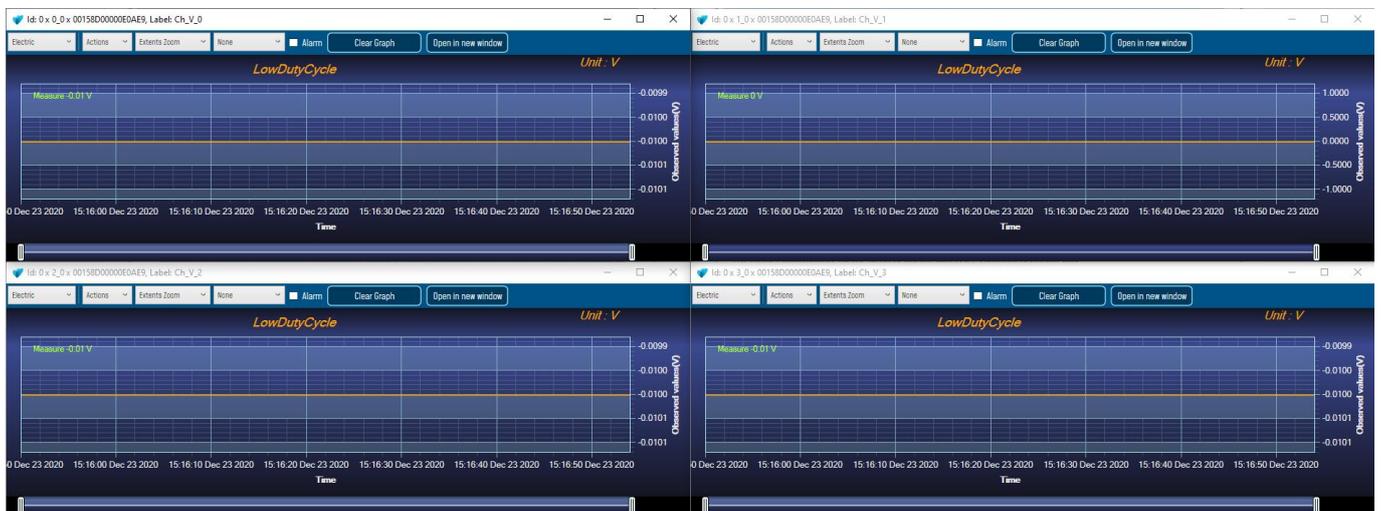


Figure 152: Graphs opened in separated windows



The multi-graph mode requires a lot of resources on your computer, it is recommended to install the BeanScape® software on a powerful computer.

12. TROUBLESHOOTING

■ *Why the Red LED is flashing?*

Each time a packet is lost by the BeanDevice®, Nwk/Activity led will blink in red. Try to decrease the wireless range between the BeanGateway® and the BeanDevice®.

■ *Why the BeanDevice® LEDS are not activated?*

If there is no wireless network activity, the led will be inactive. Make sure you have powered your BeanDevice® with a charged battery.

■ *What should I do if the radio channel is perturbed?*

Please turn off your BeanDevice®, and then choose an appropriate channel. The channel selection is done from the BeanGateway®.

For further information, please Read BeanGateway User's Manual BeanGateway®.

■ *Why the BeanDevice® does not provide the right measurement value?*

- Check if your sensor channel is activated on your BeanScope® interface (ON Position)?;
- Check if your BeanDevice® is powered up;
- Check your LQI quality, if your LQI is under 50-60. You must change your antenna position, or your product position;
- Check your data acquisition mode, maybe you have specified a data acquisition which is too long;
- If you use a BeanDevice® AN-XX :
 - Check your sensor power supply, maybe you need to increase/decrease your power supply;
 - Check your sensor preprocess time. Maybe your sensor preprocess time is too short?
 - Check the wiring code of your sensor plug;

■ *Why the BeanDevice® doesn't respond when I try to configure it (Over-the-air-configuration)?*

- ✓ If your BeanDevice® operates in sleep mode, the RF Hardware is also in sleep mode. Therefore an Over-the-air-configuration will not be possible.
- ✓ Check the LQI (Link Quality Indicator) value, if this value is under 80, the over-the-air configuration will not be easy. Try to decrease the wireless range between the BeanDevice® and the BeanGateway®.
- ✓ If your BeanDevice® works in streaming mode, in order to keep a full synchronization of the data acquisition, any over-the-air-configuration is authorized.

■ *Why do I have too much noise on my sensor signal?*

- ✓ If you use a BeanDevice® AX3D/HI-INC/AX-HD: don't forget to configure the cutoff frequency of your anti-aliasing filter
- ✓ If you use a BeanDevice® AN-mV: use a shielded cable.

13. INSTALLATION PROCEDURES

13.1 SEALING

The product BeanDevice® comes with an IP66 rating. So, do not install the BeanDevice® in a marine environment with high turbulence.

If you use the BeanDevice® AN-XX/TSI/TH, do not install the BeanDevice® up front to prevent the accumulation and infiltration of water from the front of the case.

13.2 COEXISTENCE WITH OTHER FREQUENCIES AT 2.4 GHZ

The BeanDevice® is sensitive to noise 2.4GHz (Wi-Fi as a source for example), but many protections are already in place, particularly in the IEEE 802.15.4®.

It should however be careful when installing the product, check all the possibilities of radio channels on the frequency range 2.4-2.5GHz. The operation of the product will be improved.



For further information, read the application note: [TN RF 011 – “Coexistence of Beanair WSN at 2.4GHz”](#)

13.3 TEMPERATURE & HUMIDITY

The table below shows temperature operating of the different BeanDevice®:

Product Version	Temperature range
<i>BeanDevice® AN-XX</i>	<i>-20 ° C to +75 ° C</i>

BeanDevice® products can operate in an area with 90% humidity.

However, the wireless range can be reduced in the presence of water. Avoid mounting the BeanDevice® in an enclosure surrounded by water, or near bushy plants (plants are composed of 90% water), ...

13.4 REFLECTIONS, OBSTRUCTIONS AND MULTIPATH



For further information, read the application note: [AN RF 007 :“ Beanair WSN Deployment”](#)

13.5 SHOCK & VIBRATION RESISTANCE

Shock resistance on BeanDevice® products are:

<i>BeanDevice® Type</i>	<i>Shock resistance</i>
<i>BeanDevice® AN-XX</i>	10g during 50 ms

Avoid dropping the BeanDevice®. BeanDevice® mechanical mounting on a wall, pole or on a DIN rail must be well performed.

Do not force connections.

13.6 ANTENNA

Check the LQI (Link Quality Indicator) of your BeanDevice® for being sure that your antenna is right oriented.



For further information, read the application note: [AN_RF_007 :“ Beanair WSN Deployment”](#)

14. APPENDIX

14.1 FIREWALL EXCEPTION FOR BEANSCAPE®

By default, firewall blocks all unknown network traffic coming into the network. To permit traffic through the firewall we create exceptions (or rules) that allow certain traffic on the network. In our case the rules are defined by the software which is BeanScape.

Usually when launching BeanScape for the first time your Windows OS will ask you to add an exception and to allow the software to use your network resources, however in case this doesn't occur or rejected, manually adding BeanScape to exceptions list is possible through these following steps:

1. Use your Search bar at the windows launcher and look for “[Allow an app through Windows Firewall](#)”

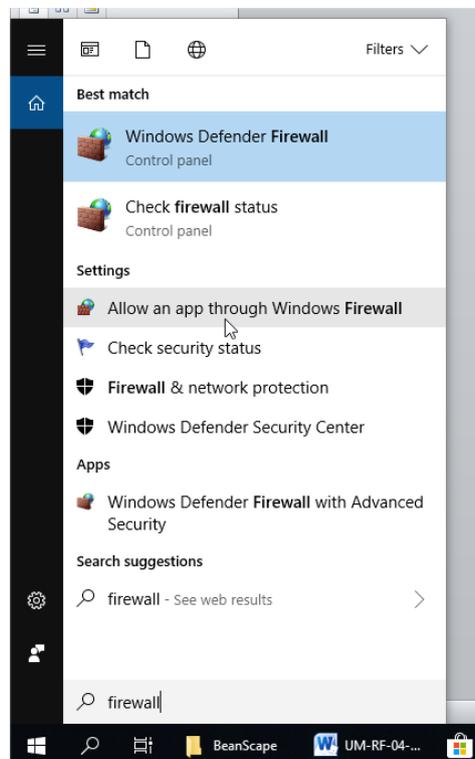


Figure 153 :Windows search for firewall screenshot

2. Look for BeanScape in the list and check its box, check Private if you are only willing to use BeanScape in your LAN or Public for allowing remote access from outside the LAN. Validate and your BeanScape will be allowed in your network.

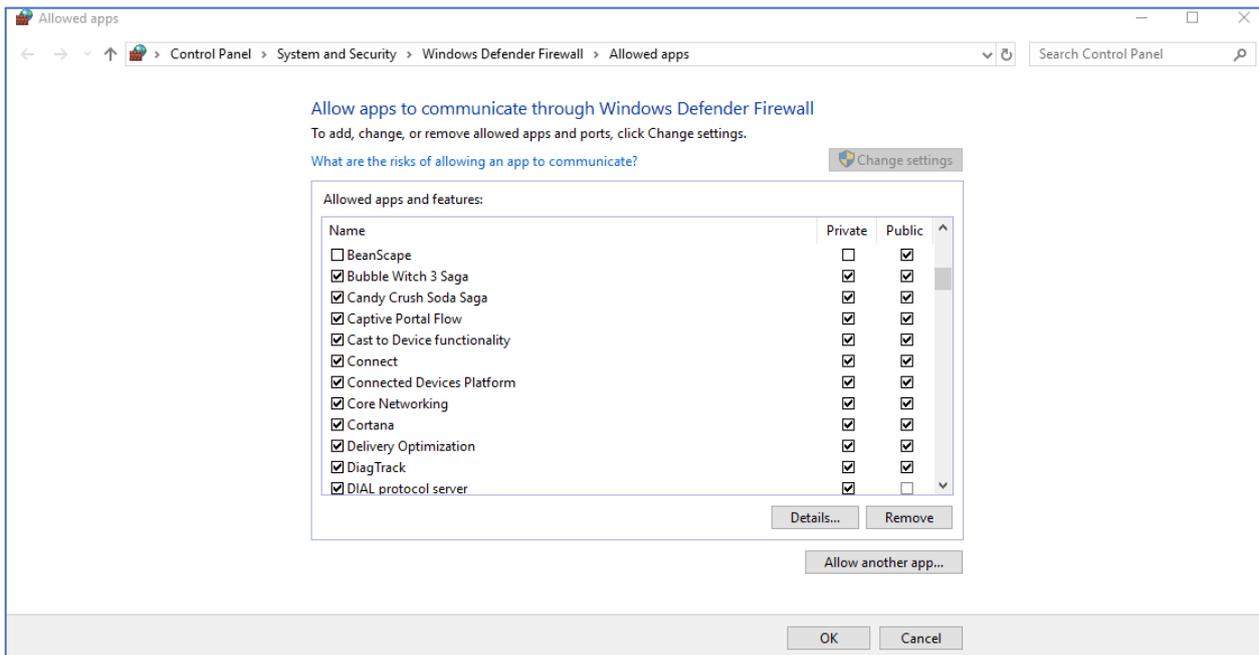


Figure 154: allowed apps window

If you are not familiar to configure a firewall exception, you can directly from BeanScape® add this rule automatically.

On the BeanScape® menu select Tools, then Advanced Settings then click on validate to add BeanScape® to the Firewall.

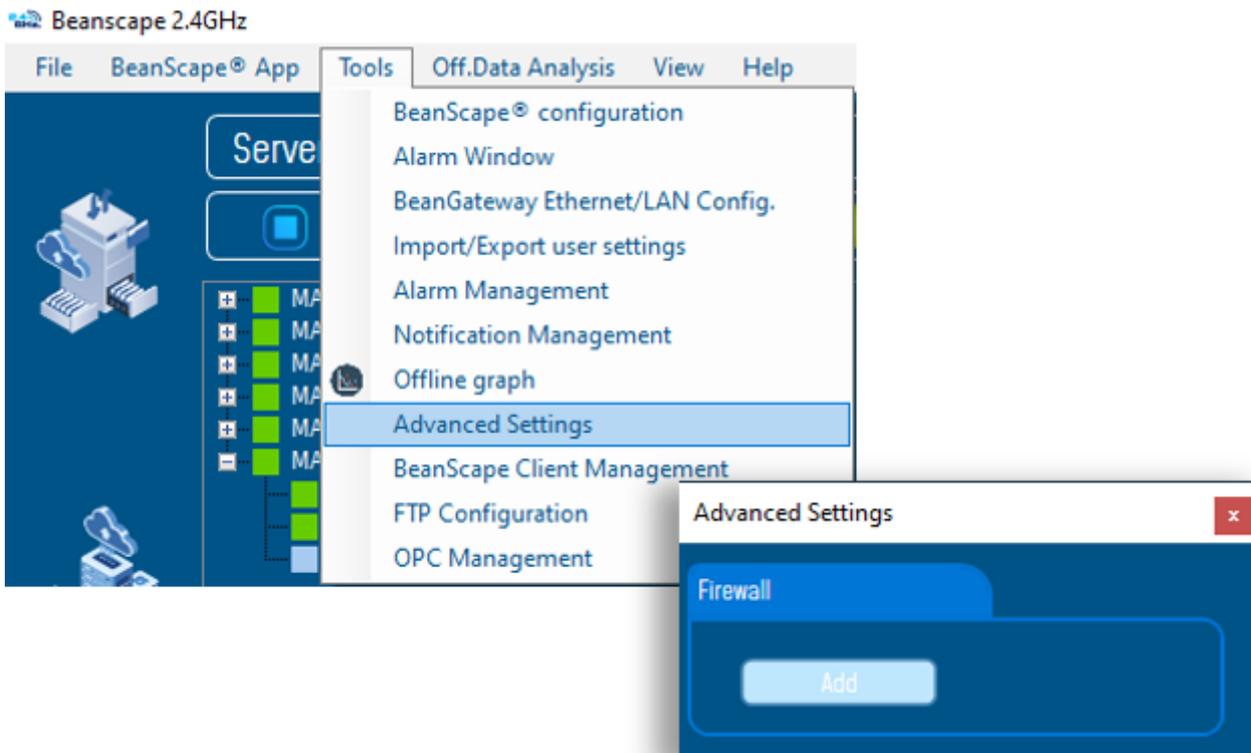


Figure 155: Firewall auto exception